


## 1. AK500 hardware upgrade:

With "Firmware update" entry, with "Read ID" to read out the serial number AK500 and "Save ID", save it as a "TXT" format, and sent to us.

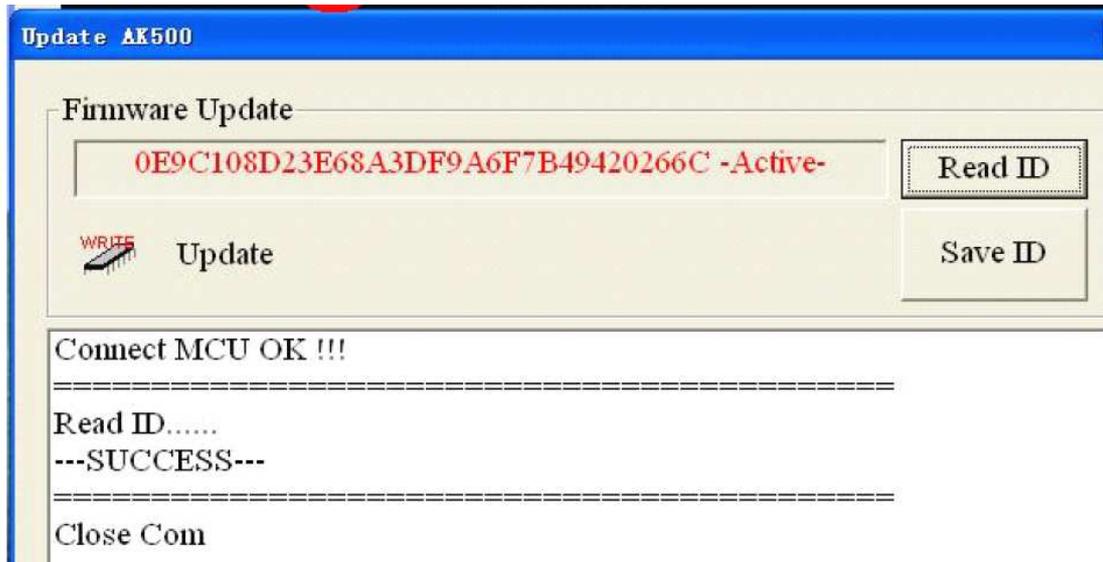

2. Click the "Update", load the .bin file from us to update the firmware.