

Vehicle IMMO		
Brand	Menu	Application
TRUMPCHI	TRUMPCHI\GS5\Immobilizer	Add key,Delete key,Read key count,
	TRUMPCHI\GS5\Smart key	Program smart key,
	TRUMPCHI\GA5\Immobilizer	Add key,Delete key,Read key count,
	TRUMPCHI\GA5\Smart key	Program smart key,
	TRUMPCHI\GA3\Immobilizer	Add key,Delete key,Read key count,
	TRUMPCHI\GA8\Immobilizer	Add key,Delete key,Read key count,
	TRUMPCHI\GS4\Immobilizer	Add key,Delete key,Read key count,
	TRUMPCHI\GA6\Immobilizer	Add key,Delete key,Read key count,
	TRUMPCHI\Extended electric vehicles\Immobilizer	Add key,Delete key,Read key count,
	TRUMPCHI\GA3\Smart key	Program smart key,
	TRUMPCHI\GA6\Smart key	Program smart key,
	TRUMPCHI\GA8\Smart key	Program smart key,
	TRUMPCHI\GS4\Smart key	Program smart key,

	TRUMPCHI\GS8\Smart key	Program smart key,
	TRUMPCHI\GS8\Immobilizer	Add key,Delete key,Read key count,
	TRUMPCHI\GA4\Immobilizer	Add key,Delete key,Read key count,
	TRUMPCHI\GA4\Smart key	Program smart key,
	TRUMPCHI\GS3\Immobilizer	Add key,Delete key,Read key count,
	TRUMPCHI\GS3\Smart key	Program smart key,
	TRUMPCHI\GS7\Smart key	Program smart key,
	TRUMPCHI\GE3\Smart key	Program smart key,
	TRUMPCHI\GM8\Smart key	Program smart key,
	TRUMPCHI\New energy vehicles\Immobilizer	Add key,Delete key,Read key count,
	TRUMPCHI\GA3S(PHEV)\Smart key	Program smart key,
	TRUMPCHI\GS4(PHEV)\Smart key	Program smart key,
VOLVO	VOLVO\S60\Smart key[insert start]	Add key,Lost all key,Read CEM security data,Key recognition & unlocking,
	VOLVO\S80\2009-\Smart key[insert start]	Add key,Lost all key,Read CEM security data,Key recognition & unlocking,

VOLVO\XC60\2009-\Smart key[insert start]	Add key,Lost all key,Read CEM security data,Key recognition & unlocking,
VOLVO\S80\2009\Smart key[insert start]	Add key,Delete key,Read CEM security data,Key recognition & unlocking,
VOLVO\V40\Smart key[insert start]	Add key,Delete key,Read CEM security data,Key recognition & unlocking,
VOLVO\V60\Smart key[insert start]	Add key,Lost all key,Read CEM security data,Key recognition & unlocking,
VOLVO\XC60\2009\Smart key[insert start]	Add key,Delete key,Read CEM security data,Key recognition & unlocking,
VOLVO\V70\2009-\Smart key[insert start]	Add key,Lost all key,Read CEM security data,Key recognition & unlocking,
VOLVO\XC70\2011-\Smart key[insert start]	Add key,Lost all key,Read CEM security data,Key recognition & unlocking,

VOLVO\XC70\2007-2010\Smart key[insert start]	Add key,Delete key,Read CEM security data,Key recognition & unlocking,
VOLVO\S60\Keyless-go[button start]	Add smart key,Delete smart key,Read CEM security data,Read KVM security data,Key recognition & unlocking,Module identification,
VOLVO\S80\2009-\Keyless-go[button start]	Add smart key,Delete smart key,Read CEM security data,Read KVM security data,Key recognition & unlocking,Module identification,
VOLVO\XC60\2009-\Keyless-go[button start]	Add smart key,Delete smart key,Read CEM security data,Read KVM security data,Key recognition & unlocking,Module identification,
VOLVO\S40\Smart key	Add smart key,Delete smart key,Unlock key,
VOLVO\S40\Immobilizer	Add key,Delete key,Identify key ID,Unlock key,
VOLVO\C30\Immobilizer	Add key,Delete key,Identify key ID,Unlock key,

VOLVO\C30\Smart key	Add smart key,Delete smart key,Unlock key,
VOLVO\V40\Keyless-go[button start]	Add smart key,Delete smart key,Read CEM security data,Read KVM security data,Key recognition & unlocking,Module identification,
VOLVO\S80\2009\Keyless-go[button start]	Add smart key,Delete smart key,Read CEM security data,Read KVM security data,Key recognition & unlocking,Module identification,
VOLVO\V60\Keyless-go[button start]	Add smart key,Delete smart key,Read CEM security data,Read KVM security data,Key recognition & unlocking,Module identification,
VOLVO\XC60\2009\Keyless-go[button start]	Add smart key,Delete smart key,Read CEM security data,Read KVM security data,Key recognition & unlocking,Module identification,
VOLVO\XC90\Flip key	Add key,Delete key,Identify key ID,Key unlock,
VOLVO\S80\2007\Flip key	Add key,Delete key,Identify key ID,Key unlock,

	VOLVO\C70\Immobilizer	Add key,Delete key,Identify key ID,Unlock key,
	VOLVO\C70\Smart key	Add smart key,Delete smart key,Unlock key,
	VOLVO\V70\2009-\Keyless-go[button start]	Add smart key,Delete smart key,Read CEM security data,Read KVM security data,Key recognition & unlocking,Module identification,
	VOLVO\XC70\2011-\Keyless-go[button start]	Add smart key,Delete smart key,Read CEM security data,Read KVM security data,Key recognition & unlocking,Module identification,
	VOLVO\XC70\2007-2010\Keyless-go[bu tton start]	Add smart key,Delete smart key,Read CEM security data,Read KVM security data,Key recognition & unlocking,Module identification,
	VOLVO\XC70\2006\Flip key	Add key,Delete key,Identify key ID,Key unlock,
SSANG	SSANG YONG>Select from type\Immobilizer\Type 1	Program key,Delete key,
YONG	SSANG YONG>Select from type\Remote\Type 1	Program remote,

SSANG YONG>Select from type\Immobilizer\Type 2	Program key,
SSANG YONG>Select from vehicle\Actyon\XDi system	Program key,Delete key,
SSANG YONG>Select from vehicle\Chairman\XDi system	Program key,Delete key,
SSANG YONG>Select from vehicle\Korando\XDi system	Program key,Delete key,
SSANG YONG>Select from vehicle\Kyron\XDi system	Program key,Delete key,
SSANG YONG>Select from vehicle\Musso\XDi system	Program key,Delete key,
SSANG YONG>Select from vehicle\Rexton\XDi system	Program key,Delete key,
SSANG YONG>Select from vehicle\Stavic Rodus\XDi system	Program key,Delete key,
SSANG YONG>Select from vehicle\Rodius\XDi system	Program key,Delete key,
SSANG YONG>Select from vehicle\Rexton2\XDi system	Program key,Delete key,
SSANG YONG>Select from vehicle\Rexton3\XDi system	Program key,Delete key,

SSANG YONG>Select from type\Immobilizer\Type 3	Program key,
SSANG YONG>Select from vehicle\Actyon\Petrol	Program key,
SSANG YONG>Select from vehicle\Actyon\Diesel	Program key,
SSANG YONG>Select from vehicle\Chairman\Petrol	Program key,
SSANG YONG>Select from vehicle\Chairman\Diesel	Program key,
SSANG YONG>Select from vehicle\Korando\Petrol	Program key,
SSANG YONG>Select from vehicle\Korando\Diesel	Program key,
SSANG YONG>Select from vehicle\Kyron\Petrol	Program key,
SSANG YONG>Select from vehicle\Kyron\Diesel	Program key,
SSANG YONG>Select from vehicle\Musso\Petrol	Program key,
SSANG YONG>Select from vehicle\Musso\Diesel	Program key,



SSANG YONG>Select from vehicle\Rexton\Petrol	Program key,
SSANG YONG>Select from vehicle\Rexton\Diesel	Program key,
SSANG YONG>Select from vehicle\Stavic Rodus\Petrol	Program key,
SSANG YONG>Select from vehicle\Stavic Rodus\Diesel	Program key,
SSANG YONG>Select from vehicle\Rodius\Petrol	Program key,
SSANG YONG>Select from vehicle\Rodius\Diesel	Program key,
SSANG YONG>Select from vehicle\Rexton2\Petrol	Program key,
SSANG YONG>Select from vehicle\Rexton2\Diesel	Program key,
SSANG YONG>Select from vehicle\Rexton3\Petrol	Program key,
SSANG YONG>Select from vehicle\Rexton3\Diesel	Program key,
SSANG YONG>Select from type\Remote\Type 2	Program remote,

CITROEN	CITROEN>Select from vehicle\C4\Immobilizer\Type 1	Program key,
	CITROEN>Select from vehicle\TRIOMPHE\Immobilizer	Program key,
	CITROEN>Select from vehicle\C5 ( China ) \Immobilizer	Program key,
	CITROEN>Select from vehicle\QUATRE\Immobilizer	Program key,
	CITROEN>Select from vehicle\C4L\Immobilizer	Program key,
	CITROEN>Select from vehicle\C4L\Smart key	All smart key lost,
	CITROEN>Select from vehicle\C3-XR\Smart key	All smart key lost,
	CITROEN>Select from type\Immobilizer\Type 1	Program key,
	CITROEN>Select from type\Smart key\Type 1	All smart key lost,
	CITROEN>Select from type\Immobilizer\Type 3	Program key,
	CITROEN>Select from type\Immobilizer\Type 2	Program key,

CITROEN>Select from vehicle\Berlingo\Immobilizer\Type 2	Program key,
CITROEN>Select from vehicle\C1\Immobilizer	Program key,
CITROEN>Select from vehicle\C2\Immobilizer\Type 1(K)	Program key,
CITROEN>Select from vehicle\C3\Immobilizer\Type 1(K)	Program key,
CITROEN>Select from vehicle\C5\Immobilizer\Type 2	Program key,
CITROEN>Select from vehicle\C8\Immobilizer\Type 1(K)	Program key,
CITROEN>Select from vehicle\Dispatch\Immobilizer\Type 2	Program key,
CITROEN>Select from vehicle\Jumpy\Immobilizer\Type 2	Program key,
CITROEN>Select from vehicle\Nemo\Immobilizer\Type 1(K)	Program key,
CITROEN>Select from vehicle\PICASSO\Immobilizer	Program key,
CITROEN>Select from vehicle\Relay\Immobilizer	Program key,

CITROEN>Select from vehicle\Relay2\Immobilizer	Program key,
CITROEN>Select from vehicle\Synergie\Immobilizer\Type 2	Program key,
CITROEN>Select from vehicle\XSARA(China)\Immobilizer	Program key,
CITROEN>Select from vehicle\XSARA\Immobilizer\Type 2	Program key,
CITROEN>Select from vehicle\Xantia\Immobilizer\Type 2	Program key,
CITROEN>Select from vehicle\Berlingo\Immobilizer\Type 3	Program key,
CITROEN>Select from vehicle\C2\Immobilizer\Type 2(CAN)	Program key,
CITROEN>Select from vehicle\C3\Immobilizer\Type 2(CAN)	Program key,
CITROEN>Select from vehicle\C5\Immobilizer\Type 3	Program key,
CITROEN>Select from vehicle\C6\Immobilizer	Program key,
CITROEN>Select from vehicle\C8\Immobilizer\Type 2(CAN)	Program key,

CITROEN\Select from vehicle\Dispatch\Immobilizer\Type 3	Program key,
CITROEN\Select from vehicle\Evasion\Immobilizer\Type 3	Program key,
CITROEN\Select from vehicle\Jumpy\Immobilizer\Type 3	Program key,
CITROEN\Select from vehicle\Nemo\Immobilizer\Type 2(CAN)	Program key,
CITROEN\Select from vehicle\Relay3\Immobilizer	Program key,
CITROEN\Select from vehicle\Synergie\Immobilizer\Type 3	Program key,
CITROEN\Select from vehicle\XSARA\Immobilizer\Type 3	Program key,
CITROEN\Select from vehicle\Xantia\Immobilizer\Type 3	Program key,
CITROEN\Select from vehicle\C3-XR\Immobilizer	Program key,
CITROEN\Select from vehicle\C6(China)\2016-\Immobilizer	Program key,
CITROEN\Select from vehicle\ELYSEE\2012-\Immobilizer	Program key,

CITROEN\Select from vehicle\C4\Smart key	All smart key lost,
CITROEN\Select from vehicle\C6(China)\2016-\Smart key	All smart key lost,
CITROEN\Select from vehicle\C-Crosser\Petrol\Smart key	All smart key lost,
CITROEN\Select from type\Immobilizer\Type 4	Read key/remote count,Immobilization,Program remote,
CITROEN\Select from vehicle\C-Crosser\Petrol\Immobilizer	Read key/remote count,Immobilization,Program remote,
CITROEN\Select from vehicle\C-Crosser\Diesel\Immobilizer	Read key/remote count,Immobilization,Program remote,
CITROEN\Select from vehicle\C4\Immobilizer\Type 2	Program key,
CITROEN\Select from type\Replace engine ECU\M745	Replace engine ECU,
CITROEN\Read pin code	Type 1,Type 2,Type 3,Type 4 (K line),

FORD	FORD\China\New Mondeo\2017\Immobilizer	Add key,All key lost,
	FORD\China\New Mondeo\2017\Smart key	Add smart key,All smart key lost,
	FORD\China\ Escort\2017\Immobilizer	Add key,All key lost,
	FORD\China\Edge\2015-2017\Smart key	Add smart key,All smart key lost,
	FORD\China\Mustang\Smart key	Add smart key,All smart key lost,
	FORD\China\Escape\2005-2007\Immobi lizer	All key lost,Add key,Read key count,
	FORD\China\ Raptor F350\Immobilizer	Delete key,Add key,Read key count,
	FORD\China\Transit\2000-2013\Immobili zer	Add key,Delete key,All key lost,
	FORD\China\Mondeo CHIA-X\Smart key\Smart key	Smart key all lost,Add smart key,
	FORD\China\Mondeo CHIA-X\IMMO\Type 2\Immobilizer	Add key,Delete key,All key lost,
	FORD\China\Mondeo CHIA-X\IMMO\Type 1\Immobilizer	Add key,Delete key,All key lost,
	FORD\China\Focus\Classic Focus\Type 1\Immobilizer	Add key,All key lost,

FORD\China\Focus\New Focus\2011-2013\Immobilizer	Add key,Delete key,All key lost,
FORD\China\Kuga\2015\Immobilizer	Add key,Delete key,All key lost,
FORD\China\Ecosport\Immobilizer	Add key,Delete key,All key lost,
FORD\China\Fiesta\IMMO\2013\Immobilizer	Add key,Delete key,
FORD\China\Focus\Classic Focus\Type 2\Immobilizer	Add key,Delete key,All key lost,
FORD\China\Mondeo\Immobilizer	All key lost,Read key count,
FORD\China\Ecosport\Smart key	All smart key lost,Add smart key,
FORD\China\Fiesta\Smart key\Smart key	All smart key lost,Add smart key,
FORD\China\Focus\New Focus\2014-\Immobilizer	Add key,Delete key,All key lost,
FORD\China\Explorer\2011-\Immobilizer	Delete key,Add key,Read key count,
FORD\China\Classic Focus\Type 2\Immobilizer	Add key,Delete key,All key lost,
FORD\China\Kuga\2015\Smart key	Add key,Delete key,All key lost,Add smart key,Delete smart key,
FORD\China\Kuga\2016-\Smart key	Add smart key,All smart key lost,



FORD\China\Edge\2015\Smart key	Erase smart key,Add smart key,Read smart key count,
FORD\China\ Raptor F150\2011-2014\Immobilizer	Delete key,Add key,Read key count,
FORD\China\ Raptor F150\2009-2010\Immobilizer	Add key,Delete key,Read key count,Synch PCM-PATS,
FORD\China\ Raptor F250\2009-2010\Immobilizer	Add key,Delete key,Read key count,Synch PCM-PATS,
FORD\China\Everest\Smart key	Add smart key,All smart key lost,
FORD\China\Classic Focus\Type 1\Immobilizer	Add key,All key lost,
FORD\China\Explorer\2015-\Smart key	Add smart key,All smart key lost,
FORD\China\Taurus\2015-2016\Smart key	Add smart key,All smart key lost,
FORD\China\Everest\Immobilizer	Add key,All key lost,
FORD\China\S-MAX\IMMO\Type 2\Immobilizer	Add key,Delete key,All key lost,
FORD\China\S-MAX\IMMO\Type 1\Immobilizer	Add key,Delete key,All key lost,
FORD\China\Focus\New Focus\2011-2013\Smart key	Add key,Delete key,All key lost,Add smart key,Delete smart key,

FORD\China\Fiesta\IMMO\2013-\Immobilizer	Add key,Delete key,All key lost,
FORD\China\New Mondeo\2017\Smart key	Add smart key,Delete smart key,
FORD\China\Taurus\2017\Smart key	Add smart key,Delete smart key,
FORD\China\Ranger\2007-2010\Immobilizer	Read key numbers,Add key,All key lost,
FORD\China\Ranger\2015\Immobilizer	Add key,Delete key,All key lost,Read key numbers,ECU immobilization,
FORD\China\Ranger\2017\Immobilizer	Read key count,Add key,All key lost,
FORD\China\Escape\2008-2009\Immobilizer	Read key numbers,Add key,All key lost,
FORD\China\ Raptor F150\2015-\Smart key	Add smart key,All smart key lost,
FORD\China\ Raptor F250\2015-\Smart key	Add smart key,All smart key lost,
FORD\China\C-MAX\Smart key	Add key,Delete key,All key lost,Add smart key,Delete smart key,

	FORD\China\Focus\New Focus\2014-\Smart key	Add smart key,All smart key lost,
	FORD\China\Remote	Remote,Delete remote,
	FORD\China\Edge\-\2015\Immobilizer	Delete key,Add key,Read key count,
	FORD\China\Edge\2017-\Smart key	Add smart key,Delete smart key,
	FORD\China\ Escort\2017\Immobilizer	Add key,Delete key,
	FORD\China\ Raptor F150\2015-\Immobilizer	Add key,All key lost,
	FORD\China\Transit\2013-2017\Immobilizer	Add key,Delete key,All key lost,
	FORD\China\Fusion\2006-2009\Immobilizer	Program key,Delete key,Key count,
	FORD\China\Mustang\Immobilizer\2011- 2014	Program key,All key lost,Key count,
PEUGEOT	PEUGEOT>Select from vehicle\308\Immobilizer\Type 1	Program key,
	PEUGEOT>Select from vehicle\3008\Immobilizer	Program key,
	PEUGEOT>Select from vehicle\307\Immobilizer\Type 2(CAN)	Program key,

PEUGEOT>Select from vehicle\308S\Immobilizer	Program key,
PEUGEOT>Select from vehicle\4007\Petrol\Smart key	All smart key lost,
PEUGEOT>Select from type\Immobilizer\Type 1	Program key,
PEUGEOT>Select from vehicle\207\Immobilizer\Type 1(K)	Program key,
PEUGEOT>Select from vehicle\307\Immobilizer\Type 1(K)	Program key,
PEUGEOT>Select from vehicle\508\Smart key	All smart key lost,
PEUGEOT>Select from vehicle\508\Immobilizer	Program key,
PEUGEOT>Select from vehicle\408\408(T73)\Immobilizer	Program key,
PEUGEOT>Select from vehicle\408\408(T93)\Immobilizer	Program key,
PEUGEOT>Select from type\Smart key\Type 1	All smart key lost,
PEUGEOT>Select from type\Immobilizer\Type 3	Program key,

PEUGEOT>Select from type\Immobilizer\Type 2	Program key,
PEUGEOT>Select from vehicle\1007\Immobilizer\Type 1(K)	Program key,
PEUGEOT>Select from vehicle\206\Immobilizer	Program key,
PEUGEOT>Select from vehicle\406(VF38)\Immobilizer	Program key,
PEUGEOT>Select from vehicle\607\Immobilizer\Type 1(K)	Program key,
PEUGEOT>Select from vehicle\807\Immobilizer\Type 1(K)	Program key,
PEUGEOT>Select from vehicle\Partner\Immobilizer\Type 1(K)	Program key,
PEUGEOT>Select from vehicle\1007\Immobilizer\Type 2(CAN)	Program key,
PEUGEOT>Select from vehicle\207\Immobilizer\Type 2(CAN)	Program key,
PEUGEOT>Select from vehicle\207CC\Immobilizer	Program key,
PEUGEOT>Select from vehicle\407\Immobilizer	Program key,

PEUGEOT>Select from vehicle\5008\Immobilizer	Program key,
PEUGEOT>Select from vehicle\607\Immobilizer\Type 2(CAN)	Program key,
PEUGEOT>Select from vehicle\807\Immobilizer\Type 2(CAN)	Program key,
PEUGEOT>Select from vehicle\Expert\2007-\Immobilizer	Program key,
PEUGEOT>Select from vehicle\Partner\Immobilizer\Type 2(CAN)	Program key,
PEUGEOT>Select from vehicle\Rcz\Immobilizer	Program key,
PEUGEOT>Select from vehicle\208\Immobilizer	Program key,
PEUGEOT>Select from vehicle\2008\Immobilizer	Program key,
PEUGEOT>Select from vehicle\301\Immobilizer	Program key,
PEUGEOT>Select from type\Immobilizer\Type 4	Read key/remote count,Immobilization,Program remote,

PEUGEOT>Select from vehicle\4007\Petro\Immobilizer	Read key/remote count,Immobilization,Program remote,
PEUGEOT>Select from vehicle\4007\Diese\Immobilizer	Read key/remote count,Immobilization,Program remote,
PEUGEOT>Select from vehicle\3008\Smart key	All smart key lost,
PEUGEOT>Select from vehicle\4008\Smart key	All smart key lost,
PEUGEOT>Select from vehicle\5008\Smart key	All smart key lost,
PEUGEOT>Select from vehicle\4008\Immobilizer	Program key,
PEUGEOT>Select from vehicle\1007\Immobilizer\Type 3	Add key,Delete key,Reset Immo ECU,Engine ECU programming,
PEUGEOT>Select from vehicle\4008(China)\Smart key	All smart key lost,
PEUGEOT>Select from vehicle\4008(China)\Immobilizer	Program key,
PEUGEOT>Select from vehicle\308\Immobilizer\Type 2	Program key,

	PEUGEOT>Select from type\Replace engine ECUM745	Replace engine ECU,
	PEUGEOT\Read pin code	Type 1,Type 2,Type 3,Type 4 (K line),
LAND ROVER	LAND ROVER>Select from vehicle\Range Rover\Smart key\Smart key	Add smart key,All smart key lost,
	LAND ROVER>Select from vehicle\Freelander2\Smart key\2012	Program old smart key,Read VIN code,Program new smart key,Clear fault code,Read key count,
	LAND ROVER>Select from vehicle\Freelander\Remote\2003-2005	Program remote,
	LAND ROVER>Select from vehicle\Discovery4\Smart key	Add smart key,All smart key lost,
	LAND ROVER>Select from vehicle\Evoque\Smart key	Add smart key,All smart key lost,
	LAND ROVER>Select from vehicle\Freelander2\Smart key\2013-	Add smart key,All smart key lost,
	LAND ROVER>Select from vehicle\Freelander 2\Immobilizer\2006-2012	Add old key,Add new key,Reset engine immo box,



LAND ROVER\Select from vehicle\ Freelander\Smart key	Program old smart key,Read VIN code,Program new smart key,Clear fault code,Read key count,
LAND ROVER\Select from vehicle\ Freelander\Remote	Program remote,
LAND ROVER\Select from vehicle\Defender\Remote\2010-2014	Program remote,
LAND ROVER\Select from type\Immobilizer\Type 1	Add old key,Add new key,Reset engine immo box,
LAND ROVER\Select from type\Smart key\Type 1	Program old smart key,Read VIN code,Program new smart key,Clear fault code,Read key count,
LAND ROVER\Select from type\Smart key\Type 2	Add smart key,All smart key lost,
LAND ROVER\Select from type\Remote\Type 1	Program remote,
LAND ROVER\Select from vehicle\Discovery 3\Immobilizer	Program key,Read VIN code,
LAND ROVER\Select from vehicle\Evoque\Immobilizer\Type 1	Program key,Read VIN code,

	LAND ROVER\Select from vehicle\Evoque\Immobilizer\Type 2	Immobilizer,
	LAND ROVER\Select from type\Immobilizer\Type 2	Program key,Read VIN code,
	LAND ROVER\Select from type\Immobilizer\Type 3	Immobilizer,
	LAND ROVER\Select from vehicle\New LandRover(2015-)\Smart key\Type 1(FK72)	Add smart key,
	LAND ROVER\Select from vehicle\New LandRover(2015-)\Smart key\Type 2(HPLA)	Add smart key,
	LAND ROVER\Select from vehicle\New LandRover(2015-)\Smart key\Type 3(write to working key)	Write a workable key,Read key ID,
MAZDA	MAZDA\Axela\2016\Smart key	Add smark key,All smart key lost,Switch ignition on,
	MAZDA\Atenza\2013-\Smart key	Add smark key,All smart key lost,Switch ignition on,
	MAZDA\CX-5\2016\Smart key	Add smark key,All smart key lost,Switch ignition on,

MAZDA\M6\Immobilizer	Add key,All key lost,Valid backup key setting,Invalid backup key setting,
MAZDA\M6\Smart key	Add smart key,Delete smart key,
MAZDA\M3\Immobilizer\Type 1	Add key,Read key count,All key lost,
MAZDA\M2\Type 1\Immobilizer	Add key,All key lost,
MAZDA\ New M6\Immobilizer	All key lost,
MAZDA\ New M6\Smart key	Delete & program smart key,Lost all key/smart key,Steering lock program setting,
MAZDA\M3\Immobilizer\Type 2	Add key,All key lost,
MAZDA\M5\Immobilizer\Type 2	Add key,All key lost,
MAZDA\M8\Smart key	Add key,All key lost,Add smart key,Lost all smart key,
MAZDA\M5\Immobilizer\Type 1	Add key,All key lost,Read key count,
MAZDA\M3\Smart key\Type 1	Add smart key,All smart key lost,Switch ignition on,
MAZDA\M8\Immobilizer	Add key,All key lost,Setup spare key valid,Setup spare key invalid,

MAZDA\CX-7\Immobilizer	Add key,All key lost,Setup spare key valid,Setup spare key invalid,
MAZDA\CX-7\Smart key	Add key,All key lost,Add smart key,Lost all smart key,
MAZDA\CX-3\2017\Smart key	Add smart key,All smart key lost,Switch ignition on,
MAZDA\CX-4\2016\Smart key	Add smart key,All smart key lost,Switch ignition on,
MAZDA\M2\Type 2(2014-)\Smart key	Add smart key,All smart key lost,Switch ignition on,
MAZDA\CX-9\Immobilizer\2004-2009	Add key,Read key count,All key lost,
MAZDA\CX-9\Immobilizer\2009-	Add key,All key lost,
MAZDA\MX-5\2004-2009\Immobilizer	Add key,Read key count,All key lost,
MAZDA\CX-9\With smart	Keys count,Add key,All key lost,Remotes count,Program remote,Delete remote,
MAZDA\BT50\2012-\Immobilizer	Add key,Erase key,All key lost,
MAZDA\New CX-7\Smart key	All smart key lost,Add smart key,Switch ignition on,

MAZDA\M2\Type 1\Smart key	Add key,Clear key,Add remote,Delete remote,Key number,Switch ignition on,
MAZDA\DEMIO\2014-\Smart key	Add smark key,All smart key lost,Switch ignition on,
MAZDA\Axela\2017\Smart key	Add smart key,All smart key lost,Switch ignition on,
MAZDA\CX-4\2017\Smart key	Add smart key,All smart key lost,Switch ignition on,
MAZDA\B series\2007-\Immobilizer	Key count,Add key,All key lost,
MAZDA\MX-5\2009-2016\Immobilizer	Keys count,Add key,All key lost,
MAZDA\New CX-9\Smart key	All smart key lost,Add smart key,Switch ignition on,
MAZDA\CX-5\2017\Smart key	Add smart key,All smart key lost,Switch ignition on,
MAZDA\M121\Immobilizer	Key number,Delete key,Add key,
MAZDA\Atenza\2018-\Smart key	Add smart key,All smart key lost,Switch ignition on,
MAZDA\DEMIO\-\2001\Immobilizer	Key number,Delete key,Add key,
MAZDA\DEMIO\2002-2007\Immobilizer	Key number,Delete key,Add key,

MAZDA\DEMIO\2008-2013\Smart key	Add key,Clear key,Add remote,Delete remote,Key number,
MAZDA\DEMIO\2008-2013\Immobilizer	Key number,Delete key,Add key,
MAZDA\MX-5\2017-\Smart key	Add smart key,All smart key lost,Switch ignition on,
MAZDA\MX-5 MIATA\2005-2013\Immobilizer	Key number,Delete key,Add key,
MAZDA\PREMACY\2005\Smart key	Key number,Delete key,Add key,
MAZDA\RX-8\2004-2009\Immobilizer	Key number,Delete key,Add key,
MAZDA\RX-8\2009\Smart key	Add key,Clear key,Add remote,Delete remote,Key number,
MAZDA\RX-8\2009\Immobilizer	Key number,Delete key,Add key,
MAZDA\Tribute\Immobilizer\2001-2004	Key number,Delete key,Add key,
MAZDA\Tribute\Immobilizer\2005-2008	Key number,Delete key,Add key,
MAZDA\Tribute\Immobilizer\2009-2011	Key number,Delete key,Add key,
MAZDA\M2\Type 3(2017-)\Smart key	Add smart key,All smart key lost,Switch ignition on,
MAZDA\M3\Smart key\Type 2(2017-)	Add smart key,All smart key lost,Switch ignition on,

	MAZDA\CX-3\2017-\Smart key	Add smart key,All smart key lost,Switch ignition on,
NISSAN	NISSAN>Select from type\Immobilizer\Electronic key(10)	Add key,Activate steering wheel lock,Add key(fixed code),
	NISSAN>Select from type\Immobilizer\Electronic key(E0)	Add key,
	NISSAN>Select from type\Immobilizer\Electronic key(12)	Add key,Add key(fixed code),
	NISSAN>Select from type\Immobilizer\Automatic retrieval	Add key,
	NISSAN>Select from type\Remote\Automatic retrieval	Add remote>Delete remote,
	NISSAN>Select from type\Smart key\4-digit PIN code\Without key slot-knob type 1	Program smart key>Delete smart key,Program steering lock,
	NISSAN>Select from type\Smart key\New 20-digit rolling code\Teana-VIP(2013-)\Type 1(rolling code)	Program smart key,
	NISSAN>Select from type\Smart key\New 20-digit rolling code\Cima(2013-)\Type 1(rolling code)	Program smart key,

<p>NISSAN&gt;Select from type\Smart key\New 20-digit rolling code\JX35(2013-)\Type 1(rolling code)</p>	<p>Program smart key,</p>
<p>NISSAN&gt;Select from type\Smart key\New 20-digit rolling code\QX60(2013-)\Type 1(rolling code)</p>	<p>Program smart key,</p>
<p>NISSAN&gt;Select from type\Smart key\New 20-digit rolling code\Murano\Type 1(rolling code)</p>	<p>Program smart key,</p>
<p>NISSAN&gt;Select from type\Smart key\New 20-digit rolling code\Q50\Type 2(rolling code)</p>	<p>Program smart key,</p>
<p>NISSAN&gt;Select from type\Smart key\New 20-digit rolling code\X-Trail(2013-)\Type 3(rolling code)</p>	<p>Program smart key,</p>
<p>NISSAN&gt;Select from type\Smart key\New 20-digit rolling code\Qashqai(2015-)\Type 3(rolling code)</p>	<p>Program smart key,</p>
<p>NISSAN&gt;Select from type\Smart key\4-digit PIN code\without key slot-knob type 2</p>	<p>Program smart key,Delete smart key,</p>



NISSAN>Select from type\Smart key\4-digit PIN code\With key slot-button  type 1	Program smart key,
NISSAN>Select from type\Smart key\4-digit PIN code\With slot-button  type 2	Program smart key,Clear fault  code,
NISSAN>Select from type\Smart key\4-digit PIN code\Without slot-button  type 1	Program smart key,
NISSAN>Select from type\Immobilizer\New 20-digit rolling  code	Add key,
NISSAN>Select from type\Immobilizer\Activate direction lock	Activate steering wheel lock,
NISSAN>Select from type\Smart key\4-digit PIN code\Activate direction  lock	Activate steering wheel lock,
Nissan>Select from type\Smart key\12-digit PIN\All	Smart key,Key count,
Nissan>Select from type\Immobilizer\12-digit  PIN-type2(CAN)	Smart key,Key count,

	Nissan\Select from type\Immobilizer\12-digit PIN-type1(KWP)	Program key,Key count,
	Nissan\Read BCM code and release directional lock(4-digit PIN)	Release steering lock,Read BCM inner code,
	NISSAN\Select from type\Smart key\4-digit PIN code\Without keyslot-press-type 2	Read BCM inner code,Release steering lock,Program smart key,
	NISSAN\Select from vehicle(part models)\New Sunny\Smart key	Read BCM inner code,Release steering lock,Program smart key,
	NISSAN\Select from vehicle(part models)\350-Z\03-INATS 5	Add key,Add key(fixed code),
	NISSAN\Select from vehicle(part models)\New X-Trail\2017\With smart	Program smart key,
RENAULT	RENAULT\Select from type\Smart key\IMMO2	Program smart key,Collision recovery,
	RENAULT\Select from type\Smart key\IMMO1	Program smart key,Collision recovery,
	RENAULT\Select from vehicle\Fluence\2008 -	Immobilization,
	RENAULT\Select from vehicle\Clio\1997-1999	Set IMMO unit,Initialize new immobilizer,

RENAULT\Select from vehicle\Clio\2000-2008 VIN with VF1*B	Immobilization,
RENAULT\Select from vehicle\Clio\2006-2012 VIN with VF1*R\With smart	Program smart key,
RENAULT\Select from vehicle\Clio\2006-2012 VIN with VF1*R\Without smart	Immobilization,
RENAULT\Select from vehicle\Escape\2002- VIN with VF1*K2 buttons	Smart key,
RENAULT\Select from vehicle\Escape\2002- VIN with VF1*K3 buttons	Smart key,
RENAULT\Select from vehicle\Kangoo\1999-2002\Type 1	Set IMMO unit,
RENAULT\Select from vehicle\Kangoo\2008- VIN with VF1*W	Immobilization,
RENAULT\Select from vehicle\Kangoo\1999-2002\Type 2	Set IMMO unit,Initialize new immobilizer,

RENAULT\Select from vehicle\Kangoo\2003-2008 VIN with VF1*C	Immobilization,
RENAULT\Select from vehicle\Koleos\2008-2010 VIN with VF1*Y	Smart key,
RENAULT\Select from vehicle\Laguna\ 2007/2007 VIN with VF1*G2 buttons	Smart key,
RENAULT\Select from vehicle\Laguna\ 2007/2007 VIN with VF1*G3 buttons	Smart key,
RENAULT\Select from vehicle\Laguna\2007-2011 VIN with VF1*T	Smart key,
RENAULT\Select from vehicle\Logan\2006-2010	Immobilization,
RENAULT\Select from vehicle\Logan (MA1LS)\2006-2009	Immobilization,
RENAULT\Select from vehicle\Master\2003	Set IMMO unit,Initialize new immobilizer,
RENAULT\Select from vehicle\Master\2003-2010 VIN with VF1*D	Immobilization,

RENAULT\Select from vehicle\Maxity	Read BCM,Program remote,Delete remote,
RENAULT\Select from vehicle\Megane\2002-2008 VIN with VF1*M	Smart key,
RENAULT\Select from vehicle\Megane\02-08(93YLM)	Smart key,
RENAULT\Select from vehicle\Megane\2008 -	Immobilization,
RENAULT\Select from vehicle\Megane Scenic\2002-2006 VIN with VF1*M	Smart key,
RENAULT\Select from vehicle\Megane Scenic\2006-2009 VIN with VF1*M	Smart key,
RENAULT\Select from vehicle\Megane Scenic\2008 - 2011	Immobilization,
RENAULT\Select from vehicle\Modus\2004-2012 VIN with VF1*P\Without smart	Immobilization,
RENAULT\Select from vehicle\Modus\2004-2012 VIN with VF1*P\With smart	Smart key,Program remote,Delete remote,

RENAULT\Select from vehicle\Safrane\2008- VIN with VF1AB\Smart key	Smart key,
RENAULT\Select from vehicle\Scala\2011-	Read BCM,Immobilization,Program remote>Delete remote,
RENAULT\Select from vehicle\Trafic\2002- VIN with VF1*L	Immobilization,
RENAULT\Select from vehicle\Trafic\2002	Set IMMO unit,Initialize new immobilizer,
RENAULT\Select from vehicle\Twingo\2007 VIN with VF1*O\Type 1	Set IMMO unit,
RENAULT\Select from vehicle\Twingo\2007 VIN with VF1*O\Type 2	Set IMMO unit,Initialize new immobilizer,
RENAULT\Select from vehicle\Twingo\2007- VIN with VF1*N	Immobilization,
RENAULT\Select from vehicle\Velsatis\2002-2010 VIN with VF1*J\2 buttons	Smart key,

RENAULT\Select from vehicle\Velsatis\2002-2010 VIN with VF1*J\3 buttons	Smart key,
RENAULT\Select from vehicle\Wind\2010- VIN with VF1*N	Immobilization,
RENAULT\Select from vehicle\Sandero\2008-2012	Immobilization,
RENAULT\Select from vehicle\Safrane\ (KNMG4) 2009-\Ignition switch	Read BCM,Immobilization,Program remote,Delete remote,
RENAULT\Select from vehicle\Koleos\2010-2016 VIN with VF1*Y	Program smart key,Collision recovery,
RENAULT\Select from vehicle\Latitude	Immobilization,
RENAULT\Select from vehicle\Megane Scenic\1999-2002.	Read PIN code,Program key,
RENAULT\Select from vehicle\Megane Scenic\ -2008.	Add key,
RENAULT\Select from vehicle\Twingo\Twingo I Ph2.\2001-2006	Add key,
RENAULT\Select from vehicle\Logan\Logan.\Type 1	Add key,

RENAULT\Select from vehicle\Symbol\Symbol.\Type 1	Add key,
RENAULT\Select from vehicle\Thalia\Thalia.\Type 1	Add key,
RENAULT\Select from vehicle\Sandero\ -2008.	Add key,
RENAULT\Select from vehicle\Trafic\Trafic II Ph2.	Add key,
RENAULT\Select from vehicle\Master\Master.	Add key,
RENAULT\Select from vehicle\Vivaro\Vivaro.	Add key,
RENAULT\Select from vehicle\Primastar\Primastar.	Add key,
RENAULT\Select from vehicle\Clio\Clio II Ph2.	Add key,
RENAULT\Select from vehicle\Kangoo\Kangoo I.	Add key,
RENAULT\Select from vehicle\Logan\Logan.\Type 2	Add key,
RENAULT\Select from vehicle\Symbol\Symbol.\Type 2	Add key,



RENAULT\Select from vehicle\Thalia\Thalia.\Type 2	Add key,
RENAULT\Select from vehicle\Sandero\ (2008-2012).	Add key,
RENAULT\Select from vehicle\Duster\Duster.\2010-2012	Add key,
RENAULT\Select from vehicle\Laguna\Laguna II.	Add key,
RENAULT\Select from vehicle\Espace\Espace IV.	Add key,
RENAULT\Select from vehicle\Velsatis\ -2005.	Add key,
RENAULT\Select from vehicle\Laguna\Laguna II Ph2.	Add key,
RENAULT\Select from vehicle\Espace\Espace IV Ph2.	Add key,
RENAULT\Select from vehicle\Velsatis\2005-.	Add key,
RENAULT\Select from vehicle\Clio\CLIO III.Without smart	Add key,
RENAULT\Select from vehicle\Modus\Modus.\Without smart	Add key,

RENAULT>Select from vehicle\Clio\CLIO III.With smart	Add key,
RENAULT>Select from vehicle\Trafic\Trafic II Ph3.\2010-2014	Add key,
RENAULT>Select from vehicle\Master III\2010-2014	Add key,
RENAULT>Select from vehicle\Kangoo\Kangoo II.\2007-2012	Add key,
RENAULT>Select from vehicle\Twingo\Twingo II.\2007-2013	Add key,
RENAULT>Select from vehicle\Wind\2010-2013.	Add key,
RENAULT>Select from vehicle\Laguna\Laguna III.\2007-2015	Add key,
RENAULT>Select from vehicle\Megane\Megane III.\2009-2015	Add key,
RENAULT>Select from vehicle\Scenic\Scenic III.\2009-2015	Add key,
RENAULT>Select from vehicle\Fluence\2009-2015.	Add key,
RENAULT>Select from vehicle\Koleos\2008 -.	Add key,

	RENAULT\Select from type\All\Type 0	Add key,
	RENAULT\Select from type\All\Type 1	Add key,
	RENAULT\Select from type\All\Type 2	Add key,
	RENAULT\Select from type\All\Type 3	Add key,
	RENAULT\Select from type\All\Type 4	Add key,
	RENAULT\Select from type\All\Type 5	Add key,
	RENAULT\Select from type\All\Type 6	Add key,
	RENAULT\Select from type\All\Type 7	Add key,
	RENAULT\Select from type\All\Type 8	Add key,
	RENAULT\Select from type\All\Type 9	Add key,
	RENAULT\Select from type\All\Type A	Add key,
	RENAULT\Select from vehicle\Megane Scenic\Scenic III (2009-2015).	Add key,
	RENAULT\Select from type\All\Type B	Read PIN code,Program key,Recover backup data,
	RENAULT\Select from vehicle\Trafic\Trafic(4A)\2014 -	Read PIN code,Program key,Recover backup data,
	RENAULT\Select from vehicle\Clio\Clio IV.\2012-	Add key,Recover data,
	RENAULT\Select from vehicle\Captur	Add key,Recover data,
SUZUKI	SUZUKI\China\Swift\2005-\Type 1	Lost all key programming,Obtain immolD,

SUZUKI\China\Vitara\Immobilizer\Type 1	Lost all key programming,Obtain immoID,
SUZUKI\China\Vitara\Immobilizer\Type 2	Program key,Obtain immoID,
SUZUKI\China\Alto\Immobilizer\Type 2	Program key,Obtain immoID,
SUZUKI\China\SX4\Immobilizer\Type 2	Program key,Obtain immoID,
SUZUKI\China\Vitara\Immobilizer\Type 3	Program key,Read immoID,Program key (without PIN),
SUZUKI\China\Vitara\Smart key\Type 1	Program smart key (PIN required),Program smart key (without PIN),Obtain immoID,
SUZUKI\China\Alivio\Smart key\Type 1	Program smart key (PIN required),Program smart key (without PIN),Obtain immoID,
SUZUKI\China\Alivio\Immobilizer\Type 3	Program key,Read immoID,Program key (without PIN),
SUZUKI\China\Liana\Immobilizer\Type 1	Lost all key programming,Obtain immoID,
SUZUKI\China\S-Cross\Smart key>Type 1	Program smart key (PIN required),Program smart key (without PIN),Obtain immoID,

SUZUKI\China\Jimny\Immobilizer\Type 4	Program key,Delete key,Register immobiliser,
SUZUKI\China\Liana\Immobilizer\Type 4	Program key,Delete key,Register immobiliser,
SUZUKI\China\Jimny\Immobilizer\Type 1	Lost all key programming,Obtain immoID,
SUZUKI\China\Swift\2012-\Type 1	Program smart key (PIN required),Program smart key (without PIN),Obtain immoID,
SUZUKI\China\Swift\2015-\Immobilizer\Type 1	Program key,Read immoID,Program key (without PIN),
SUZUKI\China\Kizashi\Smart key	Program smart key (PIN required),Program smart key (without PIN),Obtain immoID,
SUZUKI\China\Swift\2015-\Immobilizer\Type 2	Lost all key programming,Obtain immoID,
SUZUKI\Suzuki(China)\New Alto	Program key,Obtain immoID,
SUZUKI\Japan\Ignis\Immobilizer\Type 4	Program key,Delete key,Register immobiliser,
SUZUKI\USA\XL7(USA)\2007-2009\Immobilization	All key lost,

	SUZUKI\Japan\Baleno\Immobilizer\1996-2001	Immobilizer,Delete ey,
	SUZUKI\Japan\Wagon R\Immobilizer\1998-	Program key,Delete key,Register immobiliser,
	SUZUKI\Japan\Swift\Immobilizer\1996-2004	Immobilizer,Delete ey,
	SUZUKI\Japan\Alto\Immobilizer\1996-2002	Immobilizer,Delete ey,
	SUZUKI\Japan\Grand Vitara\Immobilizer\1996-2002	Immobilizer,Delete ey,
	SUZUKI\Japan\Grand Vitara\Immobilizer\2002-	Immobilizer,Delete ey,
	SUZUKI\Japan\Vitara\Immobilizer\1996-2002	Immobilizer,Delete ey,
	SUZUKI\Japan\Vitara\Immobilizer\2002-	Immobilizer,Delete ey,
	SUZUKI\Japan\Jimny\Immobilizer	Immobilizer,Delete ey,
LAMBORGHINI	LAMBORGHINI\LP560\Remote	Program remote,Delete remote,
	LAMBORGHINI\LP570\Remote	Program remote,Delete remote,
	LAMBORGHINI\LP580\Key(smart key) programming	Backup immo data,Make dealer key,Learn key,Clear airbag fault code,

	LAMBORGHINI\LP610\Key(smart key) programming	Backup immo data,Make dealer key,Learn key,Clear airbag fault code,
	LAMBORGHINI\LP700\Key(smart key) programming	Backup immo data,Make dealer key,Learn key,Clear airbag fault code,
HYUNDAI	HYUNDAI\Select from vehicle\China\IX35\2010-2013\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
	HYUNDAI\Select from vehicle\China\Sonata(NF)\2004-2008\Immobilizer	Program key,ECM neutral mode,Read key count,
	HYUNDAI\Select from vehicle\China\Tucson(JM)\2005-2016\Immobilizer\Petrol 2.0	Program key,ECM neutral mode,Read key count,
	HYUNDAI\Select from vehicle\China\Tucson(JM)\2005-2016\Immobilizer\Diesel	Program key,ECM neutral mode,Read key count,
	HYUNDAI\Select from vehicle\China\Tucson(JM)\2005-2016\Immobilizer\Petrol 2.7	Program key,ECM neutral mode,Read key count,

<p>HYUNDAI\Select from vehicle\China\Mistra(CF)\2014-\Immobilizer</p>	<p>Program key,ECM neutral mode,Read key count,</p>
<p>HYUNDAI\Select from vehicle\China\Elantra(HDC)\2008-2010\Immobilizer</p>	<p>Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,</p>
<p>HYUNDAI\Select from vehicle\China\Sonata(NFC)\2009-2010\Immobilizer</p>	<p>Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,</p>
<p>HYUNDAI\Select from vehicle\China\I30(FDC)\2009-2013\Immobilizer</p>	<p>Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,</p>
<p>HYUNDAI\Select from vehicle\China\Verna(RBC/CB)\2014-2016\Immobilizer</p>	<p>Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,</p>



<p>HYUNDAI\Select from vehicle\China\Elantra(MDC)\2012-\Immobilizer\Type 1</p>	<p>Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,</p>
<p>HYUNDAI\Select from vehicle\China\Elantra(MDC)\2012-\Smart key\Type 2(with key slot)</p>	<p>Program smart key,ECM neutral mode,ESCL neutral mode,PDM neutral mode,SMK neutral mode,</p>
<p>HYUNDAI\Select from vehicle\China\Sonata(NFC)\2009-2010\Smart key</p>	<p>Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,PDM neutral mode,</p>
<p>HYUNDAI\Select from vehicle\China\IX35\2010-2013\Smart key</p>	<p>Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,PDM neutral mode,</p>
<p>HYUNDAI\Select from vehicle\China\Elantra(HDC)\2011-2017\Smart key</p>	<p>Program smart key,ECM neutral mode,SMK neutral mode,PDM neutral mode,ESCL neutral mode,</p>
<p>HYUNDAI\Select from vehicle\China\IX35\2014-2017\Smart key</p>	<p>Program smart key,ECM neutral mode,SMK neutral mode,PDM neutral mode,ESCL neutral mode,</p>
<p>HYUNDAI\Select from vehicle\China\Verna(RBC/CB)\2014-2016\Smart key</p>	<p>Program smart key,ECM neutral mode,SMK neutral mode,PDM neutral mode,ESCL neutral mode,</p>

HYUNDAI\Select from vehicle\China\IX25(GC)\2014-\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
HYUNDAI\Select from vehicle\China\Sonata 9\2015-\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
HYUNDAI\Select from vehicle\China\All New Santafe(MDC)\2012-\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
HYUNDAI\Select from vehicle\China\All New Tucson\2015-2017\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
HYUNDAI\Select from vehicle\China\Mistra(CF)\2014-\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
HYUNDAI\Select from vehicle\General area\ATOZ\1998-2002\Immobilizer	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General area\Getz(TB)\2005-2011\Immobilizer	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General area\Accent(LC)\2000-2002\Immobilizer	Program key,ECM neutral mode,Read key count,

HYUNDAI\Select from vehicle\General area\Matrix(FC)\2002-2011\Immobilizer	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General area\Elantra(XD)\2001-2006\Immobilizer	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General area\HD COUPE\2002-\Immobilizer	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General area\Grandeur/Azera(TG)\2006\Immobilizer	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General area\H-1\1998-2002\Immobilizer\Diesel( CRDI)	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General area\TRAJET\1999-2007\Immobilizer	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General area\Veloster(FS)\2011-2016\Immobilizer	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General area\Elantra(AD)\2016-2017\Immobilizer	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General area\i40(VF)\2012-2016\Immobilizer	Program key,ECM neutral mode,Read key count,

HYUNDAI\Select from vehicle\General area\Grandeur/Azera(HG)\2012-2016\Immobilizer	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General area\H-BUS(TQ)\2008-2013\Immobilizer\Petrol	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from vehicle\General area\Veracruz/ix55(EN)\2007-2013\Immobilizer\Petrol	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from vehicle\General area\Genesis Coupe(BK)\2009-2016\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from vehicle\General area\Genesis(BH)\2009-2012\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from vehicle\General area\Equus/Centennial(VI)\2009-2013\Smart key\Type 1	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,PDM neutral mode,

HYUNDAI\Select from vehicle\General area\Genesis Coupe(BK)\2009-2016\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,PDM neutral mode,
HYUNDAI\Select from vehicle\General area\i40(VF)\2012-2016\Smart key\Type 1	Program smart key,ECM neutral mode,ESCL neutral mode,PDM neutral mode,SMK neutral mode,
HYUNDAI\Select from vehicle\General area\Veloster(FS)\2011-2016\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,PDM neutral mode,ESCL neutral mode,
HYUNDAI\Select from vehicle\General area\Genesis(BH)\2013-2014\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,PDM neutral mode,ESCL neutral mode,
HYUNDAI\Select from vehicle\General area\Equus/Centennial(VI)\2009-2013\Smart key\Type 2	Program smart key,
HYUNDAI\Select from vehicle\General area\Genesis(BH)\2009-2012\Smart key\Type 1	Program smart key,
HYUNDAI\Select from vehicle\General area\Genesis(BH)\2009-2012\Smart key\Type 2	Program smart key,

HYUNDAI\Select from vehicle\General area\Veracruz/ix55(EN)\2007-2013\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,MSL neutral mode,
HYUNDAI\Select from vehicle\General area\Equus/Centennial(VI)\2014-2016\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
HYUNDAI\Select from vehicle\China\All New Santafe(MDC)\2012-\Immobilizer	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General area\Santafe\2001-2002\Immobilizer	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General area\Santafe F/L\2009-\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from vehicle\General area\Santafe\2006-\Petrol\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from vehicle\General area\Grand Santafe(NC)\2014-2017\Immobilizer	Program key,ECM neutral mode,Read key count,

HYUNDAI\Select from vehicle\General area\Grand Santafe(NC)\2014-2017\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
HYUNDAI\Select from vehicle\General area\Grandeur/Azera(HG)\2012-2016\Smart key\with ESCL	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
HYUNDAI\Select from vehicle\China\Sonata 8(YFC)\2011-2016\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from vehicle\China\Sonata 8(YFC)\2011-2016\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,PDM neutral mode,
HYUNDAI\Select from vehicle\General area\Santafe F/L\2009-\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,PDM neutral mode,
HYUNDAI\Select from vehicle\General area\Accent(MC)\2006-2011\Immobilizer	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General area\Santafe\2006-\Diese\Immobilizer	Program key,ECM neutral mode,Read key count,

HYUNDAI\Select from vehicle\China\Elantra(HDC)\2011-2017\  Remote	Program remote,
HYUNDAI\Select from vehicle\China\IX35\2010-2013\Remote	Program remote,
HYUNDAI\Select from vehicle\China\Verna(RBC/CB)\2014-201  6\Remote	Program remote,
HYUNDAI\Select from vehicle\China\All New Tucson\2015-2017\Remote\Type 1	Program remote,
HYUNDAI\Select from  vehicle\China\Sonata  8(YFC)\2011-2016\Remote	Program remote,
HYUNDAI\Select from vehicle\General  area\Genesis  Coupe(BK)\2009-2016\Remote	Program remote,
HYUNDAI\Select from vehicle\China\I30(FDC)\2009-2013\Rem  ote	Program remote,
HYUNDAI\Select from vehicle\China\All  New Santafe(MDC)\2012-\Remote	Program remote,



HYUNDAI\Select from vehicle\General area\Grandeur/Azera(HG)\2012-2016\R	Program remote, emote
HYUNDAI\Select from vehicle\China\Elantra(AD)\2016-\Immobilizer	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\China\Elantra(AD)\2016-\Remote	Program remote,
HYUNDAI\Select from vehicle\China\Tucson(JM)\2005-2016\R	Program remote, emote
HYUNDAI\Select from type\Immobilizer\Type 1(K)	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from type\Immobilizer\Type 2(K)	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from type\Immobilizer\Type 3(K)	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from type\Immobilizer\Type 4(CAN)	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,

HYUNDAI\Select from type\Immobilizer\Type 5(CAN)	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from type\Smart key\General area\Type1(with key slot K)	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,PDM neutral mode,
HYUNDAI\Select from type\Smart key\General area\Type2(with key slot K)	Program smart key,ECM neutral mode,ESCL neutral mode,PDM neutral mode,SMK neutral mode,
HYUNDAI\Select from type\Smart key\General area\Type3(without key slot K)	Program smart key,ECM neutral mode,SMK neutral mode,PDM neutral mode,ESCL neutral mode,
HYUNDAI\Select from type\Smart key\General area\Type4(with key slot K)	Program smart key,
HYUNDAI\Select from type\Smart key\General area\Type5(without key slot K)	Program smart key,
HYUNDAI\Select from type\Smart key\General area\Type6(with key slot K)	Program smart key,ECM neutral mode,SMK neutral mode,MSL neutral mode,
HYUNDAI\Select from type\Smart key\General area\Type7(without key slot CAN)	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,

HYUNDAI\Select from type\Smart key\General area\Type8(without key slot CAN)	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
HYUNDAI \Select from type\Remote control system\16 PIN\Type 1(K)	Program remote,
HYUNDAI \Select from type\Remote control system\16 PIN\Type 2(CAN)	Program remote,
HYUNDAI\Select from vehicle\China\Elantra(MDC)\2012-\Smart key\Type 1(without key slot K)	Program smart key,ECM neutral mode,SMK neutral mode,PDM neutral mode,ESCL neutral mode,
HYUNDAI\Select from vehicle\China\Verna(RC)\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI \Select from type\Remote control system\16 PIN\Type 3	Program remote,
HYUNDAI \Select from type\Remote control system\16 PIN\Type 4	Program remote,
HYUNDAI \Select from type\Remote control system\16 PIN\Type 5(K)	Program remote,

HYUNDAI\Select from vehicle\China\Elantra(AD)\2016-\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
HYUNDAI\Select from vehicle\China\Verna(RBC/CB)\2017-\Im mobilizer	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from type\Remote control system\10 PIN\Type 1	Program remote,
HYUNDAI\Select from vehicle\China\IX35\2017-\Smart key	Smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
HYUNDAI\Select from type\Smart key\General area\Type9(without key slot CAN)	Smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
HYUNDAI\Select from vehicle\China\Accent(MC)\2005-\Immobi lizer	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\China\Accent(MC)\2005-\Remot e	Program remote,

HYUNDAI\Select from vehicle\China\Elantra(MDC)\2012-\Immobilizer\Type 2	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\China\Elantra(MDC)\2012-\Remote	Program remote,
HYUNDAI\Select from vehicle\China\Elantra(HDC)\2008-2010\Remote	Program remote,
HYUNDAI\Select from vehicle\China\Elantra(HDC)\2011-2017\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from vehicle\China\Elantra(HDC EV)\2017\Immobilizer	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\China\Elantra(HDC EV)\2017\Remote	Program remote,
HYUNDAI\Select from vehicle\China\Elantra(HDC EV)\2017\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,PDM neutral mode,ESCL neutral mode,

HYUNDAI\Select from vehicle\China\Celesta\2017\Immobilizer	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\China\Celesta\2017\Remote	Program remote,
HYUNDAI\Select from vehicle\China\Celesta\2017\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
HYUNDAI\Select from vehicle\China\Elantra\2004-2017\Remote	Program remote,
HYUNDAI\Select from vehicle\China\IX25(GC)\2014-\Immobilizer	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\China\IX25(GC)\2014-\Remote	Program remote,
HYUNDAI\Select from vehicle\China\IX35\2014-2017\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from vehicle\China\IX35\2014-2017\Remote	Program remote,

HYUNDAI\Select from vehicle\China\IX35\2017-\Immobilizer	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\China\Mistra(CF)\2014-\Remote	Program remote,
HYUNDAI\Select from vehicle\China\Sonata(LFC)\2015-2017\I mmobilizer	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\China\Sonata(LFC)\2015-2017\R emote	Program remote,
HYUNDAI\Select from vehicle\China\Sonata(LFC)\2015-2017\S mart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
HYUNDAI\Select from vehicle\China\Sonata(NFC)\2009-2010\ Remote	Program remote,
HYUNDAI\Select from vehicle\China\Sonata(NF)\2004-2008\Re mote	Program remote,
HYUNDAI\Select from vehicle\China\All New Tucson\2015-2017\Remote\Type 2	Program remote,

HYUNDAI\Select from vehicle\China\All New Tucson\2015-2017\Immobilizer	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\China\Verna(RBC/CB)\2017-\Re mote	Program remote,
HYUNDAI\Select from vehicle\China\Verna(RBC/CB)\2010-201 3\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from vehicle\China\Verna(RBC/CB)\2010-201 3\Remote	Program remote,
HYUNDAI\Select from vehicle\China\Verna\2016-2017\Immobili zer	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\China\Verna\2016-2017\Remote	Program remote,
HYUNDAI\Select from vehicle\General area\Getz(TB)\2005-2011\Remote	Program remote,
HYUNDAI\Select from vehicle\General area\Getz(TB)\2003-2005\Immobilizer	Program key,ECM neutral mode,Read key count,



HYUNDAI\Select from vehicle\General area\Getz(TB)\2003-2005\Remote	Program remote,
HYUNDAI\Select from vehicle\General area\Accent(LC)\2003-2007\Immobilizer	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General area\Accent(LC)\2003-2007\Remote	Program remote,
HYUNDAI\Select from vehicle\General area\Accent(MC)\2006-2011\Remote	Program remote,
HYUNDAI\Select from vehicle\General area\Accent(RB)\2011-2016\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from vehicle\General area\Accent(RB)\2011-2016\Remote	Program remote,
HYUNDAI\Select from vehicle\General area\Accent(RB)\2011-2016\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,PDM neutral mode,ESCL neutral mode,
HYUNDAI\Select from vehicle\General area\ccent Solaris(RBr)\2011-2015\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,

<p>HYUNDAI\Select from vehicle\General area\ccent Solaris(RBr)\2011-2015\Remote</p>	<p>Program remote,</p>
<p>HYUNDAI\Select from vehicle\General area\ccent Solaris(RBr)\2011-2015\Smart key</p>	<p>Program smart key,ECM neutral mode,SMK neutral mode,PDM neutral mode,ESCL neutral mode,</p>
<p>HYUNDAI\Select from vehicle\General area\Atos(MXI)-PDF\2003-2013\Immobilizer</p>	<p>Program key,ECM neutral mode,Read key count,</p>
<p>HYUNDAI\Select from vehicle\General area\CRETA(GS)\2015-2016\Remote</p>	<p>Program remote,</p>
<p>HYUNDAI\Select from vehicle\General area\Elantra Coupe(JK)\2013-2016\Immobilizer</p>	<p>Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,</p>
<p>HYUNDAI\Select from vehicle\General area\Elantra Coupe(JK)\2013-2016\Remote</p>	<p>Program remote,</p>
<p>HYUNDAI\Select from vehicle\General area\Elantra Coupe(JK)\2013-2016\Smart key</p>	<p>Program smart key,ECM neutral mode,SMK neutral mode,PDM neutral mode,ESCL neutral mode,</p>

HYUNDAI\Select from vehicle\General area\Elantra(AD)\2016-2017\Remote	Program remote,
HYUNDAI\Select from vehicle\General area\Elantra(AD)\2016-2017\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
HYUNDAI\Select from vehicle\General area\Elantra(ADA)\2017\Immobilizer	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General area\Elantra(ADA)\2017\Remote	Program remote,
HYUNDAI\Select from vehicle\General area\Elantra(ADA)\2017\Smart key	Smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
HYUNDAI\Select from vehicle\General area\Elantra(HD)\2007-2011\Immobilizer \Petrol	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from vehicle\General area\Elantra(HD)\2007-2011\Immobilizer \Diesel	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General area\Elantra(HD)\2007-2011\Remote	Program remote,

HYUNDAI\Select from vehicle\General area\Elantra(MD)\2012-2016\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from vehicle\General area\Elantra(MD)\2012-2016\Remote	Program remote,
HYUNDAI\Select from vehicle\General area\Elantra(MD)\2012-2016\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,PDM neutral mode,ESCL neutral mode,
HYUNDAI\Select from vehicle\General area\Elantra(MDI)\2013-2016\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from vehicle\General area\Elantra(MDI)\2013-2016\Remote	Program remote,
HYUNDAI\Select from vehicle\General area\Elantra(MDI)\2013-2016\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,PDM neutral mode,ESCL neutral mode,
HYUNDAI\Select from vehicle\General area\Elantra(UD)\2014-2016\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,

HYUNDAI\Select from vehicle\General area\Elantra(UD)\2014-2016\Remote	Program remote,
HYUNDAI\Select from vehicle\General area\Elantra(UD)\2014-2016\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,PDM neutral mode,ESCL neutral mode,
HYUNDAI\Select from vehicle\General area\Elantra(XD)\2001-2006\Remote	Program remote,
HYUNDAI\Select from vehicle\General area\Eon(HA)\2012-2016\Immobilizer	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General area\Eon(HA)\2012-2016\Remote	Program remote,
HYUNDAI\Select from vehicle\General area\Genesis Coupe(BK)-U.S.\2013\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from vehicle\General area\Genesis Coupe(BK)-U.S.\2013\Remote	Program remote,
HYUNDAI\Select from vehicle\General area\Genesis(BH)\2009-2012\Remote	Program remote,

HYUNDAI\Select from vehicle\General area\Genesis(BH)\2013-2014\Immobilize r	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from vehicle\General area\Genesis(BH)\2013-2014\Remote	Program remote,
HYUNDAI\Select from vehicle\General area\Genesis(BH)-U.S.\2013\Immobilize r	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from vehicle\General area\Genesis(BH)-U.S.\2013\Remote	Program remote,
HYUNDAI\Select from vehicle\General area\Genesis(BH)-U.S.\2013\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,PDM neutral mode,ESCL neutral mode,
HYUNDAI\Select from vehicle\General area\Genesis(DH)\2014-2016\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
HYUNDAI\Select from vehicle\General area\Grand Santafe(NC)\2014-2017\Remote	Program remote,

<p>HYUNDAI\Select from vehicle\General area\Grand i10/Xcent(BA)\2014-2016\Immobilizer</p>	<p>Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,</p>
<p>HYUNDAI\Select from vehicle\General area\Grand i10/Xcent(BA)\2014-2016\Smart key</p>	<p>Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,</p>
<p>HYUNDAI\Select from vehicle\General area\Grandeur/Azera(HG)\2012-2016\S mart key\without ESCL</p>	<p>Program smart card,ECM neutral mode,SMK neutral mode,ESCL neutral mode,</p>
<p>HYUNDAI\Select from vehicle\General area\Grandeur/Azera(TG)\2007-2011\Im mobilizer\Petro\Type1</p>	<p>Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,</p>
<p>HYUNDAI\Select from vehicle\General area\Grandeur/Azera(TG)\2007-2011\Im mobilizer\Petro\Type2</p>	<p>Program key,ECM neutral mode,Read key count,</p>
<p>HYUNDAI\Select from vehicle\General area\Grandeur/Azera(TG)\2007-2011\Im mobilizer\Diesel</p>	<p>Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,</p>

HYUNDAI\Select from vehicle\General area\Grandeur/Azera(TG)\2007-2011\Remote	Program remote,
HYUNDAI\Select from vehicle\General area\Grandeur/Azera(TG)\2006\Remote	Program remote,
HYUNDAI\Select from vehicle\General area\H-BUS(TQ)\2008-2013\Immobilizer \Diesel\G 2.5 TCI-A2	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from vehicle\General area\H-BUS(TQ)\2008-2013\Immobilizer \Diesel\G 2.5 TCI-4D56	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General area\H-1/iMAX/iLOAD(TQ)\2008-2016\Immobilizer\Petrol	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from vehicle\General area\H-1/iMAX/iLOAD(TQ)\2008-2016\Immobilizer\Diesel\G 2.5 TCI-A2	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,



HYUNDAI\Select from vehicle\General area\H-1/iMAX/iLOAD(TQ)\2008-2016\ mmobilizer\Diesel\G 2.5 TCI-4D56	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General area\H-1/iMAX/iLOAD(TQ)\2008-2016\ emote	Program remote,
HYUNDAI\Select from vehicle\General area\H-100 Truck(HR)\2013-2016\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from vehicle\General area\H-100 Truck(HR)\2013-2016\Remote	Program remote,
HYUNDAI\Select from vehicle\General area\H-100 Truck(HR)\2003-2012\Remote	Program remote,
HYUNDAI\Select from vehicle\General area\HB20(HB)\2013-2016\Immobilizer	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General area\HB20(HB)\2013-2016\Remote	Program remote,

HYUNDAI\Select from vehicle\General area\i10(IA)\2014-2016\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from vehicle\General area\i10(IA)\2014-2016\Remote	Program remote,
HYUNDAI\Select from vehicle\General area\i10(IA)\2014-2016\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
HYUNDAI\Select from vehicle\General area\i10(PA)\2008-2016\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from vehicle\General area\i10(PA)\2008-2016\Remote	Program remote,
HYUNDAI\Select from vehicle\General area\i20(GB)\2015-2016\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from vehicle\General area\i20(GB)\2015-2016\Remote	Program remote,

HYUNDAI\Select from vehicle\General area\i20(GB)\2015-2016\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
HYUNDAI\Select from vehicle\General area\i20(IB)\2014-2016\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from vehicle\General area\i20(IB)\2014-2016\Remote	Program remote,
HYUNDAI\Select from vehicle\General area\i20(IB)\2014-2016\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
HYUNDAI\Select from vehicle\General area\i20(PB)\2009-2012\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from vehicle\General area\i20(PB)\2009-2012\Remote	Program remote,
HYUNDAI\Select from vehicle\General area\i20(PB)\2013-2016\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,

HYUNDAI\Select from vehicle\General area\i20(PB)\2013-2016\Remote	Program remote,
HYUNDAI\Select from vehicle\General area\i20(PB)\2013-2016\Smart key\with ESCL	Program smart key,ECM neutral mode,SMK neutral mode,PDM neutral mode,ESCL neutral mode,
HYUNDAI\Select from vehicle\General area\i20(PB)\2013-2016\Smart key\without ESCL	Program smart key,ECM neutral mode,SMK neutral mode,PDM neutral mode,ESCL neutral mode,
HYUNDAI\Select from vehicle\General area\i30(FDe)\2009-2012\Immobilizer\Pe trol	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from vehicle\General area\i30(FDe)\2009-2012\Immobilizer\Di ese\D 2.0 TCI-D	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from vehicle\General area\i30(FDe)\2009-2012\Immobilizer\Di ese\D 1.6 TCI-U	Program key,ECM neutral mode,Read key count,

HYUNDAI\Select from vehicle\General area\i30(FDe)\2009-2012\Immobilizer\Di ese\D 1.6 TCI-U2	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from vehicle\General area\i30(FDe)\2009-2012\Remote	Program remote,
HYUNDAI\Select from vehicle\General area\i30(GD)\2013-2016\Immobilizer	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General area\i30(GD)\2013-2016\Remote	Program remote,
HYUNDAI\Select from vehicle\General area\i30(GD)\2013-2016\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,PDM neutral mode,ESCL neutral mode,
HYUNDAI\Select from vehicle\General area\i30(GDe)\2013-2016\Immobilizer	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General area\i30(GDe)\2013-2016\Remote	Program remote,
HYUNDAI\Select from vehicle\General area\i30(GDe)\2013-2016\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,PDM neutral mode,ESCL neutral mode,

<p>HYUNDAI\Select from vehicle\General area\i30\Elantra Neos(FD)\2008-2012\Immobilizer\Petrol</p>	<p>Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,</p>
<p>HYUNDAI\Select from vehicle\General area\i30\Elantra Neos(FD)\2008-2012\Immobilizer\Diesel\ D 2.0 TCI-D</p>	<p>Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,</p>
<p>HYUNDAI\Select from vehicle\General area\i30\Elantra Neos(FD)\2008-2012\Immobilizer\Diesel\ D 1.6 TCI-U</p>	<p>Program key,ECM neutral mode,Read key count,</p>
<p>HYUNDAI\Select from vehicle\General area\i30\Elantra Neos(FD)\2008-2012\Immobilizer\Diesel\ D 1.6 TCI-U2</p>	<p>Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,</p>
<p>HYUNDAI\Select from vehicle\General area\i30\Elantra Neos(FD)\2008-2012\Remote</p>	<p>Program remote,</p>
<p>HYUNDAI\Select from vehicle\General area\i40(VF)\2012-2016\Smart key\Type 2</p>	<p>Program smart key,ECM neutral mode,SMK neutral mode,PDM neutral mode,ESCL neutral mode,</p>

HYUNDAI\Select from vehicle\General area\i40(VF)\2012-2016\Remote	Program remote,
HYUNDAI\Select from vehicle\General area\ix20(JC)\2011-2016\Immobilizer	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General area\ix20(JC)\2011-2016\Remote	Program remote,
HYUNDAI\Select from vehicle\General area\ix20(JC)\2011-2016\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,PDM neutral mode,ESCL neutral mode,
HYUNDAI\Select from vehicle\General area\ix35 FCEV(LM FCEV)\2013-2016\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,PDM neutral mode,
HYUNDAI\Select from vehicle\General area\ix35(EL)\2014-2016\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from vehicle\General area\ix35(EL)\2014-2016\Remote	Program remote,
HYUNDAI\Select from vehicle\General area\ix35(EL)\2014-2016\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,PDM neutral mode,ESCL neutral mode,

HYUNDAI\Select from vehicle\General area\ix35(EL)\2010-2013\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from vehicle\General area\ix35(EL)\2010-2013\Remote	Program remote,
HYUNDAI\Select from vehicle\General area\ix35(EL)\2010-2013\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,PDM neutral mode,
HYUNDAI\Select from vehicle\General area\Matrix(FC)\2002-2011\Remote	Program remote,
HYUNDAI\Select from vehicle\General area\SANTAFE SPORT(DMA)\2014-2017\Immobilizer	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General area\SANTAFE SPORT(DMA)\2014-2017\Remote	Program remote,
HYUNDAI\Select from vehicle\General area\SANTAFE SPORT(DMA)\2014-2017\Smart key	Smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,



HYUNDAI\Select from vehicle\General area\Santafe(CM)\2010-2013\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from vehicle\General area\Santafe(CM)\2010-2013\Remote	Program remote,
HYUNDAI\Select from vehicle\General area\Santafe(CM)\2010-2013\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,PDM neutral mode,
HYUNDAI\Select from vehicle\General area\Santafe(CM)\2006-2009\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from vehicle\General area\Santafe(CM)\2006-2009\Remote	Program remote,
HYUNDAI\Select from vehicle\General area\Santafe(DM)\2013-2016\Immobilizer	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General area\Santafe(DM)\2013-2016\Remote	Program remote,

HYUNDAI\Select from vehicle\General area\Santafe(DM)\2013-2016\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
HYUNDAI\Select from vehicle\General area\Santafe(DMI)\2013-2016\Immobilizer	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General area\Santafe(DMI)\2013-2016\Remote	Program remote,
HYUNDAI\Select from vehicle\General area\Santafe(DMI)\2013-2016\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
HYUNDAI\Select from vehicle\General area\Sonata Hybrid(LFHEV)\2015-2016\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
HYUNDAI\Select from vehicle\General area\SANTAFE(SM)\2001-2006\Remote	Program remote,
HYUNDAI\Select from vehicle\General area\Sonata Hybrid(LFHEV)-U.S.\2016\Smart key	Smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,

<p>HYUNDAI\Select from vehicle\General area\Sonata Hybrid(YFHEV)\2014-2015\Immobilizer</p>	<p>Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,</p>
<p>HYUNDAI\Select from vehicle\General area\Sonata Hybrid(YFHEV)\2014-2015\Remote</p>	<p>Program remote,</p>
<p>HYUNDAI\Select from vehicle\General area\Sonata Hybrid(YFHEV)\2014-2015\Smart key</p>	<p>Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,PDM neutral mode,</p>
<p>HYUNDAI\Select from vehicle\General area\Sonata Hybrid(YFHEV)-U.S.\2013-2014\Immobilizer</p>	<p>Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,</p>
<p>HYUNDAI\Select from vehicle\General area\Sonata Hybrid(YFHEV)-U.S.\2013-2014\Remote</p>	<p>Program remote,</p>
<p>HYUNDAI\Select from vehicle\General area\Sonata(EF)\2005-2006\Immobilizer</p>	<p>Program key,ECM neutral mode,Read key count,</p>
<p>HYUNDAI\Select from vehicle\General area\Sonata(LF)\2015-2016\Immobilizer\ G 2.4/2.0 MPI</p>	<p>Program key,ECM neutral mode,Read key count,</p>

HYUNDAI\Select from vehicle\General area\Sonata(LF)\2015-2016\Immobilizer\ G 2.4/2.0 GDI	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from vehicle\General area\Sonata(LF)\2015-2016\Remote	Program remote,
HYUNDAI\Select from vehicle\General area\Sonata(LF)\2015-2016\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
HYUNDAI\Select from vehicle\General area\Sonata(LFA)\2015-2016\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from vehicle\General area\Sonata(LFA)\2015-2016\Remote	Program remote,
HYUNDAI\Select from vehicle\General area\Sonata(LFA)\2015-2016\Smart key	Smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
HYUNDAI\Select from vehicle\General area\Sonata(NF)\2007-2010\Immobilizer \Petrol\Type1	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,

HYUNDAI\Select from vehicle\General area\Sonata(NF)\2007-2010\Immobilizer \Petrol\Type2	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General area\Sonata(NF)\2007-2010\Immobilizer \Diesel	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General area\Sonata(NF)\2007-2010\Remote	Program remote,
HYUNDAI\Select from vehicle\General area\Sonata(NF)\2005-2006\Immobilizer \Petrol	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General area\Sonata(NF)\2005-2006\Immobilizer \Diesel	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General area\Sonata(NF)\2005-2006\Remote	Program remote,
HYUNDAI\Select from vehicle\General area\Sonata(YF)-US\2011-2014\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from vehicle\General area\Sonata(YF)-US\2011-2014\Remote	Program remote,

HYUNDAI\Select from vehicle\General area\Sonata(YF)-US\2011-2014\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,PDM neutral mode,
HYUNDAI\Select from vehicle\General area\Sonata(YFI)\2012-2015\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from vehicle\General area\Sonata(YFI)\2012-2015\Remote	Program remote,
HYUNDAI\Select from vehicle\General area\Sonata(YFI)\2012-2015\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,PDM neutral mode,
HYUNDAI\Select from vehicle\General area\Sonata/i45(YF)\2011-2015\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from vehicle\General area\Sonata/i45(YF)\2011-2015\Remote	Program remote,
HYUNDAI\Select from vehicle\General area\Sonata/i45(YF)\2011-2015\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,PDM neutral mode,

HYUNDAI\Select from vehicle\General area\Terracan\2001-2006\Immobilizer	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General area\TRAJET\1999-2007\Remote	Program remote,
HYUNDAI\Select from vehicle\General area\Tucson FFV(JM FFV)\2012-2013\Immobilizer\Type1	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General area\Tucson FFV(JM FFV)\2012-2013\Immobilizer\Type2	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General area\Tucson FFV(JM FFV)\2012-2013\Remote	Program remote,
HYUNDAI\Select from vehicle\General area\Tucson(JM)\2005-2010\Immobilizer \Petro\G 2.0	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General area\Tucson(JM)\2005-2010\Immobilizer \Petro\G 2.7	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General area\Tucson(JM)\2005-2010\Immobilizer \Diesel	Program key,ECM neutral mode,Read key count,

HYUNDAI\Select from vehicle\General area\Tucson(JM)\2005-2010\Remote	Program remote,
HYUNDAI\Select from vehicle\General area\TUCSON(TL)\2016\Immobilizer	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General area\TUCSON(TL)\2016\Remote	Program remote,
HYUNDAI\Select from vehicle\General area\TUCSON(TL)\2016\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
HYUNDAI\Select from vehicle\General area\TUCSON(TLE)\2016\Immobilizer	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General area\TUCSON(TLE)\2016\Remote	Program remote,
HYUNDAI\Select from vehicle\General area\TUCSON(TLE)\2016\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
HYUNDAI\Select from vehicle\General area\Tucson/i35(LM)\2014-2016\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from vehicle\General area\Tucson/i35(LM)\2014-2016\Remote	Program remote,



HYUNDAI\Select from vehicle\General area\Tucson/i35(LM)\2014-2016\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,PDM neutral mode,ESCL neutral mode,
HYUNDAI\Select from vehicle\General area\Tucson/i35(LM)\2010-2013\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from vehicle\General area\Tucson/i35(LM)\2010-2013\Remote	Program remote,
HYUNDAI\Select from vehicle\General area\Tucson/i35(LM)\2010-2013\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,PDM neutral mode,
HYUNDAI\Select from vehicle\General area\Veloster(FS)\2011-2016\Remote	Program remote,
HYUNDAI\Select from vehicle\General area\Veracruz/ix55(EN)\2007-2013\Immobilizer\Diesel	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General area\Veracruz/ix55(EN)\2007-2013\Remote	Program remote,

HYUNDAI\Select from vehicle\General area\Verna(RBI)\2011-2016\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from vehicle\General area\Verna(RBI)\2011-2016\Remote	Program remote,
HYUNDAI\Select from vehicle\General area\Verna(RBI)\2011-2016\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,PDM neutral mode,ESCL neutral mode,
HYUNDAI\Select from vehicle\USA\Accent(LC)\2003-2005\Immobilizer	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\USA\Accent(LC)\2003-2005\Remote	Program remote,
HYUNDAI\Select from vehicle\USA\Accent(MC)\2006-2011\Immobilizer	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\USA\Accent(MC)\2006-2011\Remote	Program remote,

<p>HYUNDAI\Select from vehicle\USA\Accent(RB)\2012-2016\Immobilizer</p>	<p>Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,</p>
<p>HYUNDAI\Select from vehicle\USA\Accent(RB)\2012-2016\Remote</p>	<p>Program remote,</p>
<p>HYUNDAI\Select from vehicle\USA\Attitude(Mexico)\2006-2011 \Immobilizer</p>	<p>Program key,ECM neutral mode,Read key count,</p>
<p>HYUNDAI\Select from vehicle\USA\Azera(HG)\2012-2016\Immobilizer</p>	<p>Program key,ECM neutral mode,Read key count,</p>
<p>HYUNDAI\Select from vehicle\USA\Azera(HG)\2012-2016\Remote</p>	<p>Program remote,</p>
<p>HYUNDAI\Select from vehicle\USA\Azera(HG)\2012-2016\Smart key</p>	<p>Program smart key,ECM neutral mode,SMK neutral mode,PDM neutral mode,ESCL neutral mode,</p>

<p>HYUNDAI\Select from vehicle\USA\Azera(TG)\2007-2011\Immobilizer\Type1</p>	<p>Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,</p>
<p>HYUNDAI\Select from vehicle\USA\Azera(TG)\2007-2011\Immobilizer\Type2</p>	<p>Program key,ECM neutral mode,Read key count,</p>
<p>HYUNDAI\Select from vehicle\USA\Azera(TG)\2007-2011\Remote</p>	<p>Program remote,</p>
<p>HYUNDAI\Select from vehicle\USA\Azera(TG)\2006\Immobilizer</p>	<p>Program key,ECM neutral mode,Read key count,</p>
<p>HYUNDAI\Select from vehicle\USA\Azera(TG)\2006\Remote</p>	<p>Program remote,</p>
<p>HYUNDAI\Select from vehicle\USA\Elantra Coupe(JK)\2013-2015\Immobilizer</p>	<p>Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,</p>
<p>HYUNDAI\Select from vehicle\USA\Elantra Coupe(JK)\2013-2015\Remote</p>	<p>Program remote,</p>

<p>HYUNDAI\Select from vehicle\USA\Elantra Coupe(JK)\2013-2015\Smart key</p>	<p>Program smart key,ECM neutral mode,SMK neutral mode,PDM neutral mode,ESCL neutral mode,</p>
<p>HYUNDAI\Select from vehicle\USA\Elantra GT(GD)\2013-2016\Immobilizer</p>	<p>Program key,ECM neutral mode,Read key count,</p>
<p>HYUNDAI\Select from vehicle\USA\Elantra GT(GD)\2013-2016\Remote</p>	<p>Program remote,</p>
<p>HYUNDAI\Select from vehicle\USA\Elantra GT(GD)\2013-2016\Smart key</p>	<p>Program smart key,ECM neutral mode,SMK neutral mode,PDM neutral mode,ESCL neutral mode,</p>
<p>HYUNDAI\Select from vehicle\USA\Elantra Touring(FD)\2009-2012\Immobilizer</p>	<p>Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,</p>
<p>HYUNDAI\Select from vehicle\USA\Elantra Touring(FD)\2009-2012\Remote</p>	<p>Program remote,</p>
<p>HYUNDAI\Select from vehicle\USA\Elantra(AD)\2017\Immobilizer</p>	<p>Program key,ECM neutral mode,Read key count,</p>

HYUNDAI\Select from vehicle\USA\Elantra(AD)\2017\Remote	Program remote,
HYUNDAI\Select from vehicle\USA\Elantra(AD)\2017\Smart key	Smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
HYUNDAI\Select from vehicle\USA\Elantra(ADA)\2017\Immobilizer	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\USA\Elantra(ADA)\2017\Remote	Program remote,
HYUNDAI\Select from vehicle\USA\Elantra(ADA)\2017\Smart key	Smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
HYUNDAI\Select from vehicle\USA\Elantra(HD)\2007-2010\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from vehicle\USA\Elantra(HD)\2007-2010\Remote	Program remote,

<p>HYUNDAI\Select from vehicle\USA\Elantra(MD)\2011-2016\Im mobilizer</p>	<p>Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,</p>
<p>HYUNDAI\Select from vehicle\USA\Elantra(MD)\2011-2016\Re mote</p>	<p>Program remote,</p>
<p>HYUNDAI\Select from vehicle\USA\Elantra(MD)\2011-2016\Sm art key</p>	<p>Program smart key,ECM neutral mode,SMK neutral mode,PDM neutral mode,ESCL neutral mode,</p>
<p>HYUNDAI\Select from vehicle\USA\Elantra(UD)\2011-2016\Im mobilizer</p>	<p>Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,</p>
<p>HYUNDAI\Select from vehicle\USA\Elantra(UD)\2011-2016\Re mote</p>	<p>Program remote,</p>
<p>HYUNDAI\Select from vehicle\USA\Elantra(UD)\2011-2016\Sm art key</p>	<p>Program smart key,ECM neutral mode,SMK neutral mode,PDM neutral mode,ESCL neutral mode,</p>

<p>HYUNDAI\Select from vehicle\USA\Elantra(XD)\2001-2006\Im mobilizer</p>	<p>Program key,ECM neutral mode,Read key count,</p>
<p>HYUNDAI\Select from vehicle\USA\Elantra(XD)\2001-2006\Re mote</p>	<p>Program remote,</p>
<p>HYUNDAI\Select from vehicle\USA\Entourage(EP)\2007-2010\ mmobilizer</p>	<p>Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,</p>
<p>HYUNDAI\Select from vehicle\USA\Entourage(EP)\2007-2010\ Remote</p>	<p>Program remote,</p>
<p>HYUNDAI\Select from vehicle\USA\Equus(VI)\2014-2016\Sm t key</p>	<p>Smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,</p>
<p>HYUNDAI\Select from vehicle\USA\Equus(VI)\2011-2013\Sm t key</p>	<p>Program smart key,</p>



<p>HYUNDAI\Select from vehicle\USA\Genesis Coupe(BK)\2010-2016\Immobilizer</p>	<p>Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,</p>
<p>HYUNDAI\Select from vehicle\USA\Genesis Coupe(BK)\2010-2016\Remote</p>	<p>Program remote,</p>
<p>HYUNDAI\Select from vehicle\USA\Genesis Coupe(BK)\2010-2016\Smart key</p>	<p>Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,PDM neutral mode,</p>
<p>HYUNDAI\Select from vehicle\USA\Genesis(BH)\2012-2014\Im mobilizer</p>	<p>Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,</p>
<p>HYUNDAI\Select from vehicle\USA\Genesis(BH)\2012-2014\Re mote</p>	<p>Program remote,</p>
<p>HYUNDAI\Select from vehicle\USA\Genesis(BH)\2012-2014\S mart key</p>	<p>Program smart key,ECM neutral mode,SMK neutral mode,PDM neutral mode,ESCL neutral mode,</p>

HYUNDAI\Select from vehicle\USA\Genesis(BH)\2009-2011\Im mobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from vehicle\USA\Genesis(BH)\2009-2011\Re mote	Program remote,
HYUNDAI\Select from vehicle\USA\Genesis(BH)\2009-2011\S mart key	Program smart key,
HYUNDAI\Select from vehicle\USA\Genesis(DH)\2015-2016\S mart key	Smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
HYUNDAI\Select from vehicle\USA\Santafe Sport(DMA)\2017\Immobilizer	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\USA\Santafe Sport(DMA)\2017\Smart key	Smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
HYUNDAI\Select from vehicle\USA\Santafe Sport(DMA)\2013-2016\Immobilizer	Program key,ECM neutral mode,Read key count,

HYUNDAI\Select from vehicle\USA\Santafe Sport(DMA)\2013-2016\Remote	Program remote,
HYUNDAI\Select from vehicle\USA\Santafe Sport(DMA)\2013-2016\Smart key	Smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
HYUNDAI\Select from vehicle\USA\Santafe(CM)\2007-2012\Im mobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from vehicle\USA\Santafe(CM)\2007-2012\Re mote	Program remote,
HYUNDAI\Select from vehicle\USA\Santafe(CM)\2012\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,PDM neutral mode,
HYUNDAI\Select from vehicle\USA\Santafe NC\2013-2017\Immobilizer	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\USA\Santafe NC\2013-2017\Remote	Program remote,

HYUNDAI\Select from vehicle\USA\Santafe NC\2013-2017\Smart key	Smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
HYUNDAI\Select from vehicle\USA\SANTAFE(SM)\2006\Remo te	Program remote,
HYUNDAI\Select from vehicle\USA\SANTAFE(SM)\2001-2005\ Remote	Program remote,
HYUNDAI\Select from vehicle\USA\Sonata HEV(LF HEV)\2016\Smart key	Smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
HYUNDAI\Select from vehicle\USA\Sonata Hybrid(YFHEV)\2011-2015\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
HYUNDAI\Select from vehicle\USA\Sonata Hybrid(YFHEV)\2011-2015\Remote	Program remote,
HYUNDAI\Select from vehicle\USA\Sonata Hybrid(YFHEV)\2011-2015\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,PDM neutral mode,

<p>HYUNDAI\Select from vehicle\USA\Sonata PHEV(LF PHEV)\2016\Smart key</p>	<p>Smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,</p>
<p>HYUNDAI\Select from vehicle\USA\Sonata(LFA)\2015-2016\Im mobilizer\Type1</p>	<p>Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,</p>
<p>HYUNDAI\Select from vehicle\USA\Sonata(LFA)\2015-2016\Im mobilizer\Type2</p>	<p>Program key,ECM neutral mode,Read key count,</p>
<p>HYUNDAI\Select from vehicle\USA\Sonata(LFA)\2015-2016\Re mote</p>	<p>Program remote,</p>
<p>HYUNDAI\Select from vehicle\USA\Sonata(LFA)\2015-2016\S mart key</p>	<p>Smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,</p>
<p>HYUNDAI\Select from vehicle\USA\Sonata(NF)\2006-2010\Im mobilizer\Type1</p>	<p>Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,</p>

<p>HYUNDAI\Select from vehicle\USA\Sonata(NF)\2006-2010\Immobilizer\Type2</p>	<p>Program key,ECM neutral mode,Read key count,</p>
<p>HYUNDAI\Select from vehicle\USA\Sonata(NF)\2006-2010\Remote</p>	<p>Program remote,</p>
<p>HYUNDAI\Select from vehicle\USA\Sonata(YF)\2011-2014\Immobilizer</p>	<p>Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,</p>
<p>HYUNDAI\Select from vehicle\USA\Sonata(YF)\2011-2014\Remote</p>	<p>Program remote,</p>
<p>HYUNDAI\Select from vehicle\USA\Sonata(YF)\2011-2014\Smart key</p>	<p>Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,PDM neutral mode,</p>
<p>HYUNDAI\Select from vehicle\USA\Tiburon(GK)\2003-2008\Immobilizer\Type1</p>	<p>Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,</p>

<p>HYUNDAI\Select from vehicle\USA\Tiburon(GK)\2003-2008\Im mobilizer\Type2</p>	<p>Program key,ECM neutral mode,Read key count,</p>
<p>HYUNDAI\Select from vehicle\USA\TUCSON FCEV(LM FCEV)\2015-2016\Smart key</p>	<p>Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,PDM neutral mode,</p>
<p>HYUNDAI\Select from vehicle\USA\Tucson(LM)\2010-2015\Im mobilizer</p>	<p>Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,</p>
<p>HYUNDAI\Select from vehicle\USA\Tucson(LM)\2010-2015\Re mote</p>	<p>Program remote,</p>
<p>HYUNDAI\Select from vehicle\USA\Tucson(LM)\2010-2015\Sm art key</p>	<p>Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,PDM neutral mode,</p>
<p>HYUNDAI\Select from vehicle\USA\Tucson(JM)\2005-2009\Im mobilizer\G 2.7</p>	<p>Program key,ECM neutral mode,Read key count,</p>

<p>HYUNDAI\Select from vehicle\USA\Tucson(JM)\2005-2009\Im mobilizer\G 2.0</p>	<p>Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,</p>
<p>HYUNDAI\Select from vehicle\USA\Tucson(JM)\2005-2009\Re mote</p>	<p>Program remote,</p>
<p>HYUNDAI\Select from vehicle\USA\TIBURON(TL)\2016\Remot e</p>	<p>Program remote,</p>
<p>HYUNDAI\Select from vehicle\USA\Veloster(FS)\2012-2016\Im mobilizer</p>	<p>Program key,ECM neutral mode,Read key count,</p>
<p>HYUNDAI\Select from vehicle\USA\Veloster(FS)\2012-2016\Re mote</p>	<p>Program remote,</p>
<p>HYUNDAI\Select from vehicle\USA\Veloster(FS)\2012-2016\S mart key</p>	<p>Program smart key,ECM neutral mode,SMK neutral mode,PDM neutral mode,ESCL neutral mode,</p>



<p>HYUNDAI\Select from vehicle\USA\Veracruz\ix55(EN)\2007-20 13\Immobilizer</p>	<p>Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,</p>
<p>HYUNDAI\Select from vehicle\USA\Veracruz\ix55(EN)\2007-20 13\Remote</p>	<p>Program remote,</p>
<p>HYUNDAI\Select from vehicle\USA\Veracruz\ix55(EN)\2007-20 13\Smart key</p>	<p>Program smart key,ECM neutral mode,SMK neutral mode,MSL neutral mode,</p>
<p>HYUNDAI\Select from vehicle\USA\XG(XG)\2001-2005\Remote</p>	<p>Program remote,</p>
<p>HYUNDAI\Select from type\Remote control system\16 PIN\Type6(K)</p>	<p>Program remote,</p>
<p>HYUNDAI\Select from type\Immobilizer\Type6(CAN)</p>	<p>Immobilizer,neutral mode,</p>
<p>HYUNDAI\Select from type\Immobilizer\Type7(CAN)</p>	<p>Immobilizer,neutral mode,</p>
<p>HYUNDAI\Select from type\Immobilizer\Type8( K)</p>	<p>Immobilizer,ECM neutral mode,Read key count,</p>

HYUNDAI\Select from type\Smart key\China\Type1(with key slot K)	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,PDM neutral mode,
HYUNDAI\Select from type\Smart key\China\Type2(with key slot K)	Program smart key,ECM neutral mode,ESCL neutral mode,PDM neutral mode,SMK neutral mode,
HYUNDAI\Select from type\Smart key\China\Type3(without key slot K)	Program smart key,ECM neutral mode,SMK neutral mode,PDM neutral mode,ESCL neutral mode,
HYUNDAI\Select from type\Smart key\China\Type4(with key slot K)	Program smart key,
HYUNDAI\Select from type\Smart key\China\Type5(with key slot K)	Program smart key,ECM neutral mode,SMK neutral mode,MSL neutral mode,
HYUNDAI\Select from type\Smart key\China\Type6(without key slot CAN)	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
HYUNDAI\Select from type\Smart key\USA\Type1(with key slot K)	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,PDM neutral mode,

HYUNDAI\Select from type\Smart key\USA\Type2(with key slot K)	Program smart key,ECM neutral mode,ESCL neutral mode,PDM neutral mode,SMK neutral mode,
HYUNDAI\Select from type\Smart key\USA\Type3(without key slot K)	Program smart key,ECM neutral mode,SMK neutral mode,PDM neutral mode,ESCL neutral mode,
HYUNDAI\Select from type\Smart key\USA\Type4(with key slot K)	Program smart key,
HYUNDAI\Select from type\Smart key\USA\Type5(with key slot K)	Program smart key,ECM neutral mode,SMK neutral mode,MSL neutral mode,
HYUNDAI\Select from type\Smart key\USA\Type6(without key slot CAN)	Smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
HYUNDAI\Select from type\Smart key\General area\Type10(without key slot CAN)	Program smart card,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
HYUNDAI\Read PIN code	46 smart card,8A smart card,47 smart card,46 chip,PIN code calculator(-2007),

TOYOTA	TOYOTA\China>Select from vehicle\Camry\2000-2004\Immobilizer(4C)	Add master key,Add valet key,Delete key,Clear fault code,
	TOYOTA\China>Select from type\All smart key lost\All key lost	Backup EEPROM,Make key emulator,Bind key emulator,Add smart key,Delete smart key,
	TOYOTA\China>Select from type\Smart key\Type 2(12G Crown)	Program remote,Add smart key,Reset immo ECU,
	TOYOTA\China>Select from type\Smart key\Type 3	Add smart key,Delete smart key,Reset PEPS,Reset PEPS & program key,Synch ID authentication box with steering lock,Start remote control engine,
	TOYOTA\China>Select from type\IMMO\Type 4("8AE""H")	Add key,Delete key,Program immo ECU,Program engine ECU,IMMO reset(8A all key lost),
	TOYOTA\China>Select from type\IMMO\Type 2("4D"67or68)	Add key,Delete key,All key lost,Reset immo ECU,Program engine ECU,
	TOYOTA\China>Select from type\IMMO\Type 1("4C")	Add master key,Add valet key,Delete key,Clear fault code,

TOYOTA\China>Select from type\IMMO\Type 3(“4D”72“G”)	Add key,Delete key,Program immo ECU,Program engine ECU,Reset immobox(all key lost),
TOYOTA\China>Select from type\Remote\Type 1	Program remote,Delete remote,
TOYOTA\China>Select from type\Remote\Type 2	Program remote,Delete remote,
TOYOTA\China>Select from type\Smart key\Type 1	Add smart key,Delete smart key,Reset smart key,
TOYOTA\China>Select from type\Remote\Type 3	Program remote,
TOYOTA\China>Select from vehicle\Camry\2005-2009\Immobilizer(4 D)	Add key,Delete key,All key lost,
TOYOTA\China>Select from vehicle\Reiz\2008\Immobilizer(4D)	Add key,Reset immobiliser,Program remote,
TOYOTA\China>Select from vehicle\crown\2008\Immobilizer(4D)	Add key,Reset immobiliser,Smart key registration,
TOYOTA\China>Select from vehicle\Highlander\2009\Immobilizer(4D )	Add key,Delete key,All key lost,

TOYOTA\China>Select from vehicle\Prado\2010-\Smart key	Add smart key,Delete smart key,Reset immobiliser,
TOYOTA\China>Select from vehicle\crown\2008-\Smart key	Add smart key,Delete smart key,Reset immobiliser,
TOYOTA\China>Select from vehicle\RAV4\2010\Smart key	Add smart key,Delete smart key,Reset immobiliser,
TOYOTA\China>Select from vehicle\Reiz\2010-\Immobilizer(4D-G-H- 8A)	Add key,Delete key,Immobilization,Reset immobiliser(4D all key lost),Reset immobiliser(8A all key lost ),
TOYOTA\China>Select from vehicle\Corolla\2010-\Immobilizer(4D-G- H-8A)	Add key,Delete key,Immobilization,Reset immobiliser(4D all key lost),Reset immobiliser(8A all key lost ),
TOYOTA\China>Select from vehicle\Camry\2010-2013\Immobilizer(4 D-G-H-8A)	Add key,Delete key,Immobilization,Reset immobilizer(all lost),
TOYOTA\China>Select from vehicle\crown\ -2008\Smart key	Smart key registration,
TOYOTA\China>Select from vehicle\crown\ -2008\Remote	Program remote,Delete remote,

TOYOTA\China>Select from vehicle\Reiz\2008\Remote	Program remote,Delete remote,
TOYOTA\China>Select from vehicle\Camry\2005-2009\Smart key	Add smart key,Delete smart key,
TOYOTA\China>Select from vehicle\Reiz\2010-\Remote	Program remote,Delete remote,
TOYOTA\China>Select from vehicle\Camry\2013-\Remote	Program remote,Delete remote,
TOYOTA\China>Select from vehicle\Vios\2013-\Immobilizer(4D)	Add key,Delete key,All key lost,
TOYOTA\China>Select from vehicle\Corolla\2010-\Remote	Program remote,Delete remote,
TOYOTA\China>Select from vehicle\Camry\2005-2009\Remote	Program remote,Delete remote,
TOYOTA\China>Select from vehicle\Avanza\Immobilizer(4D-G-H-8A)	Add key,Delete key,
TOYOTA\China>Select from vehicle\Vios\2013-\Immobilizer(4D-G-H- 8A)	Add key,Delete key,Immobilization,Reset immobilizer(all lost),

<p>TOYOTA\China&gt;Select from type\4D-G series all key lost\Immobilizer(4D-G-H-8A)</p>	<p>Add key,Delete key,Immobilization,Reset immobiliser(4D all key lost),Reset immobiliser(8A all key lost ),</p>
<p>TOYOTA\China&gt;Select from vehicle\Highlander\2013\Immobilizer(4D-G-H-8A)</p>	<p>Add key,Delete key,Immobilization,Reset immobiliser(4D all key lost),Reset immobiliser(8A all key lost ),</p>
<p>TOYOTA\China&gt;Select from vehicle\Yaris\2008-2011\Smart key</p>	<p>Add smart key,Delete smart key,Reset immobiliser,</p>
<p>TOYOTA\China&gt;Select from vehicle\Levin\Immobilizer(4D-G-H-8A)</p>	<p>Add key,Delete key,Immobilization,Reset immobiliser(4D all key lost),Reset immobiliser(8A all key lost ),</p>
<p>TOYOTA\China&gt;Select from vehicle\Prado\2009\Immobilizer(4D)</p>	<p>Add key,Delete key,All key lost,</p>
<p>TOYOTA\China&gt;Select from type\IMMO\Type 5(Avanza)</p>	<p>Add key,</p>
<p>TOYOTA\China&gt;Select from type\IMMO\Type 6</p>	<p>Add master key,Add valet key,Delete key,</p>



	TOYOTA\China>Select from vehicle\Corolla\Immobilizer\Immobilizer( 4D-G-H-8A)	Add key,Delete key,Immobilization,Reset immobilizer(all lost),
	TOYOTA\China>Select from type\IMMO\Type 8(Avanza)	G Immobilizer reset(All key lost),DOT Immobilizer reset(All key lost),
	TOYOTA\China>Select from vehicle\Avanza\All key lost	G Immobilizer reset(All key lost),DOT Immobilizer reset(All key lost),
	TOYOTA\China>Select from vehicle\Corolla\Immobilizer\Immobilizer( 4D)	Add key,Delete key,All key lost,
	TOYOTA\China>Select from vehicle\Corolla\Smart key\Type 1	Add smart key,Delete smart key,Reset PEPS,Reset PEPS & program smart key,
	TOYOTA\China>Select from vehicle\Corolla\Smart key\Type 2	Smart key registration,Delete smart key,Reset immobox,
MITSUBISHI	MITSUBISHI>Select from type\Immobilizer\Type 1	Lost all key programming,Register pin code,
I	MITSUBISHI>Select from type\Remote\Type 1	Program remote,

MITSUBISHI\Select from type\Smart key\Type 1	Program smart key,
MITSUBISHI\Select from type\Immobilizer\Type 2	Program key,
MITSUBISHI\Select from type\Remote\Type 2	Program remote,
MITSUBISHI\Select from type\Smart key\Type 2	Program smart key,
MITSUBISHI\Select from type\Immobilizer\Type 3	Program key,
MITSUBISHI\Select from type\Remote\Type 3	Program remote,
MITSUBISHI\Select from type\Remote\Type 4	Program remote,
MITSUBISHI\Select from type\Immobilizer\Type 4	Program key,
MITSUBISHI\Select from vehicle\China\Lancer-ex\Smart key\Type 1	Program smart key,
MITSUBISHI\Select from vehicle\China\Lancer-ex\Immobilizer\Type e 1	Lost all key programming,Register pin code,

MITSUBISHI\Select from vehicle\China\Lancer-ex\Remote\Type 1	Program remote,
MITSUBISHI\Select from vehicle\China\Outlander\2013\Smart key\Type 1	Program smart key,
MITSUBISHI\Select from vehicle\China\ASX\Smart key\Type 2	Program smart key,
MITSUBISHI\Select from vehicle\China\ASX\Immobilizer\Type 4	Program key,
MITSUBISHI\Select from vehicle\China\ASX\Remote\Type 4	Program remote,
MITSUBISHI\Select from vehicle\China\TRITON\2010\Immobilize r\Type 2	Program key,
MITSUBISHI\Select from vehicle\China\TRITON\2010\Immobilize r\Type 3	Program key,
MITSUBISHI\Select from vehicle\China\TRITON\2010\Remote\Ty pe 2	Program remote,

MITSUBISHI\Select from vehicle\China\TRITON\2010\Remote\Ty pe 3	Program remote,
MITSUBISHI\Select from vehicle\China\TRITON\2011-\Immobilize r\Type 2	Program key,
MITSUBISHI\Select from vehicle\China\TRITON\2011-\Immobilize r\Type 3	Program key,
MITSUBISHI\Select from vehicle\China\Pajero Sport\2010-\Immobilizer\Type 2	Program key,
MITSUBISHI\Select from vehicle\China\Pajero Sport\2010-\Remote\Type 2	Program remote,
MITSUBISHI\Select from type\Immobilizer\Type 5	Add key,
MITSUBISHI\Select from vehicle\China\V73\Immobilizer\Type 5	Add key,
MITSUBISHI\Select from vehicle\China\V97\Immobilizer\Type 5	Add key,

MITSUBISHI\Select from vehicle\China\Galant\Immobilizer\Type 5	Add key,
MITSUBISHI\Select from vehicle\China\Grandis\Immobilizer\Type 5	Add key,
MITSUBISHI\Select from vehicle\China\Pajero Sport\2010\Immobilizer\Type 5	Add key,
MITSUBISHI\Select from vehicle\China\Pajero Sport\2010\Immobilizer\Type 4	Program key,
MITSUBISHI\Select from vehicle\China\Pajero Sport\2010\Remote\Type 4	Program remote,
MITSUBISHI\Select from vehicle\China\Pajero v93\2011-\Immobilizer\Type 5	Add key,
MITSUBISHI\Select from type\Immobilizer\Type 6	Program key,
MITSUBISHI\Select from type\Remote\Type 5	Program remote,

MITSUBISHI\Select from type\Remote\Type 6	Program remote,
MITSUBISHI\Select from vehicle\China\Lancer\Immobilizer	Program key,
MITSUBISHI\Select from vehicle\China\Lancer\Remote	Program remote,
MITSUBISHI\Select from vehicle\Australia\ASX\With smart	Program smart key,
MITSUBISHI\Select from vehicle\Australia\ASX\Without smart	Program key,
MITSUBISHI\Select from vehicle\Australia\EVO\Type 2	Program key,
MITSUBISHI\Select from vehicle\Australia\Lancer(CAN)	Program key,
MITSUBISHI\Select from vehicle\Australia\Lancer(sport)\Without smart	Program key,
MITSUBISHI\Select from vehicle\Australia\Lancer Sport back	Program key,
MITSUBISHI\Select from vehicle\Australia\Mirage\2012-With smart	Program smart key,

MITSUBISHI\Select from vehicle\Australia\CJ Lancer\Sedan	Program key,
MITSUBISHI\Select from vehicle\Australia\CJ Lancer\Sportback	Program key,
MITSUBISHI\Select from vehicle\Australia\CJ Ralliart\Sedan	Program key,
MITSUBISHI\Select from vehicle\Australia\CJ Ralliart\Sportback	Program key,
MITSUBISHI\Select from vehicle\Australia\CJ Evolution	Program key,
MITSUBISHI\Select from vehicle\Australia\Outlander(CAN)\Without smart\2012	All key lost,Program remote,
MITSUBISHI\Select from vehicle\Australia\Outlander\With smart\2013	Program smart key,
MITSUBISHI\Select from vehicle\Australia\1999-\Type 3	Program key,
MITSUBISHI\Select from vehicle\Africa\Lancer\2006-2012	Program key,

MITSUBISHI\Select from vehicle\America\USA\Lancer\Type 2(CAN)	Program key,
MITSUBISHI\Select from vehicle\America\USA\Mirage\2012	Program smart key,
MITSUBISHI\Select from vehicle\America\USA\Outlander\2014	Program smart key,
MITSUBISHI\Select from vehicle\America\USA\Outlander(Sport)\ With smart	Program smart key,
MITSUBISHI\Select from vehicle\America\USA\Outlander(Sport)\ Without smart	Program key,
MITSUBISHI\Select from vehicle\America\USA\Rvr\Without smart\2012	Program key,
MITSUBISHI\Select from vehicle\America\USA\Rvr\Without smart\2012-	Program key,
MITSUBISHI\Select from vehicle\America\South America\ASX	Program key,



MITSUBISHI\Select from vehicle\America\South America\Outlander[CAN]	Program key,
MITSUBISHI\Select from vehicle\America\South America\Outlander(2013)	Program smart key,
MITSUBISHI\Select from vehicle\America\South America\Rvr\2012	Program key,
MITSUBISHI\Select from vehicle\Europe\ASX\With smart	Program smart key,
MITSUBISHI\Select from vehicle\Europe\ASX\Without smart	Program key,
MITSUBISHI\Select from vehicle\Europe\EVO\Type 2	Program key,
MITSUBISHI\Select from vehicle\Europe\L200[CAN]\2011-	Program key,
MITSUBISHI\Select from vehicle\Europe\Lancer Sportback	Program key,
MITSUBISHI\Select from vehicle\Europe\Lancer[CAN]	Program key,

MITSUBISHI\Select from vehicle\Europe\Lancer sport	Program key,
MITSUBISHI\Select from vehicle\Europe\Mirage\2013\With smart	Program smart key,
MITSUBISHI\Select from vehicle\Europe\Outlander\With smart\2013	Program smart key,
MITSUBISHI\Select from vehicle\Europe\Outlander[CAN]	Program key,
MITSUBISHI\Select from vehicle\Asia\Israel\L200\2011	Program key,
MITSUBISHI\Select from vehicle\Asia\Israel\Lancer\cy/Sport/X	Program key,
MITSUBISHI\Select from vehicle\Asia\Israel\Outlander[CAN]\With smart	Program smart key,
MITSUBISHI\Select from vehicle\Asia\Israel\Spacewagon\With smart\2013-	Program smart key,
MITSUBISHI\Select from vehicle\Asia\Other\Delica\2007-2015	Program key,

MITSUBISHI\Select from vehicle\Asia\Other\EVO10\Immobilizatio n\2008-2010	Program key,
MITSUBISHI\Select from vehicle\Asia\Other\EVO10\Smart key	Program key,
MITSUBISHI\Select from vehicle\Asia\Other\Lancer\CY	Program key,
MITSUBISHI\Select from vehicle\Asia\Other\L200 Triton\2016-\Type 1	Program key,
MITSUBISHI\Select from vehicle\Asia\Other\L200 Triton\2016-\Type 2	Program key,
MITSUBISHI\Select from vehicle\Asia\Other\Outlander\2005-2012	Program key,
MITSUBISHI\Select from vehicle\China\TRITON\2011-\Remote\Ty pe 2	Program remote,
MITSUBISHI\Select from vehicle\China\TRITON\2011-\Remote\Ty pe 3	Program remote,

MITSUBISHI\Select from vehicle\China\Outlander\2014-\Smart key\Type 2	Program smart key,
MITSUBISHI\Select from type\Immobilizer\Type 7	All key lost,
MITSUBISHI\Select from type\Immobilizer\Type 8	Add key,
MITSUBISHI\Select from type\Immobilizer\Type 9	All key lost,Key count,
MITSUBISHI\Select from type\Immobilizer\Type 10	All key lost,Key count,
MITSUBISHI\Select from type\Smart key\Type 3	Program smart key,
MITSUBISHI\Select from type\Smart key\Type 4	Add smart key,Key count,
MITSUBISHI\Select from type\Remote\Type 7	Program remote,
MITSUBISHI\Select from type\Remote\Type 8	Program remote,
MITSUBISHI\Select from type\Immobilizer\Type 1	Program key,

MITSUBISHI\Select from vehicle\China\Mirage\With smart\2014	Add smart key,Key count,
MITSUBISHI\Select from vehicle\China\Mirage\Without smart	Add key,Program remote,
MITSUBISHI\Select from type\Immobilizer\Type 12	Immobilization,
MITSUBISHI\Select from type\Immobilizer\Type 13	Immobilization,
MITSUBISHI\Select from vehicle\China\Outlander\2013\Immobiliz er	Immobilizer,
MITSUBISHI\Select from vehicle\China\Outlander\2013\Remote	Remote,
MITSUBISHI\Select from vehicle\Australia\3000gt	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Australia\Airtrek	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Australia\Colt	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Australia\Challenger\1999-2003	Add key,Reset immobiliser,

MITSUBISHI\Select from vehicle\Australia\Express\1996-	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Australia\Express	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Australia\EVO\Type 1	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Australia\Galant	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Australia\Lancer\1996-2003	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Australia\Lancer\2003-2006	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Australia\Lancer SW\1996-2003	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Australia\Lancer Wagon	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Australia\Mirage\1996-2005	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Australia\Mirage\1996-2002	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Australia\Mirage\2004-2012	Add key,Reset immo ECU,

MITSUBISHI\Select from vehicle\Australia\Nimbus\1998-1999	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Australia\Nimbus\1999-2002	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Australia\Outlander\Without smart	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Australia\Pajero\1996-2000	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Australia\Pajero\2000-2005	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Australia\Pajero IO\1999-	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Australia\Star Wagon	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Australia\1999-\Type PIN 1\1999-	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Australia\1999-\Type PIN 2\1999-	Add key,Reset immo ECU,

MITSUBISHI\Select from vehicle\Australia\Verada\1996-2002	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Africa\L200 Triton\2006	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Africa\Outlander\2006	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Africa\Pajero\1999-2006	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Africa\Shogun\2001-2006	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\America\USA\Diamante\2000-20 06	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\America\USA\Eclipse\1996-2005	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\America\USA\Eclipse[CAN]\2006 -2009	All key lost,Key count,
MITSUBISHI\Select from vehicle\America\USA\Endeavor	Add key,Reset immo ECU,



MITSUBISHI\Select from vehicle\America\USA\Endeavor[CAN]\20 06-2009	All key lost,Key count,
MITSUBISHI\Select from vehicle\America\USA\EVO	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\America\USA\Galant\2000-2003	Add key,Reset immobilser,
MITSUBISHI\Select from vehicle\America\USA\Galant[CAN]\2006- 2009	All key lost,Key count,
MITSUBISHI\Select from vehicle\America\USA\Galant[PIN1]\1996 -2000	Add key,Reset immobilser,
MITSUBISHI\Select from vehicle\America\USA\Galant[PIN1]\2000 -2003	Add key,Reset immobilser,
MITSUBISHI\Select from vehicle\America\USA\Galant[PIN2]\1996 -2000	Add key,Reset immobilser,
MITSUBISHI\Select from vehicle\America\USA\Galant[PIN2]\2000 -2003	Add key,Reset immobilser,

MITSUBISHI\Select from vehicle\America\USA\Lancer\Type 1	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\America\USA\Montero\1999-2000 0	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\America\USA\Montero\2001-2006 6	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\America\USA\Montero Sport\1999-2004	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\America\USA\Outlander\2000-2003 03	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\America\USA\Outlander\2004-2006 06	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\America\USA\Outlander\CAN\2007-2009 07-2009	All key lost,Key count,

MITSUBISHI\Select from vehicle\America\South America\Diamonte	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\America\South America\Eclipse	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\America\South America\Eclipse[CAN]	All key lost,Key count,
MITSUBISHI\Select from vehicle\America\South America\Endeavor	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\America\South America\Endeavor[CAN]	All key lost,Key count,
MITSUBISHI\Select from vehicle\America\South America\EVO	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\America\South America\Galant	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\America\South America\Galant[CAN]	All key lost,Key count,

MITSUBISHI\Select from vehicle\America\South America\Lancer	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\America\South America\Lancer[CAN]	Program key,
MITSUBISHI\Select from vehicle\America\South America\Montero	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\America\South America\Montero[CAN]\2007	Program key,
MITSUBISHI\Select from vehicle\America\South America\Outlander	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\America\South America\Pajero\v97/v98	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Europe\3000gt	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Europe\Carisma	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Europe\Colt Lander	Add key,Reset immo ECU,

MITSUBISHI\Select from vehicle\Europe\Eclipse	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Europe\EVO\Type 1	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Europe\Galant Wagon	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Europe\Galant\1996-2004	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Europe\Grandis	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Europe\l-miev	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Europe\L200	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Europe\L400	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Europe\Lancer	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Europe\Lancer Wagon	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Europe\Magunm	Add key,Reset immo ECU,

MITSUBISHI\Select from vehicle\Europe\Outlander\Without smart	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Europe\Pajero\1999-2006	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Europe\Pajero PININ	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Europe\Shogun	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Europe\Sigma	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Europe\Space Wagon	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Asia\Japan\Carisma\1996-2004	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Asia\Japan\Colt\1996-2000	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Asia\Japan\Eclipse\1996-2003	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Asia\Japan\Galant[PIN1]\1996-2	Add key,Reset immobiliser,
003	

MITSUBISHI\Select from vehicle\Asia\Japan\Galant[PIN2]\1996-2 003	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Asia\Japan\Lancer\1996-2003	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Asia\Japan\Lancer\2003-2006	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Asia\Japan\Lancer SW\1996-2003	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Asia\Japan\L200\1999-2006	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Asia\Japan\Montero\1999-2000	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Asia\Japan\Montero\2001-2006	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Asia\Japan\Montero IO\1999-	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Asia\Japan\Montero Sport\1999-2004	Add key,Reset immobiliser,

MITSUBISHI\Select from vehicle\Asia\Japan\Nativa\2001-2003	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Asia\Japan\Pajero\1999-2000	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Asia\Japan\Pajero\2000-2005	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Asia\Japan\Pajero IO\1999-	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Asia\Japan\Pajero PININ\1999-	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Asia\Japan\Pajero sport\1999-2003	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Asia\Japan\Shogun\1996-2000	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Asia\Japan\Shogun\2000-2005	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Asia\Japan\Shogun PININ\1999-	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Asia\Japan\Shogun Sport\1999-2003	Add key,Reset immobiliser,



MITSUBISHI\Select from vehicle\Asia\Japan\Space Gear\1996-	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Asia\Japan\Space Runner\1998-1999	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Asia\Japan\Space Runner\1999-2002	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Asia\Japan\Space Start[PIN1]\1999-	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Asia\Japan\Space Start[PIN2]\1999-	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Asia\Japan\Space Wagon\1998-1999	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Asia\Japan\Space Wagon\1999-2002	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Asia\Japan\3000 GT\1996-2001	Add key,Reset immobiliser,

MITSUBISHI\Select from vehicle\Asia\Israel\Carisma	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Asia\Israel\Eclipse	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Asia\Israel\EclipseDis mmna	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Asia\Israel\Endeavor	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Asia\Israel\Galant\1994-2004	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Asia\Israel\Grandis	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Asia\Israel\GT3000	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Asia\Israel\L400	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Asia\Israel\Lancer\ck/cs/sw/Sport  back	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Asia\Israel\Mirage	Add key,Reset immo ECU,

MITSUBISHI\Select from vehicle\Asia\Israel\Magnum	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Asia\Israel\Nativa	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Asia\Israel\Outlander\2013	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Asia\Israel\Pajero	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Asia\Israel\Sigma	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Asia\Israel\Spacewagon\Without smart	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Asia\Israel\Space\Star/gear	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Asia\Israel\Strada	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Asia\Other\EVO 8	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Asia\Other\EVO 9	Add key,Reset immo ECU,

MITSUBISHI\Select from vehicle\Asia\Other\Grandis	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Asia\Other\Lancer\CS	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Asia\Other\L200 Triton\2016	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Asia\Other\L200 Triton\2016-\Type 3	All key lost,
MITSUBISHI\Select from vehicle\Asia\Other\Pajero\CK\2000-2010	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Greece\Carisma\1996-2004	Add key,Reset immobilser,
MITSUBISHI\Select from vehicle\Greece\Colt\1996-2000	Add key,Reset immobilser,
MITSUBISHI\Select from vehicle\Greece\Colt New\2002-	Add key,Reset immobilser,
MITSUBISHI\Select from vehicle\Greece\Galant\1996-2003	Add key,Reset immobilser,
MITSUBISHI\Select from vehicle\Greece\Lancer\1996-2003	Add key,Reset immobilser,

MITSUBISHI\Select from vehicle\Greece\Lancer SW\1996-2003	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Greece\L200\1999-2006	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Greece\Pajero\1996-2000	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Greece\Pajero New\2000-2003	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Greece\Pajero PININ\1999-	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Greece\Pajero sport\1999-2003	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Greece\Space Gear\1996-	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Greece\Space Runner\1998-1999	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Greece\Space Runner\1999-2002	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Greece\Space Start\1999-	Add key,Reset immobiliser,

MITSUBISHI\Select from vehicle\Greece\3000gt\1996-	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Middle East\Eclipse	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Middle East\Eclipse Dic mmna	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Middle East\Endeavor	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Middle East\GT3000	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Middle East\Galant\E50/EA/DJ1/DJ2/DJ3	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Middle East\Grandis	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Middle East\Lancer\ck/cs/sw	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Middle East\L200\2007	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Middle East\Magna	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Middle East\Nativa	Add key,Reset immo ECU,

MITSUBISHI\Select from vehicle\Middle East\Outlander\cu/cw	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Middle East\Pajero\Q/CK/BK/IO/Sport	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Middle East\Strada	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Middle East\Space\Star/gear/wagon	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Middle East\Sigma	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\China\Pajero Sport\2017-\Smart key	Program smart key,
MITSUBISHI\Select from vehicle\China\TRITON\2017-\Smart key	Program smart key,
MITSUBISHI\Select from vehicle\China\Attraga\2015-\Smart key	Program smart key,
MITSUBISHI\Select from vehicle\Australia\Outlander(CAN)\Withou t smart\2013-	Program remote,Add key,

	MITSUBISHI\Select from vehicle\Australia\Outlander(CAN)\With smart\2012	Program smart key,
	MITSUBISHI\Select from vehicle\Australia\Outlander(CAN)\With smart\2013-	Program smart key,
	MITSUBISHI\Select from vehicle\America\USA\Galant\2004-2005	Add key,Reset immobiliser,
	MITSUBISHI\Select from vehicle\America\USA\Galant\2006-	All key lost,Key count,
HONDA	HONDA\Select from type\Immobilizer\16 PIN\IMMO1	Add one key,All key lost,Reset key,
	HONDA\Select from type\Immobilizer\16 PIN\IMMO2	Add one key,All key lost,Reset key,
	HONDA\Select from type\Immobilizer\16 PIN\IMMO3	Add key,All key lost,Reset immobiliser,
	HONDA\Select from type\Immobilizer\16 PIN\Check IMMO type	Immo type,
	HONDA\Select from type\Immobilizer\3-pin connector\Check IMMO type	Search IMMO type,



	HONDA>Select from type\Immobilizer\3-pin connector\IMMO1	Add 1 key,All key lost,Reset key,
	HONDA>Select from type\Immobilizer\3-pin connector\IMMO2	Add one key,All key lost,Reset key,
	HONDA>Select from type\Immobilizer\3-pin connector\IMMO3	Add key,All key lost,Odometer adjustment,
	HONDA>Select from type\Smart key\Knob type	Add one key,All key lost,Detect smart key,
	HONDA>Select from type\Smart key\Button type 1	Add one key,All key lost,
	HONDA>Select from type\Remote\IMMO9	Add remote>Delete remote,
	HONDA>Select from type\Immobilizer\16 PIN\IMMO4	Reset immobbox,Reset ECM,
	HONDA>Select from type\Smart key\Button type 2	Add 1 key,All key lost,
	HONDA>Select from type\Smart key\Button type 3	Add 1 key,All key lost,
	HONDA>Select from type\Immobilizer\3-pin connector\IMMO4	Reset immobbox,Reset ECM,
DS	DS>Select from vehicle\DS4\Smart key	All smart key lost,
	DS>Select from type\Immobilizer\Type 1	Program key,

DS>Select from type\Smart key\Type 1	All smart key lost,
DS>Select from type\Immobilizer\Type 3	Program key,
DS>Select from type\Immobilizer\Type 2	Program key,
DS>Select from vehicle\DS5\Immobilizer\Type 2	Program key,
DS>Select from vehicle\DS5\Immobilizer\Type 3	Program key,
DS>Select from vehicle\DS3\Immobilizer	Program key,
DS>Select from vehicle\DS4\Immobilizer	Program key,
DS>Select from vehicle\DS5\Immobilizer\Type 1	Program key,
DS>Select from vehicle\DS6\Immobilizer	Program key,
DS>Select from vehicle\DS5\Smart key	All smart key lost,
DS>Select from vehicle\DS6\Smart key	All smart key lost,
DS>Select from type\Immobilizer\Type 4	Read key/remote count,Immobilization,Program remote,
DS>Select from type\Replace engine ECUM745	Replace engine ECU,
DS\Read PIN code	Type 1,Type 2,Type 3,Type 4 (K line),

BENTLEY	BENTLEY\Flying Spur\2012 \Immobilizer	Learn key,Read pin code,
	BENTLEY\Mulsanne\6.8 liter\Immobilizer/Smart key	Backup immo data,Make dealer key,Learn key,Clear airbag fault code,
SMART	SMART\BR451\Immobilizer	Program key,
	SMART\BR450\2002\Immobilizer	Program key,
	SMART\BR453\Immobilizer	Read PIN code,Program key,Recover configured data,Test(disable),
LUXGEN	LUXGEN7 SUV\Smart key	Program smart key,PIN initialization,Program ICU,Program ECM,Detect learning status,Read pin code>Delete ICU>Delete EMC>Delete KCU,Clear fault code,Program KCU,

	LUXGEN5 SEDAN\Smart key	<p>Program smart key,PIN initialization,Program ICU,Program ECM,Detect learning status,Read pin code&gt;Delete ICU&gt;Delete EMC&gt;Delete KCU,Clear fault code,Program KCU,</p>
	LUXGEN7 MPV\Smart key	<p>Program smart key,PIN initialization,Program ICU,Program ECM,Detect learning status,Read pin code&gt;Delete ICU&gt;Delete EMC&gt;Delete KCU,Clear fault code,Program KCU,</p>
	LUXGENMASTER CEO\Smart key	<p>Program smart key,PIN initialization,Program ICU,Program ECM,Detect learning status,Read pin code&gt;Delete ICU&gt;Delete EMC&gt;Delete KCU,Clear fault code,Program KCU,</p>

	LUXGEN\U6 SUV\Smart key	<p>Program smart key,PIN initialization,Program ICU,Program ECM,Detect learning status,Read pin code&gt;Delete ICU&gt;Delete EMC&gt;Delete KCU,Clear fault code,Program KCU,</p>
	LUXGEN\New 7 MPV\Smart key	<p>Program smart key,PIN initialization,Program ICU,Program ECM,Detect learning status,Read pin code&gt;Delete ICU&gt;Delete EMC&gt;Delete KCU,Clear fault code,Program KCU,</p>
	LUXGEN\New 7 SUV\Smart key	<p>Program smart key,PIN initialization,Program ICU,Program ECM,Detect learning status,Read pin code&gt;Delete ICU&gt;Delete EMC&gt;Delete KCU,Clear fault code,Program KCU,</p>

	LUXGEN\LUXGEN 5(new)\Smart key	Program smart key,PIN initialization,Program ICU,Program ECM,Detect learning status,Read pin code>Delete ICU>Delete EMC>Delete KCU,Clear fault code,Program KCU,
BUICK	BUICK\Excele GT/XT\2014 \Immobilizer	All key lost,Add key,Read key count,Clear fault code,
	BUICK\Excele GT/XT\2014 \Smart key	All smart key lost,Add smart key,Read key count,Clear fault code,
	BUICK\Envision\Immobilizer	All key lost,Add key,Read key count,Clear fault code,
	BUICK\Encore\Immobilizer	All key lost,Add key,Read key count,Clear fault code,
	BUICK\GL8\2011-2016\Immobilizer	All key lost,Add key,Read key count,Clear fault code,
	BUICK\Lacrosse\2016\Immobilizer\Type 1	All key lost,Add key,Read key count,Clear fault code,
	BUICK\Regal\2016\Immobilizer	All key lost,Add key,Read key count,Clear fault code,

BUICK\Verano\2015-\Immobilizer	All key lost,Add key,Read key count,Clear fault code,
BUICK\Encore\Smart key	All smart key lost,Add smart key,Read key count,Clear fault code,
BUICK\GL8\2011-2016\Smart key\Type 1	All smart key lost,Add smart key,Read key count,Clear fault code,
BUICK\Lacrosse\2016\Smart key	All smart key lost,Add smart key,Read key count,Clear fault code,
BUICK\Regal\2016\Smart key	All smart key lost,Add smart key,Read key count,Clear fault code,
BUICK\Verano\2015-\Smart key	All smart key lost,Add smart key,Read key count,Clear fault code,
BUICK\Excelle GT/XT\2015-\Immobilizer	All key lost,Add key,
BUICK\Excelle GT/XT\2015-\Smart key	All smart key lost,Add smart key,
BUICK\Excelle\2013-\Immobilizer\Type 1	Program key,Delete key,Read key count,

BUICK\Lacrosse\2017-\Smart key	All smart key lost,Add smart key,Read smart key count,Clear fault code,
BUICK\Allure\2005-2008\Immobilizer	Lost all key,Read key count,
BUICK\Enclave\Immobilizer	Lost all key,Read key count,
BUICK\Lucerne\Immobilizer	Lost all key,Read key count,
BUICK\Park Avenue\Immobilizer	Lost all key,Read key count,
BUICK\Terraza\Immobilizer	Lost all key,Read key count,
BUICK\Excelle\2012\Immobilizer	Program key,Turn to neutral mode,
BUICK\GL8\2004-2010\Immobilizer	Program key,
BUICK\Excelle\2012\Remote\Type 1	Program remote,
BUICK\Excelle\2013-\Remote	Program remote,Read remote count,
BUICK\Enclave\Remote	Program remote>Delete remote,
BUICK\Park Avenue\Remote	Program remote>Delete remote,
BUICK\Lacrosse\Remote	Program remote,
BUICK\Century\Remote	Program remote,
BUICK\Regal\2016\Remote	Program remote,
BUICK\FirstLand\Remote	Program remote,
BUICK\Royaum\Immobilizer	Program key,



BUICK\GL8\2017-\Smart key\Type 1	Read key count,All smart key lost,Add smart key,
BUICK\Envision\Smart key-2017	Add smart key,All smart key lost,Read smart key count,
BUICK\Lacrosse\2016\Immobilizer\Type 2	Program key,
BUICK\Excelle\2012\Remote\Type 2	Remote,
BUICK\Excelle\2013\Immobilizer\Type 2	All key lost,Add key,
BUICK\GL8\2011-2016\Smart key\Type 2	Add smart key,All smart key lost,Read smart key count,
BUICK\Envision\Smart key\2017+	All smart key lost,Add smart key,Read smart key count,Clear fault code,
BUICK\Regal\2017-\Smart key	All smart key lost,Add smart key,Read smart key count,Clear fault code,
BUICK\GL8\2017-\Smart key\Type 2(2.5L)	All smart key lost,Add smart key,Read smart key count,Clear fault code,
BUICK\Verano\2017\Immobilizer	All key lost,Clear fault code,Read key count,

	BUICK\Verano\2017-\Smart key\Smart key	All smart key lost,Add smart eky,Read smart key count,
	BUICK\Read PIN code	Read pin code type1,Read pin code type2,Read pin code type3,Read pin code type4,Read pin code type5,Read pin code type6(read via BCM),Switch ignition on,
CADILLAC	CADILLAC\ATS\Immobilizer	All key lost,Add key,Read key count,Clear fault code,
	CADILLAC\ATSL\2015-2016\Immobilizer	All key lost,Add key,Read key count,Clear fault code,
	CADILLAC\SRX\2010-2014\Immobilizer	All key lost,Add key,Read key count,Clear fault code,
	CADILLAC\SRX\2015-\Immobilizer	All key lost,Add key,Read key count,Clear fault code,
	CADILLAC\XTS\2015\Immobilizer	All key lost,Add key,Read key count,Clear fault code,
	CADILLAC\ATS\Smart key	All smart key lost,Add smart key,Read key count,Clear fault code,

CADILLAC\ATSL\2015-2016\Smart key\Type 1	All smart key lost,Add smart key,Read key count,Clear fault code,
CADILLAC\SRX\2010-2014\Smart key\Type 1	All smart key lost,Add smart key,Read key count,Clear fault code,
CADILLAC\SRX\2015-\Smart key	All smart key lost,Add smart key,Read key count,Clear fault code,
CADILLAC\CT6\2016\Smart key	Add smart key,All smart key lost,Read smart key count,
CADILLAC\CTS\2013-\Smart key	Add smart key,All smart key lost,Read smart key count,
CADILLAC\Escalade\Smart key	Add smart key,All smart key lost,Read smart key count,
CADILLAC\CT6\2017\Smart key	All smart key lost,Add smart key,Read smart key count,Clear fault code,
CADILLAC\XT5\2017\Smart key	All smart key lost,Add smart key,Read smart key count,Clear fault code,

CADILLAC\CTS\2008-2012\One-click\Immobilizer	Lost all key,Read key count,
CADILLAC\DTS\2008-2010\Immobilizer	Lost all key,Read key count,
CADILLAC\Escalade\Immobilizer	Lost all key,Read key count,
CADILLAC\SRX\2004-2009\Immobilizer	Lost all key,Read key count,
CADILLAC\SLS\2005-2009\Immobilizer	All key lost,
CADILLAC\SLS\2013\Immobilizer	All key lost,
CADILLAC\SLS\2009-\Immobilizer	All key lost,
CADILLAC\Escalade\Remote	Program remote,Delete remote,
CADILLAC\CTS\Remote	Program remote,
CADILLAC\CTS\2003-2007\Immobilizer	All key lost,
CADILLAC\CTS\2008-2012\Knob type\Smart key	All key lost,
CADILLAC\ATSL\2017\Smart key	All smart key lost,Add smart key,Read smart key count,Clear fault code,
CADILLAC\XTS\2016-\Smart key	Add smart key,All smart key lost,Read smart key count,
CADILLAC\XTS\2015\Smart key	Add smart key,All smart key lost,Read smart key count,
CADILLAC\SRX\2010-2014\Smart key\Type 2	Add smart key,All smart key lost,Read smart key count,

	CADILLAC\ATSL\2015-2016\Smart key\Type 2	Add smart key,All smart key lost,Read smart key count,
	CADILLAC\XTS\2018\Smart key	All smart key lost,Add smart key,Read smart key count,Clear fault code,
	CADILLAC\Read PIN code	Read pin code type1,Read pin code type2,Read pin code type3,Read pin code type4,Read pin code type5,Read pin code type6(read via BCM),Switch ignition on,
CHEVROLET	CHEVROLET\China\Aveo\Type 2\Immobilizer	All key lost,Add key,Read key count,Clear fault code,
	CHEVROLET\China\Cruze\2013\Immobilizer	All key lost,Add key,Read key count,Clear fault code,
	CHEVROLET\China\Malibu\2015\Immobilizer	All key lost,Add key,Read key count,Clear fault code,
	CHEVROLET\China\Trax\Immobilizer	All key lost,Add key,Read key count,Clear fault code,
	CHEVROLET\China\Aveo\Type 2\Smart key	All smart key lost,Add smart key,Read key count,Clear fault code,

CHEVROLET\China\Cruze\2013\Smart key	All smart key lost,Add smart key,Read key count,Clear fault code,
CHEVROLET\China\Malibu\2015\Smart key	All smart key lost,Add smart key,Read key count,Clear fault code,
CHEVROLET\China\Trax\Smart key	All smart key lost,Add smart key,Read key count,Clear fault code,
CHEVROLET\China\Malibu\2016\Smart key	Add smart key,All smart key lost,Read smart key count,
CHEVROLET\China\Lova\2016\Immobilizer	All key lost,Add key,
CHEVROLET\China\Lova\2016\Smart key	All smart key lost,Add smart key,
CHEVROLET\China\Epica\2013\Immobilizer	Program key>Delete key,Read key count,
CHEVROLET\China\Captiva\IMMO\Without smart\Type 2	Lost all key,Read key count,
CHEVROLET\China\Captiva\IMMO\Without smart\Type 1	Program key,

CHEVROLET\China\Aveo\Type 1\Immobilizer	Program key, Turn to neutral mode,
CHEVROLET\China\Lova\2015\Immobilizer	Program key, Turn to neutral mode,
CHEVROLET\China\Epica\2012\Immobilizer	All key lost, -09 Epica read PIN code,
CHEVROLET\China\Lova\2015\Remote	Program remote,
CHEVROLET\China\Sail\Remote	Program remote, Read key count,
CHEVROLET\China\Epica\2013\Remote	Program remote, Read remote count,
CHEVROLET\China\Captiva\Remote\Ty pe 1	Program remote, Delete remote,
CHEVROLET\China\Captiva\Remote\Ty pe 2	Program remote, Delete remote,
CHEVROLET\China\Malibu\2007-2011\ Remote	Program remote, Delete remote,
CHEVROLET\China\Sail 3\Remote	Program remote, Read remote count,
CHEVROLET\China\Lumina\2006-2011\ Immobilizer	Program key,
CHEVROLET\China\Lova\2016\Remote	Program remote, Read remote count,

CHEVROLET\China\Sai\IMMO	Clear fault code,Program key,Delete key,
CHEVROLET\China\Captiva\IMMO\With smart\Smart key	All key lost,
CHEVROLET\China\Camaro\2013\Immobilizer	All key lost,Add key,Read key count,Clear fault code,
CHEVROLET\China\Camaro\2013\Smart key	All smart key lost,Add smart key,Read key count,Clear fault code,
CHEVROLET\China\Camaro\2016-\Smart key	All smart key lost,Add smart key,Read smart key count,Clear fault code,
CHEVROLET\China\Malibu XL\2016\Immobilizer	All key lost,Add key,Read key count,Clear fault code,
CHEVROLET\China\Malibu XL\2016\Smart key	All smart key lost,Add smart key,Read key count,Clear fault code,
CHEVROLET\China\Malibu XL\2017\Smart key	All smart key lost,Add smart key,Read smart key count,Clear fault code,
CHEVROLET\China\Aveo\Immobilizer	Program key,Turn to neutral mode,



CHEVROLET\China\Zafira\99-	Immobilizer,Erase key,
CHEVROLET\China\Colorado\IMMO\Wit hout smart	All key lost,Clear fault code,Read key count,Add key,
CHEVROLET\China\Colorado\IMMO\Wit h smart	All key lost,Add key,Read key count,Clear fault code,
CHEVROLET\China\Cruze\2017-\Smart key	All smart key lost,Add smart key,Read smart key count,Clear fault code,
CHEVROLET\China\Cruze\2014-2016\Smart mart key	Add smart key,All smart key lost,Read smart key count,
CHEVROLET\China\Cruze\2014-2016\Immobilizer	All key lost,Add key,Read key count,Clear fault code,
CHEVROLET\China\Camaro\2014-2015 \Immobilizer	All key lost,Add key,Read key count,Clear fault code,
CHEVROLET\China\Camaro\2014-2015 \Smart key	Add smart key,All smart key lost,Read smart key count,
CHEVROLET\China\Equinox\2017\Smart t key	All smart key lost,Add smart key,Read smart key count,Clear fault code,

	CHEVROLET\China\Read PIN code	Read pin code type1,Read pin code type2,Read pin code type3,Read pin code type4,Read pin code type5,Read pin code type6(read via BCM),Switch ignition on,
BAIC	BAIC\Immobilizer\D50	Detect key count,Add key,Delete key,
	BAIC\Immobilizer\X25	Program key,Delete key,Check immo lock,
	BAIC\Immobilizer\X35	Program key,Delete key,Check immo lock,
	BAIC\Immobilizer\X55	Program key,Delete key,Check immo lock,
	BAIC\Immobilizer\X65	Program key,Delete key,Check immo lock,
	BAIC\Immobilizer\E series	Program key,Delete key,Check key status,Check immo lock,
	BAIC\Immobilizer\D20	Program key,Delete key,Check key status,Check immo lock,
	BAIC\Immobilizer\BJ40	Program key,
	BAIC\Immobilizer\BJ80	Program key,

BAIC\Immobilizer\S3	Program key,Delete key,Reset PIN code,Immo resetting(all key lost),Immobilization,Reset engine,Program engine,Clear fault code,
BAIC\Smart key\BJ80	Program key,
BAIC\Smart key\CC(C60F)	Program key,
BAIC\Smart key\D280	Program key,
BAIC\Smart key\D50(C50E)	Program key,
BAIC\Smart key\D60	Program key,
BAIC\Smart key\D61	Program key,
BAIC\Smart key\D70(C70G)	Program key,
BAIC\Smart key\D80(C80G)	Program key,
BAIC\Smart key\X55	Program key,
BAIC\Smart key\X65	Program key,
BAIC\Immobilizer\S50	Program key,Delete key,Check immo lock,
BAIC\Immobilizer\S3L	Program key,Delete key,Reset PIN code,Immo resetting(all key lost),Immobilization,Reset engine,Program engine,Clear fault code,

BAIC\Immobilizer\S2	Program key,Delete key,Reset PIN code,Immo resetting(all key lost),Immobilization,Reset engine,Program engine,Clear fault code,
BAIC\Immobilizer\H2	Program key,Delete key,Reset PIN code,Immo resetting(all key lost),Immobilization,Reset engine,Program engine,Clear fault code,
BAIC\Immobilizer\H6	Program key,Delete key,Reset PIN code,Immo resetting(all key lost),Immobilization,Reset engine,Program engine,Clear fault code,
BAIC\Smart key\BJ40	Program key,
BAIC\Smart key\H3	Program smart key,Program ESCL,
BAIC\Smart key\H3F	Program smart key,Program ESCL,
BAIC\Smart key\S3L	Program smart key,
BAIC\Smart key\S6	Program smart key,

	BAIC\Smart key\H2	Program smart key,
	BAIC\Remote\BJ40L	Program remote,
	BAIC\Remote\S6	Program remote,
	BAIC\Immobilizer\BJ40L	Read key count,Program key,Delete key,
	BAIC\Immobilizer\EX200	Program key,Delete key,
	BAIC\Immobilizer\EX260	Program key,Delete key,
	BAIC\Immobilizer\EU220	Add key,Delete key,
	BAIC\Immobilizer\EU260	Add key,Delete key,
	BAIC\Immobilizer\EV150	Program key,Delete key,
	BAIC\Immobilizer\EV150	Program key,Delete key,
	BAIC\Immobilizer\EV160	Program key,Delete key,
	BAIC\Immobilizer\EV200	Program key,Delete key,
	BAIC\Smart key\S50	Program key,
	BAIC\Smart key\S5	Program smart key,Program ESCL,
	BAIC\Smart key\D230	Program key,
	BAIC\Immobilizer\BJ20	Program key,
	BAIC\Smart key\BJ20	Program key,
BAOJUN	BAOJUN\Immobilizer\560	Check key count,Program key,Delete key,Reset engine ECM,Module programming,

BAOJUN\Immobilizer\330	Check key count,Program key,Delete key,
BAOJUN\Smart key\560	Add key,All key lost,
BAOJUN\Immobilizer\310	Check key count,Program key,Delete key,Reset engine ECM,Module programming,
BAOJUN\Immobilizer\730	Check key count,Program key,Delete key,Reset engine ECM,Module programming,
BAOJUN\Immobilizer\630	Read key count,Program key,Delete key,Program remote,
BAOJUN\Immobilizer\610	Read key count,Program key,Delete key,Program remote,
BAOJUN\Immobilizer\510	Check key count,Program key,Delete key,Reset engine ECM,Module programming,
BAOJUN\Smart key\730	Add key,All key lost,
BAOJUN\Smart key\510	Add key,All key lost,
BAOJUN\Smart key\310 Wagon	Add key,All key lost,
BAOJUN\Immobilizer\530	Check key count,Program key,Delete key,Reset engine ECM,Module programming,

YEMA AUTO	YEMA AUTO\T70\IMMO	Add key,Delete key,Replace ECM,Replace IMMO,Replace IMMO & ECM,Read key info.,
	YEMA AUTO\T70\PEPS	Program smart key,Program EMS,Program ESCL,Program PEPS,Reset EMS,Reset PEPS,
	YEMA AUTO\T70\BCM	Program remote,Read remote count,
QOROS	QOROS\Smart key	Program 1 smart key,Program 2 smart keys,
BYD	BYD\Smart key\Surui	Read key info.,Clear & program working key,Program smart key,Program IK controller,Generate working key,Key recognition & unlocking,
	BYD\Smart key\Sirui	Read key info.,Clear & program working key,Program smart key,Program IK controller,Generate working key,Key recognition & unlocking,

	BYD\Smart key\Qin	Read key info.,Clear & program working key,Program smart key,Program IK controller,Generate working key,Key recognition & unlocking,
	BYD\Smart key\Tang	Read key info.,Clear & program working key,Program smart key,Program IK controller,Generate working key,Key recognition & unlocking,
	BYD\Smart key\S7	Read key info.,Clear & program working key,Program smart key,Program IK controller,Generate working key,Key recognition & unlocking,
	BYD\Smart key\G5	Read key info.,Clear & program working key,Program smart key,Program IK controller,Generate working key,Key recognition & unlocking,



	BYD\Smart key\G6	Read key info.,Clear & program working key,Program smart key,Program IK controller,Generate working key,Key recognition & unlocking,
	BYD\Smart key\L3	Read key info.,Clear & program working key,Program smart key,Program IK controller,Generate working key,Key recognition & unlocking,
	BYD\Smart key\F3	Read key info.,Clear & program working key,Program smart key,Program IK controller,Generate working key,Key recognition & unlocking,
	BYD\Smart key\S6	Read key info.,Clear & program working key,Program smart key,Program IK controller,Generate working key,Key recognition & unlocking,

	BYD\Smart key\VA	Read key info.,Clear & program working key,Program smart key,Program IK controller,Generate working key,Key recognition & unlocking,
	BYD\Smart key\E6A	Read key info.,Clear & program working key,Program smart key,Program IK controller,Generate working key,Key recognition & unlocking,
	BYD\Smart key\E6B	Read key info.,Clear & program working key,Program smart key,Program IK controller,Generate working key,Key recognition & unlocking,
	BYD\Smart key\E6Y	Read key info.,Clear & program working key,Program smart key,Program IK controller,Generate working key,Key recognition & unlocking,

	BYD\Smart key\F0	Read key info.,Clear & program working key,Program smart key,Program IK controller,Generate working key,Key recognition & unlocking,
	BYD\Smart key\G3	Read key info.,Clear & program working key,Program smart key,Program IK controller,Generate working key,Key recognition & unlocking,
	BYD\Smart key\M6	Read key info.,Clear & program working key,Program smart key,Program IK controller,Generate working key,Key recognition & unlocking,
	BYD\Smart key\F3R	Read key info.,Clear & program working key,Program smart key,Program IK controller,Generate working key,Key recognition & unlocking,

	BYD\Smart key\Song	Read key info.,Clear & program working key,Program smart key,Program IK controller,Generate working key,Key recognition & unlocking,
	BYD\Smart key\Qin EV	Read key info.,Clear & program working key,Program smart key,Program IK controller,Generate working key,Key recognition & unlocking,
	BYD\Smart key\New F3	Read key info.,Clear & program working key,Program smart key,Program IK controller,Generate working key,Key recognition & unlocking,
	BYD\Smart key\Yuan	Read key info.,Clear & program working key,Program smart key,Program IK controller,Generate working key,Key recognition & unlocking,

	BYD\Smart key\E5	Read key info.,Clear & program working key,Program smart key,Program IK controller,Generate working key,Key recognition & unlocking,
	BYD\Smart key\F3CK	Read key info.,Clear & program working key,Program smart key,Program IK controller,Generate working key,Key recognition & unlocking,
	BYD\Smart key\F6	Read key info.,Clear & program working key,Program smart key,Program IK controller,Generate working key,Key recognition & unlocking,
	BYD\Smart key\G3R	Read key info.,Clear & program working key,Program smart key,Program IK controller,Generate working key,Key recognition & unlocking,

	BYD\Smart key\K9A	Read key info.,Clear & program working key,Program smart key,Program IK controller,Generate working key,Key recognition & unlocking,
	BYD\Smart key\K9B	Read key info.,Clear & program working key,Program smart key,Program IK controller,Generate working key,Key recognition & unlocking,
	BYD\Smart key\S8	Read key info.,Clear & program working key,Program smart key,Program IK controller,Generate working key,Key recognition & unlocking,
JAC	JAC\IMMO\Refine S3\Delphi IMMO	Clear fault code,Reset PIN code,Program key,Delete key,Reset immobiliser,Immobilization,Reset engine ECU,Program engine ECU,

	<p>JAC\IMMO\Pinnacle\Delphi IMMO</p>	<p>Clear fault code,Reset PIN code,Program key&gt;Delete key,Reset immobiliser,Immobilization,Reset engine ECU,Program engine ECU,</p>
	<p>JAC\IMMO\Tongyue\Delphi IMMO</p>	<p>Clear fault code,Reset PIN code,Program key&gt;Delete key,Reset immobiliser,Immobilization,Reset engine ECU,Program engine ECU,</p>
	<p>JAC\IMMO\Heyue RS\Delphi IMMO</p>	<p>Clear fault code,Reset PIN code,Program key&gt;Delete key,Reset immobiliser,Immobilization,Reset engine ECU,Program engine ECU,</p>

	<p>JAC\IMMO\Heyue sedan\Delphi IMMO</p>	<p>Clear fault code,Reset PIN code,Program key&gt;Delete key,Reset immobiliser,Immobilization,Reset engine ECU,Program engine ECU,</p>
	<p>JAC\IMMO\Yueyue\Delphi IMMO</p>	<p>Clear fault code,Reset PIN code,Program key&gt;Delete key,Reset immobiliser,Immobilization,Reset engine ECU,Program engine ECU,</p>
	<p>JAC\IMMO\Sunray\Delphi IMMO</p>	<p>Clear fault code,Reset PIN code,Program key&gt;Delete key,Reset immobiliser,Immobilization,Reset engine ECU,Program engine ECU,</p>



	<p>JAC\IMMO\Refine S3\UAES IMMO</p>	<p>Clear fault code,Read key count,Add key,Detect key,Immobilization,Program engine ECU,Reset engine ECU,Reset immobiliser,Delete key,</p>
	<p>JAC\IMMO\Tongyue\UAES IMMO</p>	<p>Clear fault code,Read key count,Add key,Detect key,Immobilization,Program engine ECU,Reset engine ECU,Reset immobiliser,Delete key,</p>
	<p>JAC\IMMO\Heyue RS\UAES IMMO</p>	<p>Clear fault code,Read key count,Add key,Detect key,Immobilization,Program engine ECU,Reset engine ECU,Reset immobiliser,Delete key,</p>

<p>JAC\IMMO\Heyue sedan\UAES IMMO</p>	<p>Clear fault code,Read key count,Add key,Detect key,Immobilization,Program engine ECU,Reset engine ECU,Reset immobiliser,Delete key,</p>
<p>JAC\IMMO\Yueyue\UAES IMMO</p>	<p>Clear fault code,Read key count,Add key,Detect key,Immobilization,Program engine ECU,Reset engine ECU,Reset immobiliser,Delete key,</p>
<p>JAC\IMMO\Heyue A30\MT\UAES IMMO</p>	<p>Clear fault code,Read key count,Add key,Detect key,Immobilization,Program engine ECU,Reset engine ECU,Reset immobiliser,Delete key,</p>

JAC\IMMO\Sunray\UAES IMMO	Clear fault code,Read key count,Add key,Detect key,Immobilization,Program engine ECU,Reset engine ECU,Reset immobiliser,Delete key,
JAC\IMMO\Refine S5\IMMO	Read key count,Add old key,Add new key,Delete key,Reset immo ECU,Reset engine ECU,ECU immobilization,Program engine ECU,
JAC\IMMO\Heyue A30\CVT\Smart PEPS	Read key count,ESCL learning,Add key,Program engine ECU,
JAC\Remote\16 PIN\RS\Type 1	Program remote,
JAC\Remote\16 PIN\Tongyue	Program remote,
JAC\Remote\16 PIN\Binyue	Program remote,
JAC\Remote\16 PIN\Sunray	Program remote,
JAC\Remote\16 PIN\Three-ring remote	Program remote,
JAC\Remote\16 PIN\Refine M5	Program remote,
JAC\Remote\16 PIN\Refine S2	Program remote,
JAC\Remote\16 PIN\Refine S3	Program remote,

JAC\Remote\16 PIN\Refine S5	Program remote,
JAC\Remote\16 PIN\Refine M5	Program remote,
JAC\Remote\16 PIN\RS A30(CVT)	Program remote,Delete remote,Remote count,
JAC\IMMO\Refine S5\Smart key	Program ESCL,Add old key,Add new key,Delete key,Reset immo ECU,Reset engine ECU,Immobilization,Program engine,
JAC\Remote\16 PIN\Refine M3	Program remote,
JAC\Remote\16 PIN\IEV5(EV)	Program remote,
JAC\IMMO\Refine S2\Delphi IMMO	Clear fault code,Reset PIN code,Program key,Delete key,Reset immobiliser,Immobilization,Reset engine ECU,Program engine ECU,

<p>JAC\IMMO\Refine S2\UAES IMMO</p>	<p>Clear fault code,Read key count,Add key,Detect key,Immobilization,Program engine ECU,Reset engine ECU,Reset immobiliser&gt;Delete key,</p>
<p>JAC\IMMO\Heyue M3\UAES IMMO</p>	<p>Clear fault code,Read key count,Add key,Detect key,Immobilization,Program engine ECU,Reset engine ECU,Reset immobiliser&gt;Delete key,</p>
<p>JAC\IMMO\Heyue A30\CVT\UAES IMMO</p>	<p>Clear fault code,Read key count,Add key,Detect key,Immobilization,Program engine ECU,Reset engine ECU,Reset immobiliser&gt;Delete key,</p>
<p>JAC\Remote\10 PIN\Type 1</p>	<p>Program remote,</p>
<p>JAC\Remote\10 PIN\Type 2</p>	<p>Program remote,</p>

<p>JAC\IMMO\Refine S3\IMMO</p>	<p>Read key count,Add old key,Add new key,Delete key,Reset immo ECU,Reset engine ECU,ECU immobilization,Program engine ECU,</p>
<p>JAC\IMMO\Refine A60\Smart key</p>	<p>Program ESCL,Add old key,Add new key,Delete key,Reset immo ECU,Reset engine ECU,Immobilization,Program engine,</p>
<p>JAC\IMMO\Refine S2\Smart key</p>	<p>Program ESCL,Add old key,Add new key,Delete key,Reset immo ECU,Reset engine ECU,Immobilization,Program engine,</p>
<p>JAC\IMMO\Refine S2 mini\IMMO</p>	<p>Read key count,Add old key,Add new key,Delete key,Reset immo ECU,Reset engine ECU,ECU immobilization,Program engine ECU,</p>

<p>JAC\IMMO\Refine S3\Smart key</p>	<p>Program ESCL,Add old key,Add new key,Delete key,Reset immo ECU,Reset engine ECU,Immobilization,Program engine,</p>
<p>JAC\IMMO\Refine S5\Delphi IMMO</p>	<p>Clear fault code,Reset PIN code,Program key,Delete key,Reset immobiliser,Immobilization,Reset engine ECU,Program engine ECU,</p>
<p>JAC\IMMO\Refine S5\UAES IMMO</p>	<p>Clear fault code,Read key count,Add key,Detect key,Immobilization,Program engine ECU,Reset engine ECU,Reset immobiliser,Delete key,</p>
<p>JAC\IMMO\Refine S7\IMMO</p>	<p>Read key count,Add old key,Add new key,Delete key,Reset immo ECU,Reset engine ECU,ECU immobilization,Program engine ECU,</p>

JAC\IMMO\Refine S7\Smart key	Program ESCL,Add old key,Add new key,Delete key,Reset immo ECU,Reset engine ECU,Immobilization,Program engine,
JAC\IMMO\Refine M4\IMMO	Read key count,Add old key,Add new key,Delete key,Reset immo ECU,Reset engine ECU,ECU immobilization,Program engine ECU,
JAC\IMMO\Refine M5\Smart key	Program ESCL,Add old key,Add new key,Delete key,Reset immo ECU,Reset engine ECU,Immobilization,Program engine,
JAC\IMMO\Sunray\IMMO	Read key count,Add old key,Add new key,Delete key,Reset immo ECU,Reset engine ECU,ECU immobilization,Program engine ECU,
JAC\Remote\16 PIN\Refine M4	Program remote,
JAC\Remote\16 PIN\Refine S2 mini	Program remote,



	JAC\Remote\16 PIN\Refine S7	Program remote,
	JAC\Remote\16 PIN\6S EV	Program remote,
	JAC\Remote\16 PIN\RS\Type 2	Program remote,
ROEWE	ROEWE\IMMO\350\2013-	Add key,Delete key,Check lock time,
	ROEWE\IMMO\360\Without smart	Add key,Delete key,Check lock time,
	ROEWE\IMMO\W5\2013-	Add key,Delete key,Check lock time,
	ROEWE\IMMO\550\2012	Delete key,Add key,
	ROEWE\IMMO\RX5\With smart	Delete key,Add key,Read key count,
	ROEWE\IMMO\RX5\Without smart	Delete key,Add key,Read key count,
	ROEWE\Remote\360	Add remote,Delete remote,
	ROEWE\Remote\750	Enable remote,Disable remote,Program remote,Clear fault code,
	ROEWE\IMMO\ERX5\With smart	Delete key,Add key,Read key count,
	ROEWE\IMMO\950\Without smart\Type 1	All key lost,Read key count,Clear fault code,Add key,

ROEWE\IMMO\950\With smart	All smart key lost,Read smart key count,Clear fault code,Add smart key,
ROEWE\IMMO\350\2012	Add key,Delete key,Check lock time,
ROEWE\IMMO\W5\2012	Add key,Delete key,Check lock time,
ROEWE\IMMO\550\2013-	Add key,Delete key,The rest unlock time,
ROEWE\IMMO\i6\With smart	Delete key,Read key count,Add key,
ROEWE\Remote\W5	Program remote,
ROEWE\IMMO\360\With smart\2017	Add key,Delete key,
ROEWE\IMMO\950\Without smart\Type 2	All key lost,Add key,Read key count,Clear fault code,
ROEWE\Read PIN code\550\2013-	Read PIN code,
ROEWE\IMMO\750(new)\2012	Delete key,Add key,
ROEWE\IMMO\750(new)\2013-	Add key,Delete key,The rest unlock time,
ROEWE\IMMO\ERX5\Without smart	Delete key,Add key,Read key count,

	ROEWE\IMMO\E50\2012	Add key,Delete key,Check lock time,
	ROEWE\IMMO\E50\2013-	Add key,Delete key,Check lock time,
	ROEWE\Read PIN code\950\2012-	Read pin code type6 (via BCM),
ZOTYE	ZOTYE \A1\Immobilizer\Shanghai Industrial Traffic IMMO	Clear fault code,Reset PIN code,Program key,Reset immobiliser,Delete key,Reset engine,Program engine,Immobilization,
	ZOTYE \Z100\Immobilizer\Shanghai Industrial Traffic IMMO	Clear fault code,Reset PIN code,Program key,Reset immobiliser,Delete key,Reset engine,Program engine,Immobilization,
	ZOTYE \Z300\Immobilizer\Shanghai Industrial Traffic IMMO	Clear fault code,Reset PIN code,Program key,Reset immobiliser,Delete key,Reset engine,Program engine,Immobilization,

<p>ZOTYE \Langyue\Immobilizer\Shanghai</p> <p>Industrial Traffic IMMO</p>	<p>Clear fault code,Reset PIN code,Program key,Reset immobiliser,Delete key,Reset engine,Program engine,Immobilization,</p>
<p>ZOTYE \Langjun\Immobilizer\Shanghai</p> <p>Industrial Traffic IMMO</p>	<p>Clear fault code,Reset PIN code,Program key,Reset immobiliser,Delete key,Reset engine,Program engine,Immobilization,</p>
<p>ZOTYE \Z300\Immobilizer\Lianchuang</p> <p>IMMO</p>	<p>Clear fault code,Read key count,Add key,Delete key,Detect key,Reset immo box,Immobilization,Program whole system,Write immo VIN code,Write engine VIN code,Engine ECU detection,Read VIN code,Reset engine ECU,Program engine ECU,Program whole system,</p>
<p>ZOTYE \Domy X5\Remote</p>	<p>Remote count,Program remote,Delete remote,</p>

ZOTYE \SR7\Remote	Remote count,Program remote,Delete remote,
ZOTYE \T600\Remote	Remote count,Program remote,Delete remote,
ZOTYE \Z500\Remote	Remote count,Program remote,Delete remote,
ZOTYE \Z700\Remote	Remote count,Program remote,Delete remote,
ZOTYE \Z100\Remote	Delete remote,Program remote,
ZOTYE \Langyue\Remote	Delete remote,Program remote,
ZOTYE \Langjun\Remote	Delete remote,Program remote,
ZOTYE \Domy X5\Smart key	Program full system,Program full system(w/o ESCL),Program PEPS controller,Learn ESCL,Learn EMS,Reset EMS,Smart key,Delete smart key,Set VIN code,Write TBOX SK,Check key status,

	<p>ZOTYE \T600\Smart key\Naen(Magotan-type key)</p>	<p>Program full system,Program full system(w/o ESCL),Program PEPS controller,Learn ESCL,Learn EMS,Reset EMS,Smart key,Delete smart key,Set VIN code,Write TBOX SK,Check key status,</p>
	<p>ZOTYE \SR7\Smart key</p>	<p>Program full system,Program full system(w/o ESCL),Program PEPS controller,Learn ESCL,Learn EMS,Reset EMS,Smart key,Delete smart key,Set VIN code,Write TBOX SK,Check key status,</p>
	<p>ZOTYE \Z500\Smart key</p>	<p>Program full system,Program full system(w/o ESCL),Program PEPS controller,Learn ESCL,Learn EMS,Reset EMS,Smart key,Delete smart key,Set VIN code,Write TBOX SK,Check key status,</p>

	ZOTYE \Z700\Smart key	Program full system,Program full system(w/o ESCL),Program PEPS controller,Learn ESCL,Learn EMS,Reset EMS,Smart key,Delete smart key,Set VIN code,Write TBOX SK,Check key status,
	ZOTYE \5008\Smart key	Program remote A,Program remote B,Program smart key A,Program smart key B,
	ZOTYE \T200\Smart key	Program remote A,Program remote B,Program smart key A,Program smart key B,
	ZOTYE \Langlang\Smart key	Program remote A,Program remote B,Program smart key A,Program smart key B,
	ZOTYE \Z200\Smart key	Program remote A,Program remote B,Program smart key A,Program smart key B,

<p>ZOTYE \T600\Smart key\Huofu(Hyundai-type key)</p>	<p>Program new key,Program old key,Program PEPS,Program IMMO,Program ESCL,Write PIN code,</p>
<p>ZOTYE \Z300\Remote\Type 1</p>	<p>Program remote&gt;Delete remote,</p>
<p>ZOTYE \Z300\Remote\Type 2</p>	<p>Remote count,Program remote&gt;Delete remote,</p>
<p>ZOTYE \2008\Smart key</p>	<p>Program remote A,Program remote B,Program smart key A,Program smart key B,</p>
<p>ZOTYE \T600\Immobilizer</p>	<p>Program key&gt;Delete key,Immobilization,Program engine ECU,Reset engine ECU,Reset immobilizer,Lock immobilizer,Check key,Check engine,</p>



ZOTYE \SR9\Smart key	Program full system,Program full system(w/o ESCL),Program PEPS controller,Learn ESCL,Learn EMS,Reset EMS,Smart key,Delete smart key,Set VIN code,Write TBOX SK,Check key status,
ZOTYE\E30\Remote	Remote count,Program remote,Delete remote,
ZOTYE\X7\Remote	Remote count,Program remote,Delete remote,
ZOTYE\X7\Smart key	Program full system,Program full system(w/o ESCL),Program PEPS controller,Learn ESCL,Learn EMS,Reset EMS,Smart key,Delete smart key,Set VIN code,Write TBOX SK,Check key status,
ZOTYE\SR9\Remote	Remote count,Program remote,Delete remote,
ZOTYE\T300\Atech BCM	Remote count,Program remote,Delete remote,

	ZOTYEIT300\Smart key	Program full system,Program full system(w/o ESCL),Program PEPS controller,Learn ESCL,Learn EMS,Reset EMS,Smart key,Delete smart key,Set VIN code,Write TBOX SK,Check key status,
	ZOTYEIT300\BCM	Remote count,Program remote,Delete remote,
	ZOTYEIT700\BCM	Program whole system,Replace BCM,Replace engine EMS,Replace ESCL,Check key,Delete key,Add key,Re-program all keys,Write VIN code,Reset engine EMS,Clear fault code,Write certified SK to T-BOX,
	ZOTYEE200\Smart key	Program smart key,Delete smart key,Setup PSN,Setup VIN,Write BASE ID,Write AES SK,

<p>ZOTYE\Z360\IMMO\Shanghai Industrial Traffic IMMO</p>	<p>Clear fault code,Reset PIN code,Program key,Reset immobiliser,Delete key,Reset engine,Program engine,Immobilization,</p>
<p>ZOTYE\Z360\IMMO\Lianchuang IMMO</p>	<p>Clear fault code,Read key count,Add key,Delete key,Detect key,Reset immo box,Immobilization,Program whole system,Write immo VIN code,Write engine VIN code,Engine ECU detection,Read VIN code,Reset engine ECU,Program engine ECU,Program whole system,</p>
<p>ZOTYE\Z360\Remote\Type 1</p>	<p>Program remote,Delete remote,</p>
<p>ZOTYE\Z360\Remote\Type 2</p>	<p>Remote count,Program remote,Delete remote,</p>

	ZOTYEVZ360\Smart key	Program full system,Program full system(w/o ESCL),Program PEPS controller,Learn ESCL,Learn EMS,Reset EMS,Smart key>Delete smart key,Set VIN code,Write TBOX SK,Check key status,
	ZOTYEVZ560\Remote	Remote count,Program remote>Delete remote,
	ZOTYEVZ560\Smart key	Program full system,Program full system(w/o ESCL),Program PEPS controller,Learn ESCL,Learn EMS,Reset EMS,Smart key>Delete smart key,Set VIN code,Write TBOX SK,Check key status,

	ZOTYE\Z300\Smart key	Program full system,Program full system(w/o ESCL),Program PEPS controller,Learn ESCL,Learn EMS,Reset EMS,Smart key>Delete smart key,Set VIN code,Write TBOX SK,Check key status,
	ZOTYE\T500\Remote	Remote count,Program remote>Delete remote,
	ZOTYE\T500\Smart key	Program full system,Program full system(w/o ESCL),Program PEPS controller,Learn ESCL,Learn EMS,Reset EMS,Smart key>Delete smart key,Set VIN code,Write TBOX SK,Check key status,
MERCEDE S-BENZ	MERCEDES-BENZ\Key system\System 1	Disable key,
	MERCEDES-BENZ\Tail box controlling\C series\204	Trunk control,
	MERCEDES-BENZ\Tail box controlling\CLK series\204	Trunk control,

	MERCEDES-BENZ\Tail box controlling\E series\212	Trunk control,
	MERCEDES-BENZ\Tail box controlling\S series\221	Trunk control,
	Mercedes-Benz\Tail box controlling\E series\213.148 E300 SEDAN(2017)	Trunk control,
	Mercedes-Benz\Remote\163-ML Class	Remote,Reset ECU,
FAW RED FLAG	FAW RED FLAG>Select from type\Smart key\System 1	Smart key registration,Program remote,Reset immobiliser,
	FAW RED FLAG>Select from vehicle\HQ300\System 1	Smart key registration,Program remote,Reset immobiliser,
	FAW RED FLAG>Select from type\Smart key\System 2	Delete smart key,Add smart key,
	FAW RED FLAG>Select from vehicle\H7\System 2	Delete smart key,Add smart key,
	FAW red flag>Select from type\IMMO system\VW IMMO	Program key,
	FAW red flag>Select from vehicle\Ming Shi\VW IMMO	Program key,
JMC	JMC\S350	Add key>Delete key,
	JMC\S330	Add key>Delete key,

<p>ZHENGZH OU MAZDA</p>	<p>ZHENGZHOU MAZDA\IMMO\Lianchuang IMMO</p>	<p>Write immo VIN code,Write engine VIN code,Engine ECU detection,Read VIN code,Reset engine ECU,Program engine ECU,Program whole system,Read key count,Clear fault code,Add key&gt;Delete key,Immobilization,Reset immo box,Detect key,</p>
<p>ISUZU</p>	<p>ISUZU\D-MAX\Key\Type 1 (46 chip)</p>	<p>Program key&gt;Delete key,Clear fault code,Clear fault code,Reset IMMO,Reset ECU,Program immo ECU (TransTron),Program immo ECU (delphi),</p>
	<p>ISUZU\MU-7</p>	<p>Program key&gt;Delete key,Clear fault code,Clear fault code,Reset IMMO,Reset ECU,Program immo ECU (TransTron),Program immo ECU (delphi),</p>

ISUZU\D-MAX\Key\Type 2	Passive access control programming and start system functions,Reset steering lock ECU,Reset engine ECU,Reset passive access control & start system control>Delete key,E-key registration,Program VIN,
ISUZU\MU-X\Smart key\Type 1	Passive access control programming and start system functions,Reset steering lock ECU,Reset engine ECU,Reset passive access control & start system control>Delete key,E-key registration,Program VIN,
ISUZU\D-MAX\Key\Type 3 (smart key)	Add smart key>Delete smart key,
ISUZU\MU-X\Smart key\Type 2	Add smart key>Delete smart key,
ISUZU\D-MAX\Remote	Program remote>Delete remote,
ISUZU\TF\IMMO 2008-2012	Add key>Delete key,Clear fault code,
ISUZU\D-MAX\Key\Type 4 (48 chip)	Program key>Delete key,Read key data,Clear fault code,



IVECO	IVECO\Power Daily\Immobilizer	Learn key,Write VIN,Replace IMMO,
	IVECO\Exceed\Immobilizer	Learn key,Write VIN,Replace IMMO,
	IVECO\Power Daily\Remote	Learn remote,Write VIN,
	IVECO\Exceed\Remote	Learn remote,Write VIN,
	IVECO\Daily\2012-	Key info,Add key,Read PIN ocde,Make dealer key,
	IVECO\Daily\2007-2012	Key count,Add key,Remote count,Program remote,
	IVECO\Eurocargo\2007-2012	Key count,Add key,Remote count,Program remote,
WULING MOTORS	WULING MOTORS\Enjoy S1	Check key count,Program key>Delete key,Reset engine ECM,Module programming,
	WULING MOTORS\Enjoy S3	Check key count,Program key>Delete key,Reset engine ECM,Module programming,
SOUEAST	SOUEAST MOTORS\DX7\Smart key	Program key,Read pin code,
MOTORS	SOUEAST MOTORS\DX3\Smart key	Read pin code,Program key,

	SOUEAST MOTORS\I6\Smart key	All key lost, Learning status, Clear PEPS, Clear EMS, Delete ESCL (electronic steering column lock), Read PIN code, Remote programming method,
	SOUEAST MOTORS\I3\Industrial traffic IMMO	Immobilization, Program engine, Reset engine, Reset immobiliser, Delete key, Program key, Reset PIN code, Clear fault code,
	SOUEAST MOTORS\I GALANT\Mitsubishi-IMMO	Clear fault code, Read key count, Program key, Reset immo ECU,
	SOUEAST MOTORS\I SOVERAN\Mitsubishi-IMMO	Clear fault code, Read key count, Program key, Reset immo ECU,
	SOUEAST MOTORS\I DX3\Mechanical key\IMMO(CAN)	Program key, Read PIN code,
	SOUEAST MOTORS\I DX3\Mechanical key\Remote(CAN)	Program remote,
TIANJIN FAW	TIANJIN FAW\IMMO\Vela(MT34 Delphi) key \Reset immo box(4C chip)	Reset immobox(4C chip),

TIANJIN FAW\IMMO\Xenia S80	Add key,
TIANJIN FAW\IMMO\N5	Add key,
TIANJIN FAW\IMMO\N5(new)	Add key,
TIANJIN FAW\IMMO\N7	Add key,
TIANJIN FAW\IMMO\D60	Add key,
TIANJIN FAW\IMMO\Vizhi V5\ECU IMMO initialization	Type 1,Type 2,Type 3,
TIANJIN FAW\Smart key	Program ESCL,Program PEPS,Delete smart key,Read key count,Program smart key,
TIANJIN FAW\Remote	Program remote,Read remote count,Delete remote,
TIANJIN FAW\IMMO\Vizhi V5\IMMO	Add key,
TIANJIN FAW\IMMO\Vizhi(MT34 Delphi) key	Reset immobox(4C chip),
TIANJIN FAW\IMMO\Vizhi V5\Replace reader coil and program key	Replace immobilizer coil to program key,
TIANJIN FAW\IMMO\Vela(MT34 Delphi) key \Sync engine and immo(CAN)	Sync engine and IMMO (CAN),
TIANJIN FAW\IMMO\Vizhi V2\Sync engine and immo(CAN)	Sync engine and IMMO (CAN),
TIANJIN FAW\IMMO\A70	All key lost,

FAW JIABAO	FAW JIABAO\V80\V80L/T80\Integrated  IMMO	Program engine ECU,Program key>Delete key,Immo ECU reset,
DONGFEN  G	DONGFENG  FENGSHEN\S30\Lianchuang IMMO	Write immo VIN code,Write engine VIN code,Check engine ECU,Read VIN code,Reset engine ECU,Program engine ECU,Program whole system,Read key count,Clear fault code,Add key>Delete key,Immobilization,Reset immo box,Detect key,
FENGSHEN  N	DONGFENG  FENGSHEN\H30\Lianchuang IMMO	Write immo VIN code,Write engine VIN code,Check engine ECU,Read VIN code,Reset engine ECU,Program engine ECU,Program whole system,Read key count,Clear fault code,Add key>Delete key,Immobilization,Reset immo box,Detect key,

<p>DONGFENG FENGSHEN\H30 Cross\Lianchuang IMMO</p>	<p>Write immo VIN code,Write engine VIN code,Check engine ECU,Read VIN code,Reset engine ECU,Program engine ECU,Program whole system,Read key count,Clear fault code,Add key&gt;Delete key,Immobilization,Reset immo box,Detect key,</p>
<p>DONGFENG FENGSHEN\A60\A60-HR16,MR20\BCM</p>	<p>Activate steering wheel lock,</p>
<p>DONGFENG FENGSHEN\A60\A60-HR16,MR20\IMM O\Type 1</p>	<p>Add key,Activate steering wheel lock(all key lost),</p>
<p>DONGFENG FENGSHEN\A60\A60-HR16,MR20\IMM O\Type 2</p>	<p>Add key,Activate steering wheel lock(all key lost),</p>
<p>DONGFENG FENGSHEN\A60\A60-HR16,MR20\Smart key\Type 1</p>	<p>Program smart key,</p>

<p>DONGFENG FENGSHEN\A60\A60-HR16,MR20\Smart key\Type 2</p>	<p>Program smart key,</p>
<p>DONGFENG FENGSHEN\H30\IMMO</p>	<p>Key programming status,Fault pieces re-programming,Replace immo host &amp; EMS,Replace EMS,Replace immo controller,Program key,</p>
<p>DONGFENG FENGSHEN\H30 Cross\IMMO</p>	<p>Key programming status,Fault pieces re-programming,Replace immo host &amp; EMS,Replace EMS,Replace immo controller,Program key,</p>
<p>DONGFENG FENGSHEN\S30\IMMO</p>	<p>Key programming status,Fault pieces re-programming,Replace immo host &amp; EMS,Replace EMS,Replace immo controller,Program key,</p>

DONGFENG FENGSHEN\A30\IMMO	Key programming status,Fault pieces re-programming,Replace immo host & EMS,Replace EMS,Replace immo controller,Program key,
DONGFENG FENGSHEN\AX3\AX3(DFM A15 MT22.1)[key start]\IMMO	Key programming status,Fault pieces re-programming,Replace immo host & EMS,Replace EMS,Replace immo controller,Program key,
DONGFENG FENGSHEN\AX3\AX3(DFM A14T MT62.1)[key start]\IMMO	Key programming status,Fault pieces re-programming,Replace immo host & EMS,Replace EMS,Replace immo controller,Program key,
DONGFENG FENGSHEN\A60\A60-A16\BCM	Program key,
DONGFENG FENGSHEN\A60\A60-A14T\BCM	Program key,
DONGFENG FENGSHEN\AX7\BCM	Program key,
DONGFENG FENGSHEN\A60\A60-A16\Smart key	Program key,

DONGFENG FENGSHEN\AX3\AX3(DFM A14T MT62.1)[button start]\Smart key	Program key,
DONGFENG FENGSHEN\AX7\Smart key	Program key,
DONGFENG FENGSHEN\A30\BCM	Replace OBC & program remote,Program remote,
DONGFENG FENGSHEN\L60\IMMO	Program key,
DONGFENG FENGSHEN\AX3\AX3(DFM A15 MT22.1)[key start]\BCM	Program remote,
DONGFENG FENGSHEN\AX3\AX3(DFM A14T MT62.1)[key start]\BCM	Program remote,
DONGFENG FENGSHEN\MX5\BCM	Program key,



<p>DONGFEN G</p>	<p>DONGFENG FENGXING\Joyear\B11\Lianchuang IMMO</p>	<p>Write immo VIN code,Write engine VIN code,Engine ECU detection,Read VIN code,Reset engine ECU,Program engine ECU,Program whole system,Read key count,Clear fault code,Add key,Clear key,Immobilization,Reset immo box,Detect key,</p>
<p>FENGXING</p>	<p>DONGFENG FENGXING\Joyear\B12\Lianchuang IMMO</p>	<p>Write immo VIN code,Write engine VIN code,Engine ECU detection,Read VIN code,Reset engine ECU,Program engine ECU,Program whole system,Read key count,Clear fault code,Add key,Clear key,Immobilization,Reset immo box,Detect key,</p>

	<p>DONGFENG FENGXING\Joyear\BH5/BH5 LV/BH5A\Lianchuang IMMO</p>	<p>Write immo VIN code,Write engine VIN code,Engine ECU detection,Read VIN code,Reset engine ECU,Program engine ECU,Program whole system,Read key count,Clear fault code,Add key,Clear key,Immobilization,Reset immo box,Detect key,</p>
	<p>DONGFENG FENGXING\Joyear\BX5/BX5A\Lianchua ng IMMO</p>	<p>Write immo VIN code,Write engine VIN code,Engine ECU detection,Read VIN code,Reset engine ECU,Program engine ECU,Program whole system,Read key count,Clear fault code,Add key,Clear key,Immobilization,Reset immo box,Detect key,</p>

	<p style="text-align: center;">DONGFENG FENGXING\Joyear\BX3\Lianchuang IMMO</p>	<p>Write immo VIN code,Write engine VIN code,Engine ECU detection,Read VIN code,Reset engine ECU,Program engine ECU,Program whole system,Read key count,Clear fault code,Add key,Clear key,Immobilization,Reset immo box,Detect key,</p>
	<p style="text-align: center;">DONGFENG FENGXING\Joyear\XV\Lianchuang IMMO</p>	<p>Write immo VIN code,Write engine VIN code,Engine ECU detection,Read VIN code,Reset engine ECU,Program engine ECU,Program whole system,Read key count,Clear fault code,Add key,Clear key,Immobilization,Reset immo box,Detect key,</p>

	<p style="text-align: center;">DONGFENG FENGXING\Joyear\S50\Lianchuang IMMO</p>	<p>Write immo VIN code,Write engine VIN code,Engine ECU detection,Read VIN code,Reset engine ECU,Program engine ECU,Program whole system,Read key count,Clear fault code,Add key,Clear key,Immobilization,Reset immo box,Detect key,</p>
	<p style="text-align: center;">DONGFENG FENGXING\Joyear\SX5/X5\Lianchuang IMMO</p>	<p>Write immo VIN code,Write engine VIN code,Engine ECU detection,Read VIN code,Reset engine ECU,Program engine ECU,Program whole system,Read key count,Clear fault code,Add key,Clear key,Immobilization,Reset immo box,Detect key,</p>

	<p style="text-align: center;">DONGFENG FENGXING\Joyear\SX6\Lianchuang IMMO</p>	<p>Write immo VIN code,Write engine VIN code,Engine ECU detection,Read VIN code,Reset engine ECU,Program engine ECU,Program whole system,Read key count,Clear fault code,Add key,Clear key,Immobilization,Reset immo box,Detect key,</p>
	<p style="text-align: center;">DONGFENG FENGXING\Lingzhi\CM7/CV7/CM7A\Lia nchuang IMMO</p>	<p>Write immo VIN code,Write engine VIN code,Engine ECU detection,Read VIN code,Reset engine ECU,Program engine ECU,Program whole system,Read key count,Clear fault code,Add key,Clear key,Immobilization,Reset immo box,Detect key,</p>

	<p>DONGFENG FENGXING\Fengxing series\CM7\Lianchuang IMMO</p>	<p>Write immo VIN code,Write engine VIN code,Engine ECU detection,Read VIN code,Reset engine ECU,Program engine ECU,Program whole system,Read key count,Clear fault code,Add key,Clear key,Immobilization,Reset immo box,Detect key,</p>
	<p>DONGFENG FENGXING\Fengxing series\S500\Lianchuang IMMO</p>	<p>Write immo VIN code,Write engine VIN code,Engine ECU detection,Read VIN code,Reset engine ECU,Program engine ECU,Program whole system,Read key count,Clear fault code,Add key,Clear key,Immobilization,Reset immo box,Detect key,</p>

	<p>DONGFENG FENGXING\F600/L series\Lianchuang IMMO</p>	<p>Write immo VIN code,Write engine VIN code,Engine ECU detection,Read VIN code,Reset engine ECU,Program engine ECU,Program whole system,Read key count,Clear fault code,Add key,Clear key,Immobilization,Reset immo box,Detect key,</p>
	<p>DONGFENG FENGXING\Joyear\BX5\BX5A\PEPS</p>	<p>Program whole system,Program engine ECU,Program key,Clear key,Program ESCL,Reset EMS,Key count,Read PEPS(IMMO) program info.,ECU immobilization,</p>
	<p>DONGFENG FENGXING\Joyear\S50\PEPS</p>	<p>Program whole system,Program engine ECU,Program key,Clear key,Program ESCL,Reset EMS,Key count,Read PEPS(IMMO) program info.,ECU immobilization,</p>

	<p style="text-align: center;">DONGFENG FENGXING\Joyear\XV\PEPS</p>	<p>Program whole system,Program engine ECU,Program key,Clear key,Program ESCL,Reset EMS,Key count,Read PEPS(IMMO) program info.,ECU immobilization,</p>
	<p style="text-align: center;">DONGFENG FENGXING\Joyear\SX5/X5\PEPS</p>	<p>Program whole system,Program engine ECU,Program key,Clear key,Program ESCL,Reset EMS,Key count,Read PEPS(IMMO) program info.,ECU immobilization,</p>
	<p style="text-align: center;">DONGFENG FENGXING\Joyear\SX6\PEPS</p>	<p>Program whole system,Program engine ECU,Program key,Clear key,Program ESCL,Reset EMS,Key count,Read PEPS(IMMO) program info.,ECU immobilization,</p>



<p style="text-align: center;">DONGFENG FENGXING\Lingzhi\CM7/CV7/CM7A/PE PS</p>	<p>Program whole system,Program engine ECU,Program key,Clear key,Program ESCL,Reset EMS,Key count,Read PEPS(IMMO) program info.,ECU immobilization,</p>
<p style="text-align: center;">DONGFENG FENGXING\Fengxing series\CM7\PEPS</p>	<p>Program whole system,Program engine ECU,Program key,Clear key,Program ESCL,Reset EMS,Key count,Read PEPS(IMMO) program info.,ECU immobilization,</p>
<p style="text-align: center;">DONGFENG FENGXING\Fengxing series\S500\PEPS</p>	<p>Program whole system,Program engine ECU,Program key,Clear key,Program ESCL,Reset EMS,Key count,Read PEPS(IMMO) program info.,ECU immobilization,</p>

<p>DONGFENG FENGXING\F600/L series\PEPS</p>	<p>Program whole system,Program engine ECU,Program key,Clear key,Program ESCL,Reset EMS,Key count,Read PEPS(IMMO) program info.,ECU immobilization,</p>
<p>DONGFENG FENGXING\Joyear\BX5\BX5A\BCM IMMO</p>	<p>Key count,Program key&gt;Delete key,Program whole system,Replace BCM,Program engine ECU,</p>
<p>DONGFENG FENGXING\Joyear\S50\BCM IMMO</p>	<p>Key count,Program key&gt;Delete key,Program whole system,Replace BCM,Program engine ECU,</p>
<p>DONGFENG FENGXING\Joyear\XV\BCM IMMO</p>	<p>Key count,Program key&gt;Delete key,Program whole system,Replace BCM,Program engine ECU,</p>
<p>DONGFENG FENGXING\Joyear\SX5\X5\BCM IMMO</p>	<p>Key count,Program key&gt;Delete key,Program whole system,Replace BCM,Program engine ECU,</p>

<p style="text-align: center;">DONGFENG FENGXING\Joyear\SX6\BCM IMMO</p>	<p style="text-align: center;">Key count,Program key,Delete key,Program whole system,Replace BCM,Program engine ECU,</p>
<p style="text-align: center;">DONGFENG FENGXING\Fengxing series\CM7\BCM IMMO</p>	<p style="text-align: center;">Key count,Program key,Delete key,Program whole system,Replace BCM,Program engine ECU,</p>
<p style="text-align: center;">DONGFENG FENGXING\Fengxing series\S500\BCM IMMO</p>	<p style="text-align: center;">Key count,Program key,Delete key,Program whole system,Replace BCM,Program engine ECU,</p>
<p style="text-align: center;">DONGFENG FENGXING\F600/L series\BCM IMMO</p>	<p style="text-align: center;">Key count,Program key,Delete key,Program whole system,Replace BCM,Program engine ECU,</p>
<p style="text-align: center;">DONGFENG FENGXING\Joyear\BX5\BX5A\UAES BCM</p>	<p style="text-align: center;">Delete remote,Program remote,</p>
<p style="text-align: center;">DONGFENG FENGXING\Joyear\S50\UAES BCM</p>	<p style="text-align: center;">Delete remote,Program remote,</p>

DONGFENG FENGXING\Joyear\XV\UAES BCM	Delete remote,Program remote,
DONGFENG FENGXING\Joyear\SX5/X5\UAES BCM	Delete remote,Program remote,
DONGFENG FENGXING\Joyear\SX6\UAES BCM	Delete remote,Program remote,
DONGFENG FENGXING\Fengxing series\CM7\UAES BCM	Delete remote,Program remote,
DONGFENG FENGXING\Fengxing series\S500\UAES BCM	Delete remote,Program remote,
DONGFENG FENGXING\F600/L series\UAES BCM	Delete remote,Program remote,
DONGFENG FENGXING\Joyear\B11\1.8T Lianchuang IMMO(K4)	Write immo VIN code,Write engine VIN code,Engine ECU detection,Read VIN code,Reset engine ECU,Program engine ECU,Program whole system,Read key count,Clear fault code,Add key>Delete key,Immobilization,Reset immobiliser,Detect key,

	<p>DONGFENG FENGXING\Joyear\B12\1.8T Lianchuang IMMO(K4)</p>	<p>Write immo VIN code,Write engine VIN code,Engine ECU detection,Read VIN code,Reset engine ECU,Program engine ECU,Program whole system,Read key count,Clear fault code,Add key&gt;Delete key,Immobilization,Reset immobiliser,Detect key,</p>
	<p>DONGFENG FENGXING\Joyear\BH5/BH5 LV/BH5A\1.8T Lianchuang IMMO(K4)</p>	<p>Write immo VIN code,Write engine VIN code,Engine ECU detection,Read VIN code,Reset engine ECU,Program engine ECU,Program whole system,Read key count,Clear fault code,Add key&gt;Delete key,Immobilization,Reset immobiliser,Detect key,</p>

<p>DONGFENG FENGXING\Joyear\BX3\1.8T Lianchuang IMMO(K4)</p>	<p>Write immo VIN code,Write engine VIN code,Engine ECU detection,Read VIN code,Reset engine ECU,Program engine ECU,Program whole system,Read key count,Clear fault code,Add key,Delete key,Immobilization,Reset immobiliser,Detect key,</p>
<p>DONGFENG FENGXING\Joyear\B11\PIN code</p>	<p>DIAS/UMC - PIN code reading,</p>
<p>DONGFENG FENGXING\Joyear\B12\PIN code</p>	<p>DIAS/UMC - PIN code reading,</p>
<p>DONGFENG FENGXING\Joyear\BH5/BH5 LV/BH5A\PIN code</p>	<p>DIAS/UMC - PIN code reading,</p>
<p>DONGFENG FENGXING\Joyear\BS3\PIN code</p>	<p>DIAS/UMC - PIN code reading,</p>
<p>DONGFENG FENGXING\Joyear\BX3\PIN code</p>	<p>DIAS/UMC - PIN code reading,</p>
<p>DONGFENG FENGXING\Joyear\BX5/BX5A\PIN code</p>	<p>DIAS/UMC - PIN code reading,</p>

DONGFENG FENGXING\Joyear\S50\PIN code	DIAS/UMC - PIN code reading,
DONGFENG FENGXING\Joyear\SX6\PIN code	DIAS/UMC - PIN code reading,
DONGFENG FENGXING\Joyear\XV\PIN code	DIAS/UMC - PIN code reading,
DONGFENG FENGXING\Joyear\BS3\Lianchuang IMMO	Write immo VIN code,Write engine VIN code,Engine ECU detection,Read VIN code,Reset engine ECU,Program engine ECU,Program whole system,Read key count,Clear fault code,Add key,Clear key,Immobilization,Reset immo box,Detect key,
DONGFENG FENGXING\Joyear\BS3\UAES BCM	Delete remote,Program remote,

	<p>DONGFENG</p> <p>FENGXING\Joyear\BS3\PEPS</p>	<p>Program whole system,Program engine ECU,Program key,Clear key,Program ESCL,Reset EMS,Key count,Read PEPS(IMMO) program info.,ECU immobilization,</p>
LEOPAARD	<p>LEOPAARD\CS7\IMMO\Lianchuang</p> <p>IMMO</p>	<p>Write immo VIN code,Write engine VIN code,Engine ECU detection,Read VIN code,Reset engine ECU,Program engine ECU,Program whole system,Read key count,Clear fault code,Add key&gt;Delete key,Immobilization,Reset immobox,Detect key,</p>
	<p>LEOPAARD\CS7\IMMO\Delphi IMMO</p>	<p>Clear fault code,Reset PIN code,Program key&gt;Delete key,ECU immobilization,Program engine ECU,Reset engine ECU,Reset immo box,</p>



<p>LEOPAARD\CS6\IMMO\Petrol\Siemens</p> <p>IMMO</p>	<p>Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault code,</p>
<p>LEOPAARD\CS6\IMMO\Diesel\Siemens</p> <p>IMMO</p>	<p>Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault code,</p>
<p>LEOPAARD\CS7\IMMO\Integrated</p> <p>IMMO</p>	<p>PIN code setup,After-sales immobiliser replacement,After sale EMS replacement,After sale key replacement,Offline immobilization,Program IMMO and EMS,Program new key,Program old key,Delete all keys,Program VIN code,Program date,Diagnostic date,Program maintenance station ID,IMMO reset,Reset EMS,Program EMS,</p>

LEOPAARD\CS7\BCM\BCM	Program remote,Delete remote,Read remote count,
LEOPAARD\CS10\Integrated IMMO(CAN)	Program key,Program immobiliser or EMS,
LEOPAARD\CS10\Narn smart key	Add smart key,Delete smart key,Smart key count,
LEOPAARD\CS4\IMMO\Integrated IMMO	PIN code setup,After-sales immobiliser replacement,After sale EMS replacement,After sale key replacement,Offline immobilization,Program IMMO and EMS,Program new key,Program old key,Delete all keys,Program VIN code,Program date,Diagnostic date,Program maintenance station ID,IMMO reset,Reset EMS,Program EMS,
LEOPAARD\CS9\Narn smart key	Add smart key,Delete smart key,Smart key count,

LANDWIND	LANDWIND\Fashion\Siemens IMMO	Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault code,
	LANDWIND\Funwa\Siemens IMMO	Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault code,
	LANDWIND\X6\Siemens IMMO	Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault code,
	LANDWIND\X8\2016\Siemens IMMO	Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault code,

	LANDWIND\X9\Siemens IMMO	Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault code,
	LANDWIND\X5\Delphi IMMO	Clear fault code,Reset PIN code,Program key,Delete key,Program immo ECU,Program engine ECU,Reset engine ECU,Reset immobox,
	LANDWIND\X8\2016\Delphi IMMO	Clear fault code,Reset PIN code,Program key,Delete key,Program immo ECU,Program engine ECU,Reset engine ECU,Reset immobox,
	LANDWIND\X9\Delphi IMMO	Clear fault code,Reset PIN code,Program key,Delete key,Program immo ECU,Program engine ECU,Reset engine ECU,Reset immobox,

LANDWIND\X5\TungThih smart key	Clear fault code,Program EMS,Reset EMS,Program ESCL,Program old PEPS,Program new PEPS,Program key,
LANDWIND\X5\WS smart key	Program ESCL,Program old PEPS,Program key,Clear fault code,Program new PEPS,Reset to factory mode,
LANDWIND\X7\2016\TungThih smart key	Clear fault code,Program EMS,Reset EMS,Program ESCL,Program old PEPS,Program new PEPS,Program key,
LANDWIND\X8\2016\Delphi PIN code	Delphi anti-theft PIN code reading,
LANDWIND\X8\2016\Siemens PIN code	Read Siemens PIN code,
LANDWIND\X9\Siemens PIN code	Read Siemens PIN code,
LANDWIND\Funwa\Siemens PIN code	Read Siemens PIN code,
LANDWIND\Fashion\Siemens PIN code	Read Siemens PIN code,

	LANDWIND\X7\2017-\TungThih smart key	Program key,
	LANDWIND\X8\2017-\TungThih smart key	Program key,
	LANDWIND\X2\Smart key	Program smart key,Program EMS (UMC),Program EMS (Delphello),Program smart immo box,
CHERY	CHERY\Immobilizer\Industrial traffic security system	Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault code,
	CHERY\Immobilizer\Lianchuang IMMO system	Write immo VIN code,Write engine VIN code,Engine ECU detection,Read VIN code,Reset engine ECU,Program engine ECU,Program whole system,Read key count,Clear fault code,Add key,Delete key,Immobilization,Reset immobiliser,Detect key,

CHERY\Immobilizer\Delphi IMMO system	Clear fault code,Reset PIN code,Program key,Delete key,ECU immobilization,Program engine ECU,Reset engine ECU,Reset immobiliser,
CHERY\Immobilizer\Autonomous IMMO	Program new key,Program old key,Delete key,Program engine ECU,ECU immobilization,
CHERY\Smart key\Type 1	Add new smart key,Add old smart key,Delete smart key,
CHERY\Smart key\Type 2	Program smart key,
CHERY\Remote\A1	Read key count,Program remote,Clear fault code,
CHERY\Remote\Cowin 1	Read key count,Program remote,Clear fault code,
CHERY\Remote\QQ3	Read key count,Program remote,Clear fault code,
CHERY\Remote\QQ6	Read key count,Program remote,Clear fault code,
CHERY\Remote\Riich M1\Type 1	Read key count,Program remote,Clear fault code,

CHERY\Remote\Rich M2	Read key count,Program remote,Clear fault code,
CHERY\Remote\Rich M3	Read key count,Program remote,Clear fault code,
CHERY\Remote\Rich M5	Read key count,Program remote,Clear fault code,
CHERY\Remote\Rich X1	Read key count,Program remote,Clear fault code,
CHERY\Remote\V5 series\Type 1	Read key count,Program remote,Clear fault code,
CHERY\Remote\Elegant series	Read key count,Program remote,Clear fault code,
CHERY\Remote\Estar\Type 1	Read key count,Program remote,Clear fault code,
CHERY\Remote\Tiggo 3\Type 1	Read key count,Program remote,Clear fault code,
CHERY\Remote\EQ	Read key count,Program remote,Clear fault code,
CHERY\Remote\Tiggo Facelift \Type 1	Read key count,Program remote,Clear fault code,
CHERY\Remote\New QQ	Read key count,Program remote,Clear fault code,



CHERY\Remote\A3	Clear fault code,Program remote,Delete remote,
CHERY\Remote\H5 series	Clear fault code,Program remote,Delete remote,
CHERY\Remote\X5 series	Clear fault code,Program remote,Delete remote,
CHERY\Remote\H3 series	Clear fault code,Program remote,Delete remote,
CHERY\Remote\FENGYUN 2	Clear fault code,Program remote,Delete remote,
CHERY\Remote\New Eastar	Clear fault code,Program remote,Delete remote,
CHERY\Remote\A5\Type 1(Atech)	Clear fault code,Remote count,Program remote,
CHERY\Remote\Qiyun 3\Type 1(Atech)	Clear fault code,Remote count,Program remote,
CHERY\Remote\E5	Clear fault code,Remote count,Program remote,
CHERY\Remote\A5\Type 2(kostal)	Program remote,Clear fault code,
CHERY\Remote\Qiyun 3\Type 2(kostal)	Program remote,Clear fault code,
CHERY\Remote\Cowin 5\Type 3	Read remote count,Program remote,Clear fault code,

CHERY\Remote\Riich M1\Type 2	Read remote count,Program remote,Clear fault code,
CHERY\Remote\G3\Type 1	Read remote count,Program remote,Clear fault code,
CHERY\Remote\V5 series\Type 2	Read remote count,Program remote,Clear fault code,
CHERY\Remote\Eastar\Type 2	Read remote count,Program remote,Clear fault code,
CHERY\Remote\Arrizo M7	Read remote count,Program remote,Clear fault code,
CHERY\Remote\QQme series	Read remote count,Program remote,Clear fault code,
CHERY\Remote\G2	Program remote,
CHERY\Remote\G3\Type 2	Program remote,
CHERY\Remote\G5	Program remote,
CHERY\Remote\G6	Program remote,
CHERY\Remote\Tiggo 3\Type 2	Program remote,Clear fault code>Delete remote,
CHERY\Remote\Tiggo Facelift \Type 2	Program remote,Clear fault code>Delete remote,
CHERY\Remote\E3	Program remote>Delete remote,Remote count,

CHERY\Remote\Arrizo 3	Program remote,Delete remote,Remote count,
CHERY\Remote\Arrizo 7	Program remote,Delete remote,Remote count,
CHERY\Remote\Arrizo M7(PHEV)	Program remote,Delete remote,Remote count,
CHERY\Remote\Tiggo 5	Program remote,Delete remote,Remote count,
CHERY\Remote\Cowin C3	Program remote,Delete remote,Remote count,
CHERY\Remote\Cowin C3R	Program remote,Delete remote,Remote count,
CHERY\Remote\M16PHEV	Program remote,Delete remote,Remote count,
CHERY\Remote\Arrizo 5	Read remote count,Program remote,
CHERY\Remote\Karry K50	Program remote,Read remote count,
CHERY\Immobilizer\PIN code	Delphi anti-theft PIN code reading,Industrial traffic anti-theft PIN code reading,Lianchuang anti-theft PIN code reading,

CHERY\Remote\Tiggo 7	Program remote,Delete remote,Remote count,
CHERY\Remote\Cowin	Program remote,Remote sync mode,
CHERY\Remote\Cowin 2	Program remote,Remote sync mode,
CHERY\Remote\Cowin 5\Type 1	Program remote,Remote sync mode,
CHERY\Remote\V5 series\Type 3	Program remote,Remote sync mode,
CHERY\Remote\Eastar\Type 3	Program remote,Remote sync mode,
CHERY\Remote\Tiggo 3\Type 3	Program remote,Remote sync mode,
CHERY\Remote\Tiggo Facelift\Type 3	Program remote,Remote sync mode,
CHERY\Remote\Cowin 5\Type 2	Read key count,Program remote,Clear fault code,

GREAT WALL MOTOR	GREAT WALL MOTOR\Great Wall\Peri\Industrial traffic IMMO	Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault code,
	GREAT WALL MOTOR\Great Wall\Florid\Industrial traffic IMMO	Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault code,
	GREAT WALL MOTOR\Great Wall\Phelex\Industrial traffic IMMO	Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault code,
	GREAT WALL MOTOR\Great Wall\C30\2011-2014\Mechanical key\Industrial traffic IMMO	Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault code,

<p>GREAT WALL MOTOR\Great Wall\C50\2012\Mechanical key\Industrial traffic IMMO</p>	<p>Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault code,</p>
<p>GREAT WALL MOTOR\Great Wall\C20R\Industrial traffic IMMO</p>	<p>Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault code,</p>
<p>GREAT WALL MOTOR\Hover\H1\IMMO system\Industrial traffic IMMO</p>	<p>Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault code,</p>
<p>GREAT WALL MOTOR\Hover\H6\2012\Mechanical key\IMMO\Industrial traffic IMMO</p>	<p>Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault code,</p>

<p>GREAT WALL MOTOR\Hover\M1\Industrial traffic IMMO</p>	<p>Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault code,</p>
<p>GREAT WALL MOTOR\Hover\M4\Industrial traffic IMMO</p>	<p>Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault code,</p>
<p>GREAT WALL MOTOR\Great Wall\Cowry\Delphi petrol IMMO</p>	<p>Read key count,Clear fault code,Reset PIN code,Program key,Delete key,Program immo ECU,Program engine ECU,Program engine VIN code,Program immo VIN code,Reset engine ECU,Reset immo ECU,</p>

	<p>GREAT WALL MOTOR\Great Wall\Wingle\Delphi petrol IMMO</p>	<p>Read key count, Clear fault code, Reset PIN code, Program key, Delete key, Program immo ECU, Program engine ECU, Program engine VIN code, Program immo VIN code, Reset engine ECU, Reset immo ECU,</p>
	<p>GREAT WALL MOTOR\Great Wall\Wingle6\Delphi petrol IMMO</p>	<p>Read key count, Clear fault code, Reset PIN code, Program key, Delete key, Program immo ECU, Program engine ECU, Program engine VIN code, Program immo VIN code, Reset engine ECU, Reset immo ECU,</p>



	<p>GREAT WALL MOTOR\Great Wall\V80\Delphi petrol IMMO</p>	<p>Read key count, Clear fault code, Reset PIN code, Program key, Delete key, Program immo ECU, Program engine ECU, Program engine VIN code, Program immo VIN code, Reset engine ECU, Reset immo ECU,</p>
	<p>GREAT WALL MOTOR\Hover\H3\Delphi petrol IMMO</p>	<p>Read key count, Clear fault code, Reset PIN code, Program key, Delete key, Program immo ECU, Program engine ECU, Program engine VIN code, Program immo VIN code, Reset engine ECU, Reset immo ECU,</p>

	<p>GREAT WALL MOTOR\Hover\H5\Delphi petrol IMMO</p>	<p>Read key count,Clear fault code,Reset PIN code,Program key,Delete key,Program immo ECU,Program engine ECU,Program engine VIN code,Program immo VIN code,Reset engine ECU,Reset immo ECU,</p>
	<p>GREAT WALL MOTOR\Hover\H5 ( commemorative ) \Delphi petrol IMMO</p>	<p>Read key count,Clear fault code,Reset PIN code,Program key,Delete key,Program immo ECU,Program engine ECU,Program engine VIN code,Program immo VIN code,Reset engine ECU,Reset immo ECU,</p>

	<p>GREAT WALL MOTOR\Great Wall\Coolbear\Lianchuang IMMO</p>	<p>Write immo VIN code,Write engine VIN code,Check ECU,Read VIN code,Reset engine ECU,Program engine ECU,Program whole system,Read key count,Clear fault code,Add key&gt;Delete key,Immobilization,Reset immobiliser,Detect key,</p>
	<p>GREAT WALL MOTOR\Hover\M2\Lianchuang IMMO</p>	<p>Write immo VIN code,Write engine VIN code,Check ECU,Read VIN code,Reset engine ECU,Program engine ECU,Program whole system,Read key count,Clear fault code,Add key&gt;Delete key,Immobilization,Reset immobiliser,Detect key,</p>

	<p>GREAT WALL MOTOR\Great Wall\Wingle\Delphi diesel(Bosch 2.8TC)  IMMO</p>	<p>Read key count, Clear fault code, Reset PIN code, Program key, Delete key, Program immo ECU, Program engine ECU, Program engine VIN code, Program immo VIN code, Reset engine ECU, Reset immo ECU, Read engine VIN,</p>
	<p>GREAT WALL MOTOR\Hover\H3\Delphi diesel(Bosch 2.8TC) IMMO</p>	<p>Read key count, Clear fault code, Reset PIN code, Program key, Delete key, Program immo ECU, Program engine ECU, Program engine VIN code, Program immo VIN code, Reset engine ECU, Reset immo ECU, Read engine VIN,</p>

<p>GREAT WALL MOTOR\Hover\H5\Delphi diesel(Bosch 2.8TC) IMMO</p>	<p>Read key count, Clear fault code, Reset PIN code, Program key, Delete key, Program immo ECU, Program engine ECU, Program engine VIN code, Program immo VIN code, Reset engine ECU, Reset immo ECU, Read engine VIN,</p>
<p>GREAT WALL MOTOR\Great Wall\Wingle\Delphi diesel(Delphi 4D20) IMMO</p>	<p>Read key count, Reset PIN code, Program key, Delete all keys, Program immo ECU, Program engine ECU, Program engine VIN code, Program immo VIN code, Reset engine ECU, Reset immo ECU,</p>

	<p>GREAT WALL MOTOR\Great Wall\Wingle6\Delphi diesel(Delphi 4D20)  IMMO</p>	<p>Read key count,Reset PIN code,Program key&gt;Delete all keys,Program immo ECU,Program engine ECU,Program engine VIN code,Program immo VIN code,Reset engine ECU,Reset immo ECU,</p>
	<p>GREAT WALL MOTOR\Hover\H5\Delphi diesel(Delphi 4D20) IMMO</p>	<p>Read key count,Reset PIN code,Program key&gt;Delete all keys,Program immo ECU,Program engine ECU,Program engine VIN code,Program immo VIN code,Reset engine ECU,Reset immo ECU,</p>

	<p>GREAT WALL MOTOR\Great Wall\Wingle\Delphi diesel(Bosch 4D20)</p> <p>IMMO</p>	<p>Read key count,Reset PIN code,Program key&gt;Delete all keys,Program immo ECU,Program engine ECU,Program engine VIN code,Program immo VIN code,Reset engine ECU,Reset immo ECU,</p>
	<p>GREAT WALL MOTOR\Great Wall\Wingle6\Delphi diesel(Bosch 4D20)</p> <p>IMMO</p>	<p>Read key count,Reset PIN code,Program key&gt;Delete all keys,Program immo ECU,Program engine ECU,Program engine VIN code,Program immo VIN code,Reset engine ECU,Reset immo ECU,</p>

	<p>GREAT WALL MOTOR\Hover\H5\Delphi diesel(Bosch 4D20) IMMO</p>	<p>Read key count,Reset PIN code,Program key&gt;Delete all keys,Program immo ECU,Program engine ECU,Program engine VIN code,Program immo VIN code,Reset engine ECU,Reset immo ECU,</p>
	<p>GREAT WALL MOTOR\Hover\H5 ( commemorative ) \Delphi diesel(Bosch 4D20) IMMO</p>	<p>Read key count,Reset PIN code,Program key&gt;Delete all keys,Program immo ECU,Program engine ECU,Program engine VIN code,Program immo VIN code,Reset engine ECU,Reset immo ECU,</p>



<p>GREAT WALL MOTOR\Great Wall\Wingle\Delphi petrol IMMO (UMC)</p>	<p>Read key count,Reset PIN code,Program key,Delete all keys,Program immo ECU,Program engine ECU,Program engine VIN code,Reset engine ECU,Reset immo ECU,</p>
<p>GREAT WALL MOTOR\Great Wall\Wingle\Delphi (Bosch EDC17C63) IMMO</p>	<p>Read key count,Reset PIN code,Program key,Delete all keys,Program engine ECU,Program immo ECU,Program engine VIN code,Reset engine ECU,Reset immo ECU,</p>
<p>GREAT WALL MOTOR\Hover\H2\Keyless Entry(PEPS)</p>	<p>Program key,Clear ESCL learn status,Clear EMS learning status,Clear CAPE learning status,Offline key programming,</p>
<p>GREAT WALL MOTOR\Hover\H6 coupe\2017\Keyless Entry(PEPS)</p>	<p>Program key,Clear ESCL learn status,Clear EMS learning status,Clear CAPE learning status,Offline key programming,</p>

GREAT WALL MOTOR\Great Wall\C30\2015\Mechanical key\Remote(CAN)	Program remote,Unlocking OBC,
GREAT WALL MOTOR\Great Wall\C50\2012\Mechanical key\Remote	Program remote,Unlocking OBC,
GREAT WALL MOTOR\Great Wall\Wingle6\Remote	Program remote,Unlocking OBC,
GREAT WALL MOTOR\Hover\H1\Body control system\Type 1	Program remote,Unlocking OBC,
GREAT WALL MOTOR\Hover\H6\2012\Mechanical key\Remote\Type 1	Program remote,Unlocking OBC,
GREAT WALL MOTOR\Great Wall\C30\2015\Smart key\Button-type PEPS	All key lost,Program with working key,Replace solenoid valve,Replace PEPS,Replace EMS,EOL offline learn,Read key count,
GREAT WALL MOTOR\Great Wall\C50\2013\Smart key\Button-type PEPS	All key lost,Program with working key,Replace solenoid valve,Replace PEPS,Replace EMS,EOL offline learn,Read key count,

<p>GREAT WALL MOTOR\Hover\H6\2013-2017\Smart key\Button-type PEPS</p>	<p>All key lost,Program with working key,Replace solenoid valve,Replace PEPS,Replace EMS,EOL offline learn,Read key count,</p>
<p>GREAT WALL MOTOR\Hover\H7\Button-type PEPS</p>	<p>All key lost,Program with working key,Replace solenoid valve,Replace PEPS,Replace EMS,EOL offline learn,Read key count,</p>
<p>GREAT WALL MOTOR\Hover\H1\Body control system\Type 2</p>	<p>Program remote,Unlocking OBC,</p>
<p>GREAT WALL MOTOR\Hover\H3\Remote</p>	<p>Program remote,Unlocking OBC,</p>
<p>GREAT WALL MOTOR\Hover\H5\Remote</p>	<p>Program remote,Unlocking OBC,</p>

<p>GREAT WALL MOTOR\Hover\H6\~2012\Mechanical key\IMMO\Xiamen TungThih IMMO</p>	<p>Key detecting,Reset engine ECU,Reset immo ECU&gt;Delete key,Add old key,Add new key,ECU immobilization,Program engine ECU,Clear fault code,Program VIN,Lock immobiliser,</p>
<p>GREAT WALL MOTOR\Hover\H8\Button-type PEPS</p>	<p>Read key count,Program smart key,Go to recover EOL learning mode,Replace PEPS,Replace EMS,EOL offline learn,Replace solenoid valve,</p>
<p>GREAT WALL MOTOR\Hover\H9\Button-type PEPS</p>	<p>Read key count,Program smart key,Go to recover EOL learning mode,Replace PEPS,Replace EMS,EOL offline learn,Replace solenoid valve,</p>
<p>GREAT WALL MOTOR\PIN code</p>	<p>Read pin code(Lianchuang),Read pin code(Shanghai industrial),Delphi PIN code reading,</p>

<p>GREAT WALL MOTOR\Great Wall\C10\Industrial traffic IMMO</p>	<p>Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault code,</p>
<p>GREAT WALL MOTOR\Great Wall\Wingle 5\2016\Mechanical key\Delphi petrol IMMO</p>	<p>Read key count,Clear fault code,Reset PIN code,Program key,Delete key,Program immo ECU,Program engine ECU,Program engine VIN code,Program immo VIN code,Reset engine ECU,Reset immo ECU,</p>
<p>GREAT WALL MOTOR\Great Wall\Wingle 5\2016\Mechanical key\Delphi diesel(Bosch 2.8TC) IMMO</p>	<p>Read key count,Clear fault code,Reset PIN code,Program key,Delete key,Program immo ECU,Program engine ECU,Program engine VIN code,Program immo VIN code,Reset engine ECU,Reset immo ECU,Read engine VIN,</p>

	<p>GREAT WALL MOTOR\Great Wall\Wingle 5\2016\Mechanical key\Delphi diesel(Delphi 4D20) IMMO</p>	<p>Read key count,Reset PIN code,Program key,Delete all keys,Program immo ECU,Program engine ECU,Program engine VIN code,Program immo VIN code,Reset engine ECU,Reset immo ECU,</p>
	<p>GREAT WALL MOTOR\Great Wall\Wingle 5\2016\Mechanical key\Delphi diesel(Delphi 4D20) IMMO</p>	<p>Read key count,Reset PIN code,Program key,Delete all keys,Program immo ECU,Program engine ECU,Program engine VIN code,Program immo VIN code,Reset engine ECU,Reset immo ECU,</p>

<p>GREAT WALL MOTOR\Great Wall\Wingle 5\2016\Mechanical key\Delphi petrol IMMO(UMC)</p>	<p>Read key count,Reset PIN code,Program key,Delete all keys,Program immo ECU,Program engine ECU,Program engine VIN code,Reset engine ECU,Reset immo ECU,</p>
<p>GREAT WALL MOTOR\Great Wall\Wingle 5\2016\Mechanical key\Delphi (Bosch EDC17C63) IMMO</p>	<p>Read key count,Reset PIN code,Program key,Delete all keys,Program engine ECU,Program immo ECU,Program engine VIN code,Reset engine ECU,Reset immo ECU,</p>
<p>GREAT WALL MOTOR\Hover\H2S\Smart key</p>	<p>Delete/program smart key,All smart key lost,Add smart key,</p>
<p>GREAT WALL MOTOR\Great Wall\C50\2013\Smart key\Switch-type PEPS</p>	<p>All key lost,Program with working key,Replace solenoid valve,Replace PEPS,Replace EMS,EOL offline learn,Read key count,</p>

<p>GREAT WALL MOTOR\Hover\H6\2013-2017\Smart key\Switch-type PEPS</p>	<p>All key lost,Program with working key,Replace solenoid valve,Replace PEPS,Replace EMS,EOL offline learn,Read key count,</p>
<p>GREAT WALL MOTOR\Hover\H7\Switch-type PEPS</p>	<p>All key lost,Program with working key,Replace solenoid valve,Replace PEPS,Replace EMS,EOL offline learn,Read key count,</p>
<p>GREAT WALL MOTOR\Hover\H6\2012\Mechanical key\Remote\Type 2</p>	<p>Program remote,Unlocking OBC,</p>
<p>GREAT WALL MOTOR\Great Wall\C30EV\Remote(CAN)</p>	<p>Program immo and remote,</p>
<p>GREAT WALL MOTOR\Hover\H2S\Mechanical key\Remote(CAN)</p>	<p>Program remote,</p>
<p>GREAT WALL MOTOR\Hover\H5(Ann. edition)\Remote(CAN)</p>	<p>Program remote,</p>
<p>GREAT WALL MOTOR\Hover\H3\Delphi-Remote(CAN)</p>	<p>Program remote,</p>



GREAT WALL MOTOR\Hover\H6(bluesign)\UMC-remote(CAN)	Program remote,Unlocking OBC,
GREAT WALL MOTOR\Hover\H6(bluesign)\Delphi-remote(CAN)	Program remote,Unlocking OBC,
GREAT WALL MOTOR\Great Wall\Wingle 5\2017\Mechanical key/bar key\Remote(CAN)	Program remote,Unlocking OBC,
GREAT WALL MOTOR\Hover\H2S\Mechanical key\Industrial traffic IMMO	Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault code,
GREAT WALL MOTOR\Hover\H4\Keyless Entry(PEPS)	Immobilizer,Off line full system programming,Program PEPS,Program ESCL,Program engine ECU,Program T-box,
GREAT WALL MOTOR\Hover\M6\2018\Smart key	Add key,All key lost,
GREAT WALL MOTOR\Great Wall\CHB025A\Smart key	Delete/learn after-sales key,All key lost,

GREAT WALL MOTOR\Great Wall\CHB025A\Mechanical key\Remote(CAN)	Program immo and remote,
GREAT WALL MOTOR\Hover\H6\2017-\Smart key	Add key,All key lost,
GREAT WALL MOTOR\Hover\H6 coupe\2017-\Smart key	Program key after deleting,All key lost,Add key,
GREAT WALL MOTOR\Hover\M6\2018-\Button-type PEPS	All key lost,Program with working key,Replace solenoid valve,Replace PEPS,Replace EMS,EOL offline learn,Read key count,
GREAT WALL MOTOR\Great Wall\C50\2014-2015\Smart key\Switch-type PEPS	All key lost,Program with working key,Replace solenoid valve,Replace PEPS,Replace EMS,EOL offline learn,Read key count,
GREAT WALL MOTOR\Great Wall\C50\2014-2015\Smart key\Button-type PEPS	All key lost,Program with working key,Replace solenoid valve,Replace PEPS,Replace EMS,EOL offline learn,Read key count,

<p>GREAT WALL MOTOR\Great Wall\Wingle 5\2017\Mechanical key/bar key\IMMO\Delphi diesel(Bosch 4D20)  IMMO</p>	<p>Read key count,Reset PIN code,Program key,Delete all keys,Program immo ECU,Program engine ECU,Program engine VIN code,Program immo VIN code,Reset engine ECU,Reset immo ECU,</p>
<p>GREAT WALL MOTOR\Great Wall\Wingle 5\2017\Mechanical key/bar key\IMMO\Delphi diesel(Bosch 2.8TC)  IMMO</p>	<p>Read key count,Clear fault code,Reset PIN code,Program key,Delete key,Program immo ECU,Program engine ECU,Program engine VIN code,Program immo VIN code,Reset engine ECU,Reset immo ECU,Read engine VIN,</p>
<p>GREAT WALL MOTOR\Hover\H6\2013-2017\Mechanic al key\Remote\Type 1</p>	<p>Program remote,Unlocking OBC,</p>
<p>GREAT WALL MOTOR\Hover\H6\2013-2017\Mechanic al key\Remote\Type 2</p>	<p>Program remote,Unlocking OBC,</p>

CHANGAN AUTO	CHANGAN AUTO\Benni Mini\Remote	Read remote count,Program remote,
	CHANGAN AUTO\New Benni\Remote	Read remote count,Program remote,
	CHANGAN AUTO\AIsvin\V3/V5\Integrated BCM(B501)\Type 2	Read remote count,Program remote,
	CHANGAN AUTO\AIsvin\V3/V5\Integrated BCM(B501)\Type 1	Read remote count,Program remote,Delete remote,
	CHANGAN AUTO\Benni\Integrated BCM(A301)	Read remote count,Program remote,Delete remote,
	CHANGAN AUTO\CX20\Integrated BCM(B501)	Read remote count,Program remote,Delete remote,
	CHANGAN AUTO\CX30\Integrated BCM(B501)	Read remote count,Program remote,Delete remote,
	CHANGAN AUTO\Benni\Chongqing integrated IMMO	Clear fault code,Reset PIN code,Program key,Delete key,Reset immobiliser,Reset engine,Program engine,Immobilization,

<p>CHANGAN AUTO\Jiexun\Industrial traffic IMMO</p>	<p>Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault code,</p>
<p>CHANGAN AUTO\Raimondi\Industrial traffic IMMO</p>	<p>Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault code,</p>
<p>CHANGAN AUTO\CM8\Industrial traffic IMMO</p>	<p>Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault code,</p>
<p>CHANGAN AUTO\CV7\Industrial traffic IMMO</p>	<p>Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault code,</p>

CHANGAN AUTO\CV9\Industrial traffic IMMO	Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault code,
CHANGAN AUTO\AIsvin\V3/V5\Atech BCM	Read remote count,Program remote,Delete remote,
CHANGAN AUTO\Zhi Xiang\Atech BCM	Read remote count,Program remote,Delete remote,
CHANGAN AUTO\Honor\Atech BCM	Read remote count,Program remote,Delete remote,
CHANGAN AUTO\B301\Atech BCM	Read remote count,Program remote,Delete remote,
CHANGAN AUTO\CX20\Atech BCM	Read remote count,Program remote,Delete remote,
CHANGAN AUTO\CX30\Atech BCM	Read remote count,Program remote,Delete remote,
CHANGAN AUTO\AIsvin\V7\Integrated BCM(C201)	Delete remote,Program remote,Read remote count,
CHANGAN AUTO\Eado XT\Integrated BCM(C201)	Delete remote,Program remote,Read remote count,

CHANGAN AUTO\Raeton\Integrated BCM(C201)	Delete remote,Program remote,Read remote count,
CHANGAN AUTO\CS15\Integrated BCM(C201)	Delete remote,Program remote,Read remote count,
CHANGAN AUTO\CS75\Integrated BCM(C201)	Delete remote,Program remote,Read remote count,
CHANGAN AUTO\Alsvin\V7\Remote	Read remote count,Program remote,Clear fault code>Delete remote,
CHANGAN AUTO\Raeton\Remote	Read remote count,Program remote,Clear fault code>Delete remote,
CHANGAN AUTO\CS15\Remote	Read remote count,Program remote,Clear fault code>Delete remote,
CHANGAN AUTO\CS75\Remote	Read remote count,Program remote,Clear fault code>Delete remote,
CHANGAN AUTO\Alsvin\V7\Smart key	Read key count,Program smart key,Clear fault code,
CHANGAN AUTO\Raeton\Smart key	Read key count,Program smart key,Clear fault code,

CHANGAN AUTO\CS15\Smart key	Read key count,Program smart key,Clear fault code,
CHANGAN AUTO\CS35\Smart key	Read key count,Program smart key,Clear fault code,
CHANGAN AUTO\CS75\Smart key	Read key count,Program smart key,Clear fault code,
CHANGAN AUTO\Zhi Xiang\Delphi IMMO	Clear fault code,Reset PIN code,Program key>Delete key,ECU immobilization,Program engine ECU,Reset engine ECU,Reset immobiliser,Read key count,
CHANGAN AUTO\Honor\Delphi IMMO	Clear fault code,Reset PIN code,Program key>Delete key,ECU immobilization,Program engine ECU,Reset engine ECU,Reset immobiliser,Read key count,



CHANGAN AUTO\CX30\Delphi IMMO	Clear fault code,Reset PIN code,Program key,Delete key,ECU immobilization,Program engine ECU,Reset engine ECU,Reset immobiliser,Read key count,
CHANGAN AUTO\Oulove\Remote	Read remote count,Program remote,Delete remote,
CHANGAN AUTO\CS35\Delphi BCM\2014-2015	Program key,Program remote,Delete key,Delete remote,
CHANGAN AUTO\CS35\Delphi BCM\2016-	Program key,Program remote,Delete key,Delete remote,
CHANGAN AUTO\New Benni EV\Integated BCM	Read remote count,Program remote,Delete remote,
CHANGAN AUTO\CS95\Integated BCM(C201)	Delete remote,Program remote,Read remote count,
CHANGAN AUTO\C207\Integated BCM(C201)	Delete remote,Program remote,Read remote count,
CHANGAN AUTO\V301\Integated BCM(C201)	Delete remote,Program remote,Read remote count,
CHANGAN AUTO\Eado EV\Integated BCM(C201)	Delete remote,Program remote,Read remote count,

CHANGAN AUTO\Eado\Remote	Read remote count,Program remote,Clear fault code>Delete remote,
CHANGAN AUTO\Eado\Remote	Read remote count,Program remote,Clear fault code>Delete remote,
CHANGAN AUTO\Eado XT\Remote	Read remote count,Program remote,Clear fault code>Delete remote,
CHANGAN AUTO\CS95\Remote	Read remote count,Program remote,Clear fault code>Delete remote,
CHANGAN AUTO\C207\Remote	Read remote count,Program remote,Clear fault code>Delete remote,
CHANGAN AUTO\V301\Remote	Read remote count,Program remote,Clear fault code>Delete remote,
CHANGAN AUTO\Eado EV\Remote	Read remote count,Program remote,Clear fault code>Delete remote,

CHANGAN AUTO\Eado\Smart key	Read key count,Program smart key,Clear fault code,
CHANGAN AUTO\CS95\Smart key	Read key count,Program smart key,Clear fault code,
CHANGAN AUTO\C207\Smart key	Read key count,Program smart key,Clear fault code,
CHANGAN AUTO\V301\Smart key	Read key count,Program smart key,Clear fault code,
CHANGAN AUTO\Eado EV\Smart key	Read key count,Program smart key,Clear fault code,
CHANGAN AUTO\CX70\Smart key	Read key count,Program smart key,Clear fault code,
CHANGAN AUTO\Auchan\Smart key	Read key count,Program smart key,Clear fault code,
CHANGAN AUTO\Zun Xing\Lianchuang IMMO	Clear fault code,Add key>Delete key,Detect key,Reset immobiliser,Immobilization,Reset engine ECU,Program engine ECU,Engine ECU detection,Write immo VIN code,Write engine VIN code,Write VIN code,Read key count,Program whole system,

CHANGAN AUTO\CX70\Remote	Read remote count,Program remote,
CHANGAN AUTO\Auchan\Remote	Delete remote,Program remote,OBC locked,Unlocking OBC,
CHANGAN AUTO\CS35\Delphi BCM\2014	Program key>Delete key,Program remote>Delete remote,
CHANGAN AUTO\Eado\Integrated BCM(C201)	Read remote count,Program remote>Delete remote,Read remote PIN code,
CHANGAN AUTO\CS55\BCM	Read remote count,Program remote,Clear fault code,
CHANGAN AUTO\CS55\Smart key	Read key count,Smart key>Delete smart key,
CHANGAN AUTO\Linmax\Integrated BCM	Read remote count,Program remote,Clear fault code,
CHANGAN AUTO\Linmax\Smart key	Read key count,Program smart key,Clear fault code,

GEELY	<p>GEELY\GEELY\Vision\Industrial traffic</p> <p>IMMO</p>	<p>Immobilization,Program</p> <p>engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault code,</p>
	<p>GEELY\GEELY\Free Cruiser\Industrial traffic</p> <p>IMMO</p>	<p>Immobilization,Program</p> <p>engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault code,</p>
	<p>GEELY\GEELY\Eagle\Industrial traffic</p> <p>IMMO</p>	<p>Immobilization,Program</p> <p>engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault code,</p>
	<p>GEELY\Gleagle\Panda\Industrial traffic</p> <p>IMMO</p>	<p>Immobilization,Program</p> <p>engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault code,</p>

<p>GEELY\Gleagle\GX718\Industrial traffic</p> <p>IMMO</p>	<p>Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault code,</p>
<p>GEELY\Gleagle\GX720\Industrial traffic</p> <p>IMMO</p>	<p>Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault code,</p>
<p>GEELY\Gleagle\GX7\Industrial traffic</p> <p>IMMO</p>	<p>Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault code,</p>
<p>GEELY\Gleagle\GC7\Industrial traffic</p> <p>IMMO</p>	<p>Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault code,</p>

<p>GEELY\Gleagle\GX2\Industrial traffic IMMO</p>	<p>Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault code,</p>
<p>GEELY\Gleagle\GX9\Industrial traffic IMMO</p>	<p>Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault code,</p>
<p>GEELY\Emgrand \EC7(EC7RS) series \Industrial traffic IMMO</p>	<p>Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault code,</p>
<p>GEELY\Emgrand \EC820\Industrial traffic IMMO</p>	<p>Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault code,</p>

<p>GEELY\Emgrand \EC825\Industrial traffic IMMO</p>	<p>Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault code,</p>
<p>GEELY\Emgrand \EX8\Industrial traffic IMMO</p>	<p>Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault code,</p>
<p>GEELY\Emgrand \FC-2\Industrial traffic IMMO</p>	<p>Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault code,</p>
<p>GEELY\Emgrand \GS\Industrial traffic IMMO</p>	<p>Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault code,</p>



<p>GEELY\Emgrand \GL\Industrial traffic</p> <p>IMMO</p>	<p>Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault code,</p>
<p>GEELY\MAPLE\Industrial traffic IMMO</p>	<p>Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault code,</p>
<p>GEELY\Yinglun\SC5\Industrial traffic</p> <p>IMMO</p>	<p>Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault code,</p>
<p>GEELY\Yinglun\SC6\Industrial traffic</p> <p>IMMO</p>	<p>Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault code,</p>

<p>GEELY\Yinglun\SC7\Industrial traffic IMMO</p>	<p>Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault code,</p>
<p>GEELY\Yinglun\SX7\Industrial traffic IMMO</p>	<p>Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault code,</p>
<p>GEELY\Yinglun\LG-1(CROSS)\Industrial traffic IMMO</p>	<p>Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault code,</p>
<p>GEELY\Gleagle\GX718\Lear remote</p>	<p>Program remote,</p>
<p>GEELY\Gleagle\GX7\Lear remote</p>	<p>Program remote,</p>
<p>GEELY\Emgrand \EC820\Lear remote</p>	<p>Program remote,</p>
<p>GEELY\Emgrand \EC825\Lear remote</p>	<p>Program remote,</p>
<p>GEELY\Yinglun\SX7\Lear remote</p>	<p>Program remote,</p>

<p>GEELY\Gleagle\GX7\Hai La smart key (-2015 6-digit PIN)</p>	<p>After-sales system programming,Clear PEPS learn status,Clear EMS learn status,Clear ESCL lear status,Offline key programming,Program key,Read learning status,</p>
<p>GEELY\Gleagle\GX9\Hai La smart key (-2015 6-digit PIN)</p>	<p>After-sales system programming,Clear PEPS learn status,Clear EMS learn status,Clear ESCL lear status,Offline key programming,Program key,Read learning status,</p>
<p>GEELY\Emgrand \EC825\Hai La smart key (-2015 6-digit PIN)</p>	<p>After-sales system programming,Clear PEPS learn status,Clear EMS learn status,Clear ESCL lear status,Offline key programming,Program key,Read learning status,</p>

<p>GEELY\Emgrand \EV8\Hai La smart key (-2015 6-digit PIN)</p>	<p>After-sales system programming,Clear PEPS learn status,Clear EMS learn status,Clear ESCL lear status,Offline key programming,Program key,Read learning status,</p>
<p>GEELY\Yinglun\SX7\Hai La smart key (-2015 6-digit PIN)</p>	<p>After-sales system programming,Clear PEPS learn status,Clear EMS learn status,Clear ESCL lear status,Offline key programming,Program key,Read learning status,</p>
<p>GEELY\Gleagle\GX7\Hai La smart key (2015- 32-digit ESK)</p>	<p>Program key,Read key count,</p>
<p>GEELY\Gleagle\GX9\Hai La smart key (2015- 32-digit ESK)</p>	<p>Program key,Read key count,</p>
<p>GEELY\Emgrand \EC825\Hai La smart key (2015- 32-digit ESK)</p>	<p>Program key,Read key count,</p>
<p>GEELY\Emgrand \EV8\Hai La smart key (2015- 32-digit ESK)</p>	<p>Program key,Read key count,</p>

GEELY\Emgrand \GC9\Hai La smart key (2015- 32-digit ESK)	Program key,Read key count,
GEELY\Emgrand \GL\Hai La smart key (2015- 32-digit ESK)	Program key,Read key count,
GEELY\Emgrand \GS\Hai La smart key (2015- 32-digit ESK)	Program key,Read key count,
GEELY\Yinglun\SX7\Hai La smart key (2015- 32-digit ESK)	Program key,Read key count,
GEELY\Emgrand \EC7(EC7RS) series \Continental smart key (-2015 free PIN)	PEPS learning,Read key count,Program key,After-sales mode switch,ESCL erase ESK,PEPS erase ESK,ESCL learning,PEPS configuration,
GEELY\Emgrand \EV\Continental smart key (-2015 free PIN)	PEPS learning,Read key count,Program key,After-sales mode switch,ESCL erase ESK,PEPS erase ESK,ESCL learning,PEPS configuration,

<p>GEELY\Emgrand \HEV\Continental smart key (-2015 free PIN)</p>	<p>PEPS learning,Read key count,Program key,After-sales mode switch,ESCL erase ESK,PEPS erase ESK,ESCL learning,PEPS configuration,</p>
<p>GEELY\Emgrand \EC7(EC7RS) series \Continental smart key(2015- 32-digit ESK)</p>	<p>PEPS learning,After-sales mode switch,ESCL erase ESK,PEPS erase ESK,ESCL learning,PEPS configuration,Program key,Read key count,</p>
<p>GEELY\Emgrand \EV\Continental smart key(2015- 32-digit ESK)</p>	<p>PEPS learning,After-sales mode switch,ESCL erase ESK,PEPS erase ESK,ESCL learning,PEPS configuration,Program key,Read key count,</p>
<p>GEELY\Emgrand \HEV\Continental smart key(2015- 32-digit ESK)</p>	<p>PEPS learning,After-sales mode switch,ESCL erase ESK,PEPS erase ESK,ESCL learning,PEPS configuration,Program key,Read key count,</p>
<p>GEELY\Emgrand \EC820\Lear remote (CANBUS)</p>	<p>Program remote,</p>

GEELY\Emgrand \EC825\Lear remote (CANBUS)	Program remote,
GEELY\Emgrand \EC820\UMC remote (UDS)	Program remote,
GEELY\Emgrand \EC820\Mitsubishi IMMO	Add key,
GEELY\Emgrand \EC825\Mitsubishi IMMO	Add key,
GEELY\Emgrand \GL\Continental remote	Program remote,
GEELY\Emgrand \GS\Continental remote	Program remote,
GEELY\Emgrand \X6\Joint electronic remote	Delete key,Add key,
GEELY\Emgrand \X6\Narn smart key	Reset EMS,Reset PEPS,Program key,Program EMS,Program ESCL,Delete key,Program PEPS,
GEELY\Emgrand \NL-3\Smart key system	Delete key,Program old key,Program new key,

<p>GEELY\Yinglun\TX4\Integrated IMMO(with Delphi engine)</p>	<p>Program engine ECU,Reset engine ECU,Reset immo ECU,Program key,ECU immobilization,Program new system,</p>
<p>GEELY\Yinglun\SC3\Integrated IMMO (with joint electric)</p>	<p>Program engine ECU,Reset engine ECU,Reset immo ECU,Program key,ECU immobilization,Program new system,</p>
<p>GEELY\Gleagle\GX720\Continental remote</p>	<p>Program remote,</p>
<p>GEELY\GEELY\New Vision\Continental smart key(2015- 32-digit ESK)</p>	<p>PEPS learning,After-sales mode switch,ESCL erase ESK,PEPS erase ESK,ESCL learning,PEPS configuration,Program key,Read key count,</p>
<p>GEELY\Yinglun\Ocean View\Industrial traffic IMMO</p>	<p>Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault code,</p>



<p>GEELY\Gleagle\GX2\IMMO(with joint EMS)</p>	<p>Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault code,</p>
<p>GEELY\Gleagle\Panda\IMMO(with joint EMS)</p>	<p>Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault code,</p>
<p>GEELY\Geely\New Free Cruiser\IMMO(with joint EMS)</p>	<p>Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault code,</p>
<p>GEELY\Yinglun\New Ocean View\IMMO(with joint EMS)</p>	<p>Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault code,</p>

<p>GEELY\Yinglun\GX725\Industrial traffic IMMO</p>	<p>Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault code,</p>
<p>GEELY\Yinglun\CROSS\Industrial traffic IMMO</p>	<p>Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault code,</p>
<p>GEELY\Yinglun\CROSS2/ Yinglun SC5\Industrial traffic IMMO</p>	<p>Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault code,</p>
<p>GEELY\Yinglun\CROSS3\Industrial traffic IMMO</p>	<p>Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault code,</p>
<p>GEELY\Yinglun\GX725\Continental remote</p>	<p>Program remote,</p>

GEELY\Emgrand \X3\Narn smart key	Reset EMS,Reset PEPS,Program key,Program EMS,Program ESCL,Delete key,Program PEPS,
GEELY\Yinglun\GX725\Narn smart key	Reset EMS,Reset PEPS,Program key,Program EMS,Program ESCL,Delete key,Program PEPS,
GEELY\Emgrand \S1\Smart key system	Key count,Program key,Delete key,
GEELY\Emgrand \S1\IMMO	Program immo ECU,Reset immo ECU,
GEELY\Emgrand\X1\Body control system	Program remote,Remote count,
GEELY\Emgrand\X3\Body control system	Program remote,Remote count,
GEELY\Emgrand\X3\Smart key	Program remote,Offline key programming,
GEELY\Yinglun\SC3\Shanghai Hu Gong BCM(KWP)	Learn remote,Delete remote,
GEELY\Yinglun\SC7\Shanghai Hu Gong BCM(KWP)	Learn remote,Delete remote,

<p>GEELY\Emgrand\New Emgrand\Continental smart key(2015- 32-digit ESK)</p>	<p>PEPS learning,After-sales mode switch,ESCL erase ESK,PEPS erase ESK,ESCL learning,PEPS configuration,Program key,Read key count,</p>
<p>GEELY\Emgrand\New Emgrand\Industrial traffic IMMO</p>	<p>Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault code,</p>
<p>GEELY\Yinglun\New ocean view\Shanghai Hu Gong BCM(KWP)</p>	<p>Learn remote,Delete remote,</p>
<p>GEELY\Yinglun\SX718\Industrial traffic IMMO</p>	<p>Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault code,</p>
<p>GEELY\Yinglun\SX718\Lear remote</p>	<p>Program remote,</p>
<p>GEELY\Yinglun\SX718\Narn smart key</p>	<p>Reset EMS,Reset PEPS,Program key,Program EMS,Program ESCL,Delete key,Program PEPS,</p>

<p>GEELY\Yinglun\SX720\Industrial traffic IMMO</p>	<p>Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault code,</p>
<p>GEELY\Yinglun\SX720\Continental smart key</p>	<p>Program remote,</p>
<p>GEELY\Yinglun\SX720\Narn smart key</p>	<p>Reset EMS,Reset PEPS,Program key,Program EMS,Program ESCL,Delete key,Program PEPS,</p>
<p>GEELY\Gleagle\GX718\Continental smart key</p>	<p>Program remote,</p>
<p>GEELY\Gleagle\GX718\Narn smart key</p>	<p>Reset EMS,Reset PEPS,Program key,Program EMS,Program ESCL,Delete key,Program PEPS,</p>
<p>GEELY\Gleagle\GX725\Industrial traffic IMMO</p>	<p>Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault code,</p>

GEELY\Gleagle\GX725\Narn smart key	Reset EMS,Reset PEPS,Program key,Program EMS,Program ESCL,Delete key,Program PEPS,
GEELY\Gleagle\GX725\Continental smart key	Program remote,
GEELY\Gleagle\GX9\Narn smart key	Reset EMS,Reset PEPS,Program key,Program EMS,Program ESCL,Delete key,Program PEPS,
GEELY\Geely\New Free Cruiser\Shanghai Hu Gong BCM(KWP)	Learn remote,Delete remote,
GEELY\Gleagle\Panda\Read Shanghai Industrial IMMO data	Read PIN code,
GEELY\Gleagle\Vision\Read Shanghai Industrial IMMO data	Read PIN code,
GEELY\Gleagle\GC7\Read Shanghai Industrial IMMO data	Read PIN code,
GEELY\Yinglun\SC7\Read Shanghai Industrial IMMO data	Read PIN code,
GEELY\Yinglun\CROSS\Read Shanghai Industrial IMMO data	Read PIN code,
GEELY\Yinglun\CROSS\Read Shanghai Industrial IMMO data	Read PIN code,

GEELY\Yinglun\CROSS2\ Yinglun SC5\Read Shanghai Industrial IMMO data	Read PIN code,
GEELY\Yinglun\CROSS3\Read Shanghai Industrial IMMO data	Read PIN code,
GEELY\Yinglun\SC6\Read Shanghai Industrial IMMO data	Read PIN code,
GEELY\Gleagle\GX718\Read Shanghai Industrial IMMO data	Read PIN code,
GEELY\Gleagle\GX720\Read Shanghai Industrial IMMO data	Read PIN code,
GEELY\Gleagle\GX725\Read Shanghai Industrial IMMO data	Read PIN code,
GEELY\Gleagle\GX2\Read Shanghai Industrial IMMO data	Read PIN code,
GEELY\Gleagle\GX9\Read Shanghai Industrial IMMO data	Read PIN code,
GEELY\Emgrand\EX8\Read Shanghai Industrial IMMO data	Read PIN code,
GEELY\Maple\Read Shanghai Industrial IMMO data	Read PIN code,

	GEELY\Yinglun\SC5\Read Shanghai Industrial IMMO data	Read PIN code,
	GEELY\Emgrand\EC820\Read Shanghai Industrial IMMO data	Read PIN code,
	GEELY\Emgrand\EC825\Read Shanghai Industrial IMMO data	Read PIN code,
	GEELY\Yinglun\SX718\Read Shanghai Industrial IMMO data	Read PIN code,
	GEELY\Yinglun\SX720\Read Shanghai Industrial IMMO data	Read PIN code,
	GEELY\Yinglun\SX725\Read Shanghai Industrial IMMO data	Read PIN code,
SAIC MAXUS	SAIC MAXUS\G10\Smart key	Add smart key,Delete smart key,
	SAIC MAXUS\G10\BCM	Delete remote,Add remote,Delete key,Add key,
	SAIC MAXUS\A80\BCM	Add key,Delete remote,Add remote,Delete key,
	SAIC MAXUS\EV80\BCM	Add key,Delete remote,Add remote,Delete key,
	SAIC MAXUS\V80\BCM	Add key,Delete remote,Add remote,Delete key,



	HAIMA\IMMO\Industrial traffic IMMO	<p>Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault code,</p>
HAIMA	HAIMA\IMMO\Lianchuang IMMO(old)	<p>Write immo VIN code,Write engine VIN code,Check engine ECU,Read VIN code,Reset engine ECU,Program engine ECU,Program whole system,Read key count,Clear fault code,Add key,Delete key,Immobilization,Reset immo box,Detect key,</p>
	HAIMA\IMMO\UMC IMMO(M3)	<p>Replace immo ECU,Program engine,Detect key,Reset engine ECU,Delete key,Add old key,Add new key,Read key count,Clear fault code,</p>

HAIMA\IMMO\UMC IMMO(M5/M7/S7)	Replace immo ECU,Program engine,Detect key,Reset engine ECU,Delete key,Add old key,Add new key,Read key count,Clear fault code,
HAIMA\IMMO\IMMO controller(M6/S5)	Reset ECM,Adjust ECMPIN,Key testing,Lock ECU,Adjust ECMSK2,Make SK2,Write PIN code,Write VIN code,Reset ECU hardware,Delete key,Program old key,Program new key,
HAIMA\Smart key\M8\Huf smart key	Program old key,Program new key,Program IMMO,Clear ESCL immo spot,Program start controller,Program ESCL,
HAIMA\Smart key\S5\Fuxin der smart key	Reset PEPS,Program PEPS & IMMO,Program PEPS & ESCL,Program PEPS,Program key,
HAIMA\Remote\M3\TungThih BCM	Program remote,
HAIMA\Remote\M5\Steel Mate body controller	Program remote,

HAIMA\Remote\M3\Kingdom auto BCM	Program remote,
HAIMA\IMMO\UMC IMMO(M8/V70)	Clear fault code,Replace immo ECU,Replace engine ECU,Reset engine ECU,Read key status,Add old key,Add new key,Delete key,
HAIMA\Remote\M6\Kingdom auto BCM	Program remote,
HAIMA\Remote\S5\Kingdom auto BCM	Program remote,
HAIMA\Smart key\M6\Huf smart key	Program old key,Program new key,Program IMMO,Clear ESCL immo spot,Program start controller,Program ESCL,
HAIMA\Smart key\M5\Huf smart key	Program old key,Program new key,Program IMMO,Clear ESCL immo spot,Program start controller,Program ESCL,
HAIMA\Smart key\M3\Huf smart key	Program old key,Program new key,Program IMMO,Clear ESCL immo spot,Program start controller,Program ESCL,

HAIMA\Smart key\S7\Huf smart key	Program old key,Program new key,Program IMMO,Clear ESCL immo spot,Program start controller,Program ESCL,
HAIMA\Smart key\S5\Huf smart key	Program old key,Program new key,Program IMMO,Clear ESCL immo spot,Program start controller,Program ESCL,
HAIMA\Smart key\V70\Huf smart key	Program old key,Program new key,Program IMMO,Clear ESCL immo spot,Program start controller,Program ESCL,
HAIMA\Remote\V70\Steel Mate body controller	Program remote,
HAIMA\PIN code	Industrial traffic PIN code reading,

	HAIMA\IMMO\Lianchuang IMMO(S7)	Add key,Delete key,New system programming,Immo ECU programming,Reading the amount of keys,Engine ECU programming,Immo ECU reset,Engine ECU reset,Read VIN code,Key detection,Engine ECU detection,Program engine VIN,Program Immo VIN,Lock Immo,Clear fault code,
MG	MG\Immobilizer\GT	Add key,Delete key,Check lock time,
	MG\Immobilizer\MG3\2013-	Add key,Delete key,Check lock time,
	MG\Immobilizer\MG5\2013-	Add key,Delete key,Check lock time,
	MG\Immobilizer\MG7\2013-	Add key,Delete key,Check lock time,
	MG\Immobilizer\MG6\2012	Delete key,Add key,
	MG\Remote\MG7	Enable remote,Disable remote,Program remote,Clear fault code,

MG\Remote\Old MG3	Add remote,Clear remote,Read VIN code,Read immo emergency code,
MG\Immobilizer\MG3\2012	Add key>Delete key,Check lock time,
MG\Immobilizer\MG5\2012	Add key>Delete key,Check lock time,
MG\Immobilizer\MG6\2013-	Add key>Delete key,The rest unlock time,
MG\Immobilizer\GS\2016 \With smart	Add key>Delete key,
MG\Immobilizer\GS\2016 \Without smart	Add key>Delete key,
MG\Immobilizer\GS\2017\Without smart	Delete key,Add key,Read key count,
MG\Remote\MG TF	Add remote,Clear remote,Read VIN code,Read immo emergency code,
MG\Read PIN code\MG6\2013-	Read PIN code,
MG\Remote\MG7-L	Enable remote,Disable remote,Program remote,Clear fault code,
MG\IMMO\ZS\Without smart	Add key>Delete key,Key number,

	MG\IMMO\ZS\With smart	Add smart key,Clear smart key,Key number,
	MG\IMMO\MG6\2018-	Add key>Delete key,
FIAT	FIAT\China\Viaggio\Fobik	Backup immo data,Make dealer key,Program key,Key identification,
	FIAT\China\Ottimo\Smart key	Program smart key,Read pin code,
	FIAT\China\Viaggio\Smart key	Program smart key,Read pin code,
	FIAT\China\Ottimo\Fobik	Backup immo data,Make dealer key,Program key,Key identification,
	FIAT\China\Palio\Immobilizer	Backup immo data,Make dealer key,Program key,Program remote,
	FIAT\China\Siena\Immobilizer	Backup immo data,Make dealer key,Program key,Program remote,
	FIAT\China\Bravo\Immobilizer	Backup immo data,Program key,Make dealer key,Program remote,
	FIAT\China\Perla\Immobilizer	Backup immo data,Make dealer key,Program key,Program remote,

FIAT\China\Freemont\Smart key	Read PIN code,Add smart key,Delete smart key,
FIAT\Africa\Siena\2002-2008	Key count,Add key,Remote count,Program remote,
FIAT\Asia\Fiorino\2008-	Key count,All key lost,Read PIN code,Make dealer key,
FIAT\Europe\500\2007-2016	Key count,All key lost,Read PIN code,Make dealer key,
FIAT\Europe\Albea\2002-	Key count,Add key,Remote count,Program remote,
FIAT\Europe\Bravo	Key count,Add key,Remote count,Program remote,
FIAT\Europe\Croma\2005-2007	Key info,Add key,
FIAT\Europe\Doblo\2005-2009	Key count,Add key,Remote count,Program remote,
FIAT\Europe\Doblo\2009-	Key count,All key lost,Read PIN code,Make dealer key,
FIAT\Europe\Ducato\2006-2012	Key count,Add key,Remote count,Program remote,
FIAT\Europe\Ducato\2012-	Key info,Add key,Read PIN code,Make dealer key,



FIAT\Europe\Fiorino\2008-	Key count,All key lost,Read PIN code,Make dealer key,
FIAT\South America\Punto\2008-2014	Key count,Add key,Remote count,Program remote,
FIAT\South America\Stilo\2002-2006	Key count,Add key,Remote count,Program remote,
FIAT\South America\Doblo\2000-	Key count,Add key,Remote count,Program remote,
FIAT\South America\Fiorino\2014-2015	Key count,Add key,Remote count,Program remote,
FIAT\South America\Idea\2004-2012	Key count,Add key,Remote count,Program remote,
FIAT\South America\Linea\2004-2012	Key count,Add key,Remote count,Program remote,
FIAT\South America\Palio\2000-2003	Key count,Add key,Remote count,Program remote,
FIAT\South America\Palio\2004-2012	Key count,Add key,Remote count,Program remote,
FIAT>Select from type\Immobilizer\Type 1	Immobilizer,
FIAT>Select from type\Immobilizer\Type 2	Immobilizer,

FIAT\Select from type\Immobilizer\Type 3	Immobilizer,
FIAT\Select from type\Immobilizer\Type 4	Add key,
FIAT\Select from type\Immobilizer\Type 5	Key info,Add key,
FIAT\Select from type\Immobilizer\Type 6	Key count,Immobilizer,Delete key,
FIAT\Select from type\Immobilizer\Type 7	Key count,Immobilizer,Delete key,
FIAT\Select from type\Immobilizer\Type 8	Key count,Add key,Remote count,Program remote,
FIAT\Select from type\Immobilizer\Type 9	Immobilizer,Delete key,
FIAT\Select from type\Immobilizer\Type 10	Program key,Delete key,Obtain immo ID,
FIAT\Select from type\Smart key\Type 1	Add smart key,Delete smart key,
FIAT\Select from type\Smart key\Type 2	Add smart key,Delete smart key,
FIAT\Asia\500	Key count,All key lost,Read PIN code,Make dealer key,
FIAT\Asia\Linea	Key count,Add key,Remote count,Program remote,

FIAT\Asia\Punto	Key count,Add key,Remote count,Program remote,
FIAT\Asia\Punto grande\2006-2011	Key count,All key lost,Read PIN code,Make dealer key,
FIAT\Asia\Viaggio\2013-	Key count,All key lost,Read PIN code,Make dealer key,
FIAT\Europe\500X	Add smart key>Delete smart key,
FIAT\Europe\Freemont\Smart key	Add smart key>Delete smart key,
FIAT\Europe\Idea\2003-2012	Key count,Add key,Remote count,Program remote,
FIAT\Europe\Linea\2007	Key count,Add key,Remote count,Program remote,
FIAT\Europe\Palio	Key count,Add key,Remote count,Program remote,
FIAT\Europe\Panda\2005-2011	Key count,Add key,Remote count,Program remote,
FIAT\Europe\Panda\2011-	Key count,All key lost,Read PIN code,Make dealer key,
FIAT\Europe\Punto\2000-2006	Key count,Add key,Remote count,Program remote,
FIAT\Europe\Punto\2006-2011	Key count,All key lost,Read PIN code,Make dealer key,

FIAT\Europe\Qubo\2008-	Key count,All key lost,Read PIN code,Make dealer key,
FIAT\Europe\Scudo\2007\Type 1	Immobilizer,
FIAT\Europe\Scudo\2007\Type 2	Immobilizer,
FIAT\Europe\Scudo\2007\Type 3	Immobilizer,
FIAT\Europe\Scudo\2008-	Add key,
FIAT\Europe\Sedici\Petro\2010	Key count,Immobilizer,Delete key,
FIAT\Europe\Stilo\2000-2006	Key count,Add key,Remote count,Program remote,
FIAT\Europe\Ulysee\2002-2010	Add key,
FIAT\Europe\Viaggio\2012-	Key count,All key lost,Read PIN code,Make dealer key,
FIAT\Middle East\500\2007-	Key count,All key lost,Read PIN code,Make dealer key,
FIAT\Middle East\Doblo\2009	Key count,Add key,Remote count,Program remote,
FIAT\South America\500\2010-2012	Key count,All key lost,Read PIN code,Make dealer key,
FIAT\South America\Bravo\2007-	Key count,Add key,Remote count,Program remote,
FIAT\South America\Siena\2008-2012	Key count,Add key,Remote count,Program remote,

	FIAT\South America\Strada\2000-2003	Key count,Add key,Remote count,Program remote,
	FIAT>Select from type\Immobilizer\Type 11	Key count,All key lost,Read PIN code,Make dealer key,
	FIAT\Europe\Sedici\Diesel\2006-2010	Add new key,Add old key,Delete key,
	FIAT\Europe\Sedici\Diesel\2010-	Add key,
	FIAT\Europe\Phedra\2005-	Add key,
	FIAT\Europe\Ulysse\2002-2005	Add key,
	FIAT\Europe\Ulysse\2005-2010	Add key,
	FIAT\Europe\500L	Key info,Add key,Read PIN code,Make dealer key,
CHANGHE SUZUKI	CHANGHE SUZUKI\Wagon R\IMMO\TungThih IMMO	Reset engine ECU,Key detecting,Reset immo ECU,Delete key,Add old key,Clear fault code,Program engine ECU,ECU immobilization,Add new key,Read pin code,Program VIN,Lock immobiliser,

<p>CHANGHE SUZUKI\Splash\IMMO\TungThih IMMO</p>	<p>Reset engine ECU,Key detecting,Reset immo ECU,Delete key,Add old key,Clear fault code,Program engine ECU,ECU immobilization,Add new key,Read pin code,Program VIN,Lock immobiliser,</p>
<p>CHANGHE SUZUKI\Splash\IMMO\TungThih IMMO</p>	<p>Program engine ECU,ECU immobilization,Program key,Reset EMS,</p>
<p>CHANGHE SUZUKI\Liana\IMMO 1</p>	<p>Program key&gt;Delete key,Register immobiliser,</p>
<p>CHANGHE SUZUKI\Liana\Keyless access</p>	<p>Learn new PEPS,Learn old PEPS,Key(keyless enter) programming,Key(immobiliser)pro gramming,Learn SLU (steering solenoid valve),Reset EMS(Engine computer),Learn EMS(Engine computer),</p>

	<p>CHANGHE SUZUKI\Liana\TungThih</p> <p>IMMO</p>	<p>Reset engine ECU,Key detecting,Reset immo ECU,Delete key,Add old key,Clear fault code,Program engine ECU,ECU immobilization,Add new key,Read pin code,Program VIN,Lock immobiliser,</p>
<p>ZHENGZH OU NISSAN</p>	<p>ZHENGZHOU NISSAN\IMMO\Succe 1.5\Industrial traffic IMMO</p>	<p>Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault code,Read pin code,</p>
	<p>ZHENGZHOU NISSAN\IMMO\Reach\Industrial traffic IMMO</p>	<p>Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault code,Read pin code,</p>
	<p>ZHENGZHOU NISSAN\IMMO\Odin diesel\Industrial traffic IMMO</p>	<p>Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault code,Read pin code,</p>

<p>ZHENGZHOU NISSAN\IMMO\Succe 1.6/2.0\Lianchuang IMMO</p>	<p>Write immo VIN code,Write engine VIN code,Engine ECU detection,Read VIN code,Reset engine ECU,Program engine ECU,Program whole system,Read key count,Add key,Delete key,Detect key,Clear fault code,Read PIN code,Read pin code,</p>
<p>ZHENGZHOU NISSAN\IMMO\NV200\Type 2</p>	<p>Add key,Activate steering wheel lock,</p>
<p>ZHENGZHOU NISSAN\Smart key\NV200\Smart eky(4C)</p>	<p>Program smart key&gt;Delete smart key,Program steering lock,</p>
<p>ZHENGZHOU NISSAN\Smart key\Dongfeng MX6\Smart eky(4C)</p>	<p>Program smart key&gt;Delete smart key,Program steering lock,</p>
<p>ZHENGZHOU NISSAN\IMMO\Dongfeng MX6</p>	<p>Add key,Activate steering wheel lock,</p>
<p>ZHENGZHOU NISSAN\IMMO\NV200\Type 1</p>	<p>Add key,Activate steering wheel lock,</p>
<p>ZHENGZHOU NISSAN\Read PIN code\Succe 1.6/2.0\Lianchuang IMMO(read PIN)</p>	<p>Read PIN code,</p>



	ZHENGZHOU NISSAN\Release directional lock	Release steering lock,
	ZHENGZHOU NISSAN\Smart key\Dongfeng MX5\Smart key	Add smart key,
HAFEI	HAFEI\Saibao\Remote	Program remote,
	HAFEI\Simbo\Remote	Program remote,
	HAFEI\Hafei 8\Mitsubishi IMMO	Add key,
	HAFEI\Simbo\Lianchuang IMMO	Write immo VIN code,Write engine VIN code,Engine ECU detection,Read VIN code,Reset engine ECU,Program engine ECU,Program whole system,Read key count,Clear fault code,Add key>Delete key,Immobilization,Reset immobiliser,Detect key,

	HAFEI\Lobo\Lianchuang IMMO	Write immo VIN code,Write engine VIN code,Engine ECU detection,Read VIN code,Reset engine ECU,Program engine ECU,Program whole system,Read key count,Clear fault code,Add key>Delete key,Immobilization,Reset immobiliser,Detect key,
HUWTAI	HUWTAI>Select from vehicle\Terracan ERRACAN\Remote	Program remote,
	HUWTAI>Select from vehicle\Sisha Fe(domestic)\Remote	Program remote,
	HUWTAI>Select from vehicle\Sisha Fe(imported)\Remote	Program remote,
	HUWTAI>Select from vehicle\B11\Remote	Program remote,
	HUWTAI>Select from vehicle\B35(boliger)\Remote	Program remote,
	HUWTAI>Select from vehicle\B21(E70)\Remote	Program remote,

HUWTAI\Select from type\Remote\16 PIN\Type 1(K)	Program remote,
HUWTAI\Select from vehicle\Sisha Fe(domestic)\IMMO 1	Add key,Delete key,Detect key,Write VIN code,Read PIN code,
HUWTAI\Select from vehicle\Sisha Fe(imported)\IMMO 1	Add key,Delete key,Detect key,Write VIN code,Read PIN code,
HUWTAI\Select from type\IMMO\IMMO 1	Add key,Delete key,Detect key,Write VIN code,Read PIN code,
HUWTAI\Select from type\IMMO\IMMO 2	Program key,Read key count,ECM neutral mode,
HUWTAI\Select from vehicle\Sisha Fe(domestic)\IMMO 2	Program key,Read key count,ECM neutral mode,
HUWTAI\Select from vehicle\Sisha Fe(imported)\IMMO 2	Program key,Read key count,ECM neutral mode,
HUWTAI\Select from vehicle\Sisha Fe(imported)\IMMO 3	Program key,Read key count,ECM neutral mode,
HUWTAI\Select from type\IMMO\IMMO 3	Program key,Read key count,ECM neutral mode,

	HUWTAI\Select from type\IMMO\IMMO 4	ECM neutral mode,Read key count,Program key,
	HUWTAI\Select from vehicle\Sisha Fe(imported)\IMMO 4	ECM neutral mode,Read key count,Program key,
	HUWTAI\Select from type\Remote\16 PIN\Type 2	Program remote,
	HUWTAI\Select from type\Remote\10 PIN	Program remote,
BORGWAR D	BORGWARD\IMMO system	Add key,Delete key,Program EMS,Program PEPS,Program TBOX,Program new system,Write ESCL PIN code,
LIFAN	LIFAN\Sedan\520\CJAE IMMO	Clear fault code,Program engine VIN,Write key number,Reset immobiliser,Reset engine ECU,Immobilization,Program engine ECU,Delete key,Program key,Program immo VIN,

	LIFAN\Sedan\620\CJAE IMMO	Clear fault code,Program engine VIN,Write key number,Reset immobiliser,Reset engine ECU,Immobilization,Program engine ECU>Delete key,Program key,Program immo VIN,
	LIFAN\Sedan\X60\CJAE IMMO	Clear fault code,Program engine VIN,Write key number,Reset immobiliser,Reset engine ECU,Immobilization,Program engine ECU>Delete key,Program key,Program immo VIN,
	LIFAN\Minicar\Feng Shun\CJAE IMMO	Clear fault code,Program engine VIN,Write key number,Reset immobiliser,Reset engine ECU,Immobilization,Program engine ECU>Delete key,Program key,Program immo VIN,

LIFAN\Minicar\Xing Shun\CJAE IMMO	Clear fault code,Program engine VIN,Write key number,Reset immobiliser,Reset engine ECU,Immobilization,Program engine ECU>Delete key,Program key,Program immo VIN,
LIFAN\Minicar\Fu Shun\CJAE IMMO	Clear fault code,Program engine VIN,Write key number,Reset immobiliser,Reset engine ECU,Immobilization,Program engine ECU>Delete key,Program key,Program immo VIN,
LIFAN\Sedan\520\Siemens IMMO	Immobilization,Program engine,Reset engine,Reset immobiliser>Delete key,Program key,Reset PIN code,Clear fault code,
LIFAN\Sedan\620\Siemens IMMO	Immobilization,Program engine,Reset engine,Reset immobiliser>Delete key,Program key,Reset PIN code,Clear fault code,

LIFAN\Sedan\X60\Siemens IMMO	<p>Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault code,</p>
LIFAN\Minicar\Feng Shun\Siemens IMMO	<p>Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault code,</p>
LIFAN\Minicar\Xing Shun\Siemens IMMO	<p>Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault code,</p>
LIFAN\Minicar\Fu Shun\Siemens IMMO	<p>Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault code,</p>

LIFAN\Sedan\Marvell\Smart key	Add smart key,Delete smart key,Program ESCL(electronic steering column lock),Delete ESCL(electronic steering column lock),
LIFAN\Sedan\820\Remote	Program remote,Delete remote,
LIFAN\Sedan\720\Remote	Program remote,Delete remote,Synchronize remote,Immobilization,Delete immobilizer,Reprogram immobilizer,Program steering lock controller,
LIFAN\Sedan\620 (2nd gen)\Remote	Program remote,Program immo chip,Program immo ECU,
LIFAN\Sedan\620EV\Remote	Program remote,Program immo chip,Program immo ECU,
LIFAN\Sedan\Shiner\Remote	Program remote,Immobilization,
LIFAN\Sedan\Shiner\IMMO	Immobilizer,Program PEPS,



	LIFAN\Sedan\320\CJAE IMMO(UMC)	<p>Immobilizer,Program immo</p> <p>ECU,Program engine</p> <p>ECU,Program whole</p> <p>system,Reset immo ECU,Reset</p> <p>engine ECU,</p>
	LIFAN\Sedan\530\CJAE IMMO(UMC)	<p>Immobilizer,Program immo</p> <p>ECU,Program engine</p> <p>ECU,Program whole</p> <p>system,Reset immo ECU,Reset</p> <p>engine ECU,</p>
	LIFAN\Sedan\630\CJAE IMMO(UMC)	<p>Immobilizer,Program immo</p> <p>ECU,Program engine</p> <p>ECU,Program whole</p> <p>system,Reset immo ECU,Reset</p> <p>engine ECU,</p>
	LIFAN\Sedan\X50\CJAE IMMO(UMC)	<p>Immobilizer,Program immo</p> <p>ECU,Program engine</p> <p>ECU,Program whole</p> <p>system,Reset immo ECU,Reset</p> <p>engine ECU,</p>

	LIFAN\Sedan\620CNG\CJAE IMMO(Delphi)	Clear fault code,Program engine VIN,Write key number,Reset immobiliser,Reset engine ECU,Immobilization,Program engine ECU>Delete key,Program key,Program immo VIN,
	LIFAN\Sedan\330\CJAE IMMO(UMC)	Immobilizer,Program immo ECU,Program engine ECU,Program whole system,Reset immo ECU,Reset engine ECU,
	LIFAN\Sedan\Lotto\CJAE IMMO(UMC)	Immobilizer,Program immo ECU,Program engine ECU,Program whole system,Reset immo ECU,Reset engine ECU,
	LIFAN\Sedan\X70\IMMO	Immobilizer,Program ESCL,Program engine ECU,
HIMIKO	HIMIKO\IMMO system	Add key>Delete key,

ZX AUTO	ZX AUTO\IMMO\Delphi IMMO	Clear fault code,Reset PIN code,Program key,Delete key,ECU immobilization,Program engine ECU,Reset engine ECU,Reset immo box,
	ZX AUTO\IMMO\Delphi diesel(Bosch 2.8TC) IMMO	Read key count,Clear fault code,Reset PIN code,Program key,Delete key,Program immo ECU,Program engine ECU,Program engine VIN code,Program immo VIN code,Reset engine ECU,Reset immo ECU,Read engine VIN,
DONGFENG G FENGGUA NG	DONGFENG FENGGUANG\370\Smart key	Program smart key,
	DONGFENG FENGGUANG\580\Smart key	Program smart key,
	DONGFENG FENGGUANG\370\BCM	Read key count,Program key,Key clear,Program remote,
	DONGFENG FENGGUANG\580\BCM	Read key count,Program key,Key clear,Program remote,

FOTON	FOTON\Tunland\Remote\Type 1	Read remote count,Program remote,Clear remote,
	FOTON\Sauvana\Remote\Type 1	Read remote count,Program remote,Clear remote,
	FOTON\Tunland\Remote\Type 2	Read remote count,Program remote,Clear remote,
	FOTON\Sauvana\Remote\Type 2	Read remote count,Program remote,Clear remote,
ZD	ZD\ZD2\PEPS system	Program new system,Program PEPS controller,Program key>Delete key,Read key status,Program ESCL,Program EMS,Reset EMS,Reset BCM,Write VIN code,Write PEPS PIN code,Write part no.,
BRILLIANCE AUTO E AUTO	BRILLIANCE AUTO\Zhonghua\Greur \Delphi IMMO	Read key count,Clear fault code,Program key>Delete key,ECU immobilization,Program engine ECU,Program engine VIN,Program immo VIN,Reset engine ECU,Reset immo ECU,

<p style="text-align: center;">BRILLIANCE AUTO\Zhonghua\Junjie\Delphi IMMO</p>	<p>Read key count, Clear fault code, Program key, Delete key, ECU immobilization, Program engine ECU, Program engine VIN, Program immo VIN, Reset engine ECU, Reset immo ECU,</p>
<p style="text-align: center;">BRILLIANCE AUTO\Zhonghua\Coupe\Delphi IMMO</p>	<p>Read key count, Clear fault code, Program key, Delete key, ECU immobilization, Program engine ECU, Program engine VIN, Program immo VIN, Reset engine ECU, Reset immo ECU,</p>
<p style="text-align: center;">BRILLIANCE AUTO\Jinbe\Delphi IMMO</p>	<p>Read key count, Clear fault code, Program key, Delete key, ECU immobilization, Program engine ECU, Program engine VIN, Program immo VIN, Reset engine ECU, Reset immo ECU,</p>

	<p>BRILLIANCE AUTO\Zhonghua\Greur  \Siemens IMMO</p>	<p>Clear fault code,Program  key,Reset immo ECU,Reset  engine ECU,ECU  immobilization,Program engine  ECU,Program engine  VIN,Program maintenance station  ID,Programming machine main  no.,Program new system,</p>
	<p>BRILLIANCE AUTO\Zhonghua\Greur  \Brilliance IMMO(2009-)</p>	<p>Clear fault code,Program  key,Reset immo ECU,Reset  engine ECU,ECU  immobilization,Program engine  ECU,Program engine  VIN,Program maintenance station  ID,Programming machine main  no.,Program new system,</p>

	<p style="text-align: center;">BRILLIANCE  AUTO\Zhonghua\Junjie\Siemens IMMO</p>	<p style="text-align: center;">Clear fault code,Program  key,Reset immo ECU,Reset  engine ECU,ECU  immobilization,Program engine  ECU,Program engine  VIN,Program maintenance station  ID,Programming machine main  no.,Program new system,</p>
	<p style="text-align: center;">BRILLIANCE  AUTO\Zhonghua\Junjie\Brilliance  IMMO(2009-)</p>	<p style="text-align: center;">Clear fault code,Program  key,Reset immo ECU,Reset  engine ECU,ECU  immobilization,Program engine  ECU,Program engine  VIN,Program maintenance station  ID,Programming machine main  no.,Program new system,</p>

	<p style="text-align: center;">BRILLIANCE  AUTO\Zhonghua\Coupe\Siemens IMMO</p>	<p style="text-align: center;">Clear fault code,Program  key,Reset immo ECU,Reset  engine ECU,ECU  immobilization,Program engine  ECU,Program engine  VIN,Program maintenance station  ID,Programming machine main  no.,Program new system,</p>
	<p style="text-align: center;">BRILLIANCE  AUTO\Zhonghua\Coupe\Brilliance  IMMO(2009-)</p>	<p style="text-align: center;">Clear fault code,Program  key,Reset immo ECU,Reset  engine ECU,ECU  immobilization,Program engine  ECU,Program engine  VIN,Program maintenance station  ID,Programming machine main  no.,Program new system,</p>



	<p style="text-align: center;">BRILLIANCE  AUTO\Zhonghua\FRV\Brilliance  IMMO(2009-)</p>	<p style="text-align: center;">Clear fault code,Program  key,Reset immo ECU,Reset  engine ECU,ECU  immobilization,Program engine  ECU,Program engine  VIN,Program maintenance station  ID,Programming machine main  no.,Program new system,</p>
	<p style="text-align: center;">BRILLIANCE  AUTO\Zhonghua\FSV\Brilliance  IMMO(2009-)</p>	<p style="text-align: center;">Clear fault code,Program  key,Reset immo ECU,Reset  engine ECU,ECU  immobilization,Program engine  ECU,Program engine  VIN,Program maintenance station  ID,Programming machine main  no.,Program new system,</p>

	<p style="text-align: center;">BRILLIANCE  AUTO\Zhonghua\Cross\Brilliance  IMMO(2009-)</p>	<p style="text-align: center;">Clear fault code,Program  key,Reset immo ECU,Reset  engine ECU,ECU  immobilization,Program engine  ECU,Program engine  VIN,Program maintenance station  ID,Programming machine main  no.,Program new system,</p>
	<p style="text-align: center;">BRILLIANCE  AUTOZhonghua\Wagon\Brilliance  IMMO(2009-)</p>	<p style="text-align: center;">Clear fault code,Program  key,Reset immo ECU,Reset  engine ECU,ECU  immobilization,Program engine  ECU,Program engine  VIN,Program maintenance station  ID,Programming machine main  no.,Program new system,</p>

	<p style="text-align: center;">BRILLIANCE  AUTO\Zhonghua\H530\Brilliance  IMMO(2009-)</p>	<p style="text-align: center;">Clear fault code,Program  key,Reset immo ECU,Reset  engine ECU,ECU  immobilization,Program engine  ECU,Program engine  VIN,Program maintenance station  ID,Programming machine main  no.,Program new system,</p>
	<p style="text-align: center;">BRILLIANCE  AUTO\Zhonghua\V5\Brilliance  IMMO(2009-)</p>	<p style="text-align: center;">Clear fault code,Program  key,Reset immo ECU,Reset  engine ECU,ECU  immobilization,Program engine  ECU,Program engine  VIN,Program maintenance station  ID,Programming machine main  no.,Program new system,</p>

	<p style="text-align: center;">BRILLIANCE  AUTO\Zhonghua\H230\Brilliance  IMMO(2009-)</p>	<p style="text-align: center;">Clear fault code,Program  key,Reset immo ECU,Reset  engine ECU,ECU  immobilization,Program engine  ECU,Program engine  VIN,Program maintenance station  ID,Programming machine main  no.,Program new system,</p>
	<p style="text-align: center;">BRILLIANCE  AUTO\Zhonghua\H320\Brilliance  IMMO(2009-)</p>	<p style="text-align: center;">Clear fault code,Program  key,Reset immo ECU,Reset  engine ECU,ECU  immobilization,Program engine  ECU,Program engine  VIN,Program maintenance station  ID,Programming machine main  no.,Program new system,</p>

	<p style="text-align: center;">BRILLIANCE  AUTO\Zhonghua\H330\Brilliance  IMMO(2009-)</p>	<p style="text-align: center;">Clear fault code,Program  key,Reset immo ECU,Reset  engine ECU,ECU  immobilization,Program engine  ECU,Program engine  VIN,Program maintenance station  ID,Programming machine main  no.,Program new system,</p>
	<p style="text-align: center;">BRILLIANCE  AUTO\Zhonghua\H220\Brilliance  IMMO(2009-)</p>	<p style="text-align: center;">Clear fault code,Program  key,Reset immo ECU,Reset  engine ECU,ECU  immobilization,Program engine  ECU,Program engine  VIN,Program maintenance station  ID,Programming machine main  no.,Program new system,</p>

<p style="text-align: center;">BRILLIANCE  AUTO\Zhonghua\V3\Brilliance  IMMO(2009-)</p>	<p style="text-align: center;">Clear fault code,Program  key,Reset immo ECU,Reset  engine ECU,ECU  immobilization,Program engine  ECU,Program engine  VIN,Program maintenance station  ID,Programming machine main  no.,Program new system,</p>
<p style="text-align: center;">BRILLIANCE AUTO\Jinbe\Brilliance  IMMO(hiace H2)</p>	<p style="text-align: center;">Clear fault code,Program  key,Reset immo ECU,Reset  engine ECU,ECU  immobilization,Program engine  ECU,Program engine  VIN,Program maintenance station  ID,Programming machine main  no.,Program new system,</p>
<p style="text-align: center;">BRILLIANCE  AUTO\Zhonghua\FSV\PEPS smart  key(new)</p>	<p style="text-align: center;">Clear fault code,Program smart  key,Program new system,Reset  engine ECU,Reset immo ECU,</p>
<p style="text-align: center;">BRILLIANCE  AUTO\Zhonghua\H330\PEPS smart key</p>	<p style="text-align: center;">Clear fault code,Program smart  key,Program new system,Reset  engine ECU,Reset immo ECU,</p>

<p style="text-align: center;">BRILLIANCE AUTO\Zhonghua\H530\PEPS smart key</p>	<p>Program new system,Program smart key,Program new smart key,Program PEPS,Reset PEPS,Program ESCL,</p>
<p style="text-align: center;">BRILLIANCE AUTO\Zhonghua\V5\PEPS smart key</p>	<p>Program new system,Program smart key,Program new smart key,Program PEPS,Reset PEPS,Program ESCL,</p>
<p style="text-align: center;">BRILLIANCE AUTO\Zhonghua\V3\PEPS smart key</p>	<p>Program key,Program new PEPS,Program new ESCL,Program new EMS,Program new system,Read FOB status,Reset EMS,Reset FOB,Reset PEPS,</p>
<p style="text-align: center;">BRILLIANCE AUTO\Huasong\Huasong 7\IMMO</p>	<p>Program key,Delete &amp; add key,Engine programming,</p>
<p style="text-align: center;">BRILLIANCE AUTO\Huasong\Huasong 7\Remote</p>	<p>Lost all remote,Add remote,</p>
<p style="text-align: center;">BRILLIANCE AUTO\Zhonghua\Zhonghua(old)\Mitsubi shi IMMO</p>	<p style="text-align: center;">Add key,</p>

BRILLIANCE AUTO\Zhonghua\Greur Mitsubishi IMMO	Add key,
BRILLIANCE AUTO\Zhonghua\Junjie\Mitsubishi IMMO	Add key,
BRILLIANCE AUTO\Zhonghua\Coupe\Mitsubishi IMMO	Add key,
BRILLIANCE AUTO\Zhonghua\FRV\Mitsubishi IMMO	Add key,
BRILLIANCE AUTO\Zhonghua\FSV\Mitsubishi IMMO	Add key,
BRILLIANCE AUTO\Zhonghua\H330\Mitsubishi IMMO	Add key,
BRILLIANCE AUTO\Zhonghua\H3\PEPS smart key	Program key,Program new PEPS,Program new ESCL,Program new EMS,Program new system,Read FOB status,Reset EMS,Reset FOB,Reset PEPS,



	BRILLIANCE AUTO\Zhonghua\H3\Brilliance IMMO	Clear fault code,Program key,Reset immo ECU,Reset engine ECU,ECU immobilization,Program engine ECU,Program engine VIN,Program maintenance station ID,Programming machine main no.,Program new system,
CHANGHE AUTO	CHANGHE AUTO\Q25\BCM	Clear fault code,Read key count,Program key>Delete key,Unlock BCM,Replace BCM,Replace EMS,Unlock EMS,
	CHANGHE AUTO\Q35\BCM	Clear fault code,Read key count,Program key>Delete key,Unlock BCM,Replace BCM,Replace EMS,Unlock EMS,
HANTENG AUTO	HANTENG AUTO\X7\Smart key	Read key learn status,Program key>Delete key,Reset EMS,Program PEPS,Program ESCL,Program EMS,
ALFA ROMEO	ALFA ROMEO \Select from vehicle\IMMO\159\Immobilizer	Key info.,Program key,Backup immo data,Make dealer key,

ALFA ROMEO \Select from vehicle\IMMO\Spider\Immobilizer	Key info.,Program key,Backup immo data,Make dealer key,
ALFA ROMEO \Select from vehicle\IMMO\Brera\Immobilizer	Key info.,Program key,Backup immo data,Make dealer key,
ALFA ROMEO \Select from vehicle\IMMO\147\Immobilizer	Read key count,Program key,Read remote count,Program remote,
ALFA ROMEO \Select from vehicle\IMMO\GT\Immobilizer	Read key count,Program key,Read remote count,Program remote,
ALFA ROMEO \Select from vehicle\IMMO\Mito\Immobilizer	Read key count,All key lost,Read PIN code,Make dealer key,
ALFA ROMEO \Select from type\Type 1	Key info.,Program key,Backup immo data,Make dealer key,
ALFA ROMEO \Select from type\Type 2	Read key count,Program key,Read remote count,Program remote,
ALFA ROMEO \Select from type\Type 3	Read key count,All key lost,Read PIN code,Make dealer key,
ALFA ROMEO \Select from type\Type 4	Key count,Immobilizer,Delete key,

	ALFA ROMEO\Select from vehicle\IMMO\Giulietta\2013-\Immobilize r	Read key count,All key lost,Read PIN code,Make dealer key,
	ALFA ROMEO\Select from vehicle\IMMO\Giulietta\2010-2012\Immo bilizer	Key count,Add key,Remote count,Program remote,
	ALFA ROMEO \Select from type\Type 5	Key count,Immobilizer,Delete key,
	ALFA ROMEO \Select from type\Type 6	Immobilizer,Delete key,
	ALFA ROMEO \Select from type\Type 7	Program key,Delete key,Obtain immo ID,
	ALFA ROMEO \Select from type\Type 8	Key info,Add key,
	ALFA ROMEO \Select from type\Type 9	Key count,Add key,Remote count,Program remote,
LANCIA	LANCIA\IMMO\Thesis\02-09\Immobilizer	Read key count,Program key,
	LANCIA\IMMO\Ypsilon\2003-2006\Immo bilizer	Read key count,Program key,
	LANCIA\IMMO\Phedra\2005-\Immobilize r	Program key,
	LANCIA\IMMO\Phedra\Type 1	Immobilizer,
	LANCIA\IMMO\Z\Type 1	Immobilizer,
	LANCIA\IMMO\Delta	Key count,Add key,Remote count,Program remote,

	LANCIA\IMMO\Musa	Key count,Add key,Remote count,Program remote,
	LANCIA\IMMO\Phedra\Type 2	Immobilizer,
	LANCIA\IMMO\Phedra\Type 3	Immobilizer,
	LANCIA\IMMO\Z\Type 2	Immobilizer,
	LANCIA\IMMO\Z\Type 3	Immobilizer,
	LANCIA\IMMO\Ypsilon\2013-Immobilizer	Key count,All key lost,Read PIN code,Make dealer key,
	LANCIA\IMMO\Ypsilon\2007-2012\Immobilizer	Key count,Add key,Remote count,Program remote,
MERCURY	MERCURY \Cougar\1999-2002\Immobilizer	Read key count,Program key,Delete key,
	MERCURY\Gr.Marqui\03-04\Immobilizer	Read key count,Program key,Delete key,
	MERCURY\Marauder\2003-2005\Immobilizer	Read key count,Program key,Delete key,
	MERCURY\Monterey\2004-2005\Immobilizer	Read key count,Program key,Delete key,
	MERCURY \M.Taineer[PCM]\01-04\Immobilizer	Read key count,Program key,Delete key,
	MERCURY\Sable\2000-2003\Immobilizer	Read key count,Program key,Delete key,

MERCURY\Gr.Marqui\2005-2010\Immobilizer	Read key count,Program key,Delete all keys,
MERCURY\Mariner\2005-2007\Immobilizer	Read key count,Program key,Delete all keys,
MERCURY\Montego\2005-2006\Immobilizer	Read key count,Program key,Delete all keys,
MERCURY\Monterey\2006-2007\Immobilizer	Read key count,Program key,Delete all keys,
MERCURY\M.Taineer\2004-2005\Immobilizer	Read key count,Program key,Delete all keys,
MERCURY\Sable\2004-2007\Immobilizer	Read key count,Program key,Delete all keys,
MERCURY\Mariner\2008-2009\Immobilizer	Read key count,Program key,Delete all keys,
MERCURY\Milan\2006-2009\Immobilizer	Read key count,Program key,Delete all keys,
MERCURY\M.Taineer\2006-2009\Immobilizer	Read key count,Program key,Delete all keys,
MERCURY\Montego\2007-\Immobilizer	Read key count,Program key,Delete all keys,
MERCURY\Sable\2008-\Immobilizer	Read key count,Program key,Delete all keys,

	MERCURY\Mariner\2010-\Immobilizer	Read key count,Program key,Delete key,
	MERCURY\Milan\2010-\Immobilizer	Read key count,Program key,Delete key,
	MERCURY\M.Taineer\2010-\Immobilizer	Read key count,Program key,Delete key,
VENUCIA	VENUCIA\VENUCIA\BCM	Release steering lock,Read BCM inner code,
	VENUCIA\VENUCIA\Immobilizer\Type 1(KWP)	Add key,
	VENUCIA\VENUCIA\Remote\Type 2 ( CAN )	Add key,
	VENUCIA\VENUCIA\Smart key	Program smart key,Replace engine ECU,
WEY	WEY\VV5\VV5c\2017\Keyless Entry(PEPS)	Immobilizer,Off line full system programming,Program PEPS,Program ESCL,Program engine ECU,Program T-box,
	WEY\VV5\VV5s\2017\Keyless Entry(PEPS)	Immobilizer,Off line full system programming,Program PEPS,Program ESCL,Program engine ECU,Program T-box,

	WEY\VV7\VV7c\2017\Kstar button-type PEPS	Program engine ECU,Program PEPS system,Program ESCL,Program smart key,All key lost,Program PEPS & EMS,T-Box after-sales strategy,
	WEY\VV7\VV7s\2017\Kstar button-type PEPS	Program engine ECU,Program PEPS system,Program ESCL,Program smart key,All key lost,Program PEPS & EMS,T-Box after-sales strategy,
	WEY\VV5 series\VV5c\2017-\Smart key	Program key after deleting,All key lost,Add key,
	WEY\VV5 series\VV5s\2017-\Smart key	Program key after deleting,All key lost,Add key,
	WEY\VV7 series\VV7c\2017-\Smart key	Program key after deleting,All key lost,Add key,
	WEY\VV7 series\VV7s\2017-\Smart key	Program key after deleting,All key lost,Add key,
SAAB	SAAB\9-7\2006-2008\Immobilizer	Lost all key,Read key count,
TRAUM	TRAUM\S70\Remote	Remote count,Program remote>Delete remote,

	TRAUM\S70\Smart key	Program full system,Program full system(w/o ESCL),Program PEPS controller,Learn ESCL,Learn EMS,Reset EMS,Smart key,Delete smart key,Set VIN code,Write TBOX SK,Check key status,
JAGUAR	JAGUAR>Select from vehicle\XF\2012\Smart key	Add smart key,All smart key lost,
	JAGUAR>Select from vehicle\S-Type\Immobilizer	All key lost,
	JAGUAR>Select from vehicle\XF-2012\Smart key	Delete smart key,Add smart key,
	JAGUAR>Select from vehicle\S-Type\Remote	Program remote,Delete remote,
	JAGUAR>Select from vehicle\X-TYPE\Immobilizer	All key lost,
	JAGUAR>Select from vehicle\SOVERIGN\Immobilizer	All key lost,
	JAGUAR>Select from vehicle\XJ6\2003-2007\Immobilizer	All key lost,



JAGUAR>Select from vehicle\XJ8\2003-2007\Immobilizer	All key lost,
JAGUAR>Select from vehicle\XJR\2004-\Immobilizer	All key lost,
JAGUAR>Select from vehicle\XK\2006-2014\Smart remote	Program remote,Remote count,
JAGUAR>Select from vehicle\XKR\2006-2014\Smart remote	Program remote,Remote count,
JAGUAR>Select from type\Immobilizer\Type 1	All key lost,
JAGUAR>Select from type\Smart key\Type 1	Delete smart key,Add smart key,
JAGUAR>Select from type\Smart key\Type 2	Add smart key,All smart key lost,
JAGUAR>Select from type\Remote\Type 1	Program remote,Remote count,
JAGUAR>Select from type\Remote\Type 2	Program remote>Delete remote,
JAGUAR>Select from vehicle\XF\2013-\Smart key	Add smart key,All smart key lost,
JAGUAR>Select from vehicle\XJ\Smart key	Add smart key,All smart key lost,

	JAGUAR>Select from vehicle\F-type\Smart key	Add smart key,All smart key lost,
	JAGUAR>Select from type\Smart key\Type 3	Add smart key,All smart key lost,
	JAGUAR>Select from type\Smart key\Type 4	Add smart key,All smart key lost,
	JAGUAR>Select from vehicle\New Jaguar(2015-)\Smart key\Type 1(FK72)	Add smart key,
	JAGUAR>Select from vehicle\New Jaguar(2015-)\Smart key\Type 2(HPLA)	Add smart key,
	JAGUAR>Select from vehicle\New Jaguar(2015-)\Smart key\Type 3(write to working key)	Write a workable key,Read key ID,
SUBARU	SUBARU>Select from type\Smart key\Type C	Add smart key,Delete smart key,Register smart ECM,Register engine EMC,Clear engine fault code,Program steering angle,Read pin code,

SUBARU>Select from type\Smart key\Type D(XV)	Add smart key,Delete smart key,Detect key count,Register smart ECM,Register engine EMC,Program remote starter,Generate key emulator,Bind key emulator,
SUBARU>Select from type\Immobilizer\Type 2(XV)	Add key,Delete key,Detect key count,ECM registration,Register engine EMC,Program remote,
SUBARU>Select from type\Remote\Type 1	Add remote,Clear remote,
SUBARU>Select from type\Remote\Type 2	Add remote,Type 3(to be deleted),
SUBARU>Select from type\Immobilizer\Type 6(4D 82G chip)	Check key count,Add key,All key lost,Delete key,Register dashboard ECU,Register engine ECU,Program remote,
SUBARU>Select from vehicle\Baja\2005-2007	All key lost,Delete key,

<p>SUBARU&gt;Select from vehicle\Crosstrek\2014-\Without smart</p>	<p>Check key count,Add key,All key lost&gt;Delete key,Register dashboard ECU,Register engine ECU,Program remote,</p>
<p>SUBARU&gt;Select from vehicle\Crosstrek\2014-\With smart</p>	<p>Add smart key&gt;Delete smart key,Detect key count,Register smart ECM,Register engine EMC,Program remote starter,Generate key emulator,Bind key emulator,</p>
<p>SUBARU&gt;Select from vehicle\Forester\2013 -\Without smart</p>	<p>Check key count,Add key,All key lost&gt;Delete key,Register dashboard ECU,Register engine ECU,Program remote,</p>
<p>SUBARU&gt;Select from vehicle\Forester\2013 -\With smart</p>	<p>Add smart key&gt;Delete smart key,Detect key count,Register smart ECM,Register engine EMC,Program remote starter,Generate key emulator,Bind key emulator,</p>

SUBARU>Select from vehicle\Impreza\Without smart\2012(4D 60/62 chip)	All key lost,Delete key,
SUBARU>Select from vehicle\Impreza\With smart\2013-	Add smart key,Delete smart key,Detect key count,Register smart ECM,Register engine EMC,Program remote starter,Generate key emulator,Bind key emulator,
SUBARU>Select from vehicle\Legay\Without smart\4D 60/62 chip	All key lost,Delete key,
SUBARU>Select from vehicle\Outback\Without smart\2005-2012	All key lost,Delete key,
SUBARU>Select from vehicle\Sti	All key lost,Delete key,
SUBARU>Select from vehicle\Tribeca\Without smart\Type 1	All key lost,Delete key,
SUBARU>Select from vehicle\XV\2013-\Without smart	Check key count,Add key,All key lost,Delete key,Register dashboard ECU,Register engine ECU,Program remote,

	<p>SUBARU&gt;Select from vehicle\XV\2013-\With smart</p>	<p>Add smart key,Delete smart key,Detect key count,Register smart ECM,Register engine EMC,Program remote starter,Generate key emulator,Bind key emulator,</p>
	<p>SUBARU&gt;Select from vehicle\XV Crosstrek\2013-Without smart</p>	<p>Check key count,Add key,All key lost,Delete key,Register dashboard ECU,Register engine ECU,Program remote,</p>
	<p>SUBARU&gt;Select from vehicle\XV Crosstrek\2013-With smart</p>	<p>Add smart key,Delete smart key,Detect key count,Register smart ECM,Register engine EMC,Program remote starter,Generate key emulator,Bind key emulator,</p>
	<p>SUBARU&gt;Select from vehicle\WRX\2013\Without smart\4D 60/62 chip</p>	<p>All key lost,Delete key,</p>

<p>SUBARU&gt;Select from vehicle\WRX\2014-\Without smart\4D 82G chip</p>	<p>Check key count,Add key,All key lost,Delete key,Register dashboard ECU,Register engine ECU,Program remote,</p>
<p>SUBARU&gt;Select from vehicle\WRX\2014-\With smart</p>	<p>Add smart key,Delete smart key,Detect key count,Register smart ECM,Register engine EMC,Program remote starter,Generate key emulator,Bind key emulator,</p>
<p>SUBARU&gt;Select from type\Immobilizer\Type 1</p>	<p>All key lost,Delete key,</p>
<p>SUBARU&gt;Select from type\Immobilizer\Type 3</p>	<p>Add key,Read PIN code,</p>
<p>SUBARU&gt;Select from type\Immobilizer\Type 4</p>	<p>Key count,Add key,</p>
<p>SUBARU&gt;Select from type\Immobilizer\Type 5</p>	<p>Key count,Add key,Delete key,Add remote,Delete remote,</p>
<p>SUBARU&gt;Select from type\Smart key\Type 3</p>	<p>Key count,Add key,Delete key,Add remote,Delete remote,</p>
<p>SUBARU&gt;Select from type\Smart key\Type 4</p>	<p>Key count,Add key,</p>

SUBARU>Select from type\Remote\Type 3	Add remote,
SUBARU>Select from type\Smart key\Type 5	Add smart key,Delete smart key,
SUBARU>Select from vehicle\B4\2009-	Add smart key,Delete smart key,Key count,Read PIN code,Clear engine fault code,
SUBARU>Select from vehicle\Brz\2013-2015\Without smart	Key count,Add key,Delete key,Add remote,Delete remote,
SUBARU>Select from vehicle\Brz\2013-2015\With smart	Add smart key,Delete smart key,
SUBARU>Select from vehicle\Impreza\With smart\2012	Add smart key,Delete smart key,Key count,Read PIN code,Clear engine fault code,
SUBARU>Select from vehicle\Legay\With smart	Add smart key,Delete smart key,Key count,Read PIN code,Clear engine fault code,



	SUBARU\Select from vehicle\Levorg\2015-With smart	Add smart key,Delete smart key,Detect key count,Register smart ECM,Register engine EMC,Program remote starter,Generate key emulator,Bind key emulator,
	SUBARU\Select from vehicle\Outback\Without smart\2013-	Add key,Read PIN code,
	SUBARU\Select from vehicle\Tribeca\Without smart\Type 2(North America)	Key count,Add key,Delete key,Add remote,Delete remote,
	SUBARU\Select from vehicle\Tribeca\With smart(North America)	Add smart key,Delete smart key,
BESTURN	BESTURN\IMMO\Old besturn(CAN)	Read key count,Add key,All key lost,
	BESTURN\IMMO\B30	All key lost,
	BESTURN\Smart key\B70	Program key,Program PEPS,
	BESTURN\Smart key\B90	Program key,Program PEPS,
	BESTURN\Smart key\X80	Program key,Program PEPS,
	BESTURN\Remote\New B70	Program remote,
	BESTURN\Remote\B90	Program remote,

	BESTURN\Remote\X80	Program remote,
	BESTURN\Remote\Oley	Automatic,Manual,
	BESTURN\IMMO\New besturn(B50)\- 2015	Key clear,Clear fault code,Program key,
	BESTURN\IMMO\New besturn(B70)	Key clear,Clear fault code,Program key,
	BESTURN\IMMO\B70(2013)	Key clear,Clear fault code,Program key,
	BESTURN\IMMO\X80(2013)	Key clear,Clear fault code,Program key,
	BESTURN\IMMO\B90(2013)	Key clear,Clear fault code,Program key,
	BESTURN\IMMO\Oley	Key clear,Clear fault code,Program key,
	BESTURN\IMMO\New besturn(B50)\2015 -	All key lost,
GMC	GMC\Savana\IMMO\2008-2013\Immobilizer	Lost all key,Read key count,
	GMC\Sierra\IMMO\2007-2013\Immobilizer	Lost all key,Read key count,
	GMC\Yukon\IMMO\2007-2013\Immobilizer	Lost all key,Read key count,

GMC\Canyon\IMMO\2008-2012\Immobilizer	All key lost,
GMC\Canyon\IMMO\2015\Immobilizer	All key lost,Add key,Read key count,Clear fault code,
GMC\Sierra\IMMO\2015\Immobilizer	All key lost,Add key,Read key count,Clear fault code,
GMC\Sierra\IMMO\2015\Smart key	Add smart key,All smart key lost,Read smart key count,
GMC\Sierra 1500\IMMO\2015\Immobilizer	All key lost,Add key,Read key count,Clear fault code,
GMC\Sierra 2500\IMMO\2014-\Immobilizer	All key lost,Add key,Read key count,Clear fault code,
GMC\Sierra 3500\IMMO\2014-\Immobilizer	All key lost,Add key,Read key count,Clear fault code,
GMC\Yukon\IMMO\2015\Immobilizer	All key lost,Add key,Read key count,Clear fault code,
GMC\Yukon\IMMO\2015\Smart key	Add smart key,All smart key lost,Read smart key count,
GMC\Terrain\2010-2013\Immobilizer	All key lost,Add key,Read key count,Clear fault code,
GMC\Acadia\Remote\2007-2014	Program remote>Delete remote,
GMC\Savana\Remote\2008-2013	Program remote>Delete remote,

	GMC\Yukon\Remote\2007-2013	Program remote,Delete remote,
	GMC\Sierra\Remote\2007-2013	Program remote,Delete remote,
	GMC\Yukon\Remote\2015	Add remote,Clear fault code,
	GMC\Sierra 1500\Remote\2014-2015	Add remote,Clear fault code,
	GMC\Sierra 2500\Remote\2014-	Add remote,Clear fault code,
	GMC\Sierra 3500\Remote\2014-	Add remote,Clear fault code,
YOUNG LOTUS	YOUNG LOTUS \IMMO system\Joint electronics IMMO system	Write immo VIN code,Write engine VIN code,Engine ECU detection,Reset engine ECU,Program engine ECU,Program whole system,Read key count,Clear fault code,Add key,Delete key,Immobilization,Reset immobiliser,Detect key,
	YOUNG LOTUS \IMMO system\Siemens IMMO system	Immobilization,Program engine,Reset engine,Reset immobiliser,Program key,Delete key,Reset PIN code,Clear fault code,
	YOUNG LOTUS \IMMO system\Orginal IMMO system	Clear fault code,Program key,Delete key,

PROTON	PROTON\Select from type\Type 2	Program key,Delete key,
	PROTON\Select from type\Type 4	Add key,Delete key,Odometer adjustment,Reset engine,Program,Program immobilizer,
	PROTON\Select from vehicle\Gen-2	Program key,Delete key,
	PROTON\Select from vehicle\Impian	Program key,Delete key,
	PROTON\Select from vehicle\Jump back\Type 2	Program key,Delete key,
	PROTON\Select from type\Type 1	Add key,Reset IMMO ECU,
	PROTON\Select from type\Type 3	Add key,Delete key,Key count,
	PROTON\Select from type\Type 5	Program key,Program remote,
	PROTON\Select from vehicle\Savvy	Add key,Reset IMMO ECU,
	PROTON\Select from vehicle\Jump back\Type 1	Add key,Reset IMMO ECU,
	PROTON\Select from type\Type 6	Add key,Delete key,Program remote,Key count,
	PROTON\Select from type\Type 7	Add one key,Add two keys,Program remote,Key count,
	PROTON\Select from type\Type 8	Add key,Delete key,Program remote,Key count,
	SATURN	SATURN\Aura\2006-2009\Immobilizer

	SATURN\Outlook\2006-2008\Immobilizer	Lost all key,Read key count,
	SATURN\Replay\2005-2007\Immobilizer	Lost all key,Read key count,
	SATURN\Sky\2008-2009\Immobilizer	Lost all key,Read key count,
	SATURN\Vue\2008-2009\Immobilizer	Lost all key,Read key count,
	SATURN\Astra\2008-2009\Immobilizer	All key lost,
MASERATI	MASERATI\Smart key-16\Smart key	Add smart key,Delete smart key,
	MASERATI\Flip key\Immobilizer	Program key,Backup immo data,Program remote,Make dealer key,Read PIN code(disable),Program remote(disable),
	MASERATI\Smart key-16\Read PIN code	Read pin code,
	MASERATI\Smart key 2016-\Smart key	Add smart key,Delete smart key,Backup immo data,Backup data(OBD),
AUDI	AUDI \A6L\2009 \Immobilizer	Backup immo data,Make dealer key,Learn key,Unlock key,
	AUDI \Q7\2009 \Immobilizer	Backup immo data,Make dealer key,Learn key,Unlock key,

AUDI \A6L\2009-\Immobilizer	Backup immo data,Make dealer key,Learn key,Unlock key,
AUDI \IMMO5\Immobilizer/Smart key	Backup immo data,Make dealer key,Learn key,Clear airbag fault code,
AUDI \Q7\2009-\Immobilizer	Backup immo data,Make dealer key,Learn key,Unlock key,
AUDI \A3/TT/R8-CDC32XX+24C32\Immobilizer	Backup EPROM,Reset EPROM,Backup immo data,Restore immo data,Make dealer key>Delete key,Add key,Reset odometer,Unlock key,
AUDI\Q3\2013\Immobilizer	Unlock key,Backup EPROM,Recover EPROM,Make dealer key,Learn key(OBD),Directly add key>Delete key,Reset dashboard,Odometer adjustment,Backup immo data,

	Audi\A1\Immobilizer	Backup EPROM,Reset EPROM,Make dealer key,Key learn(OBD),Directly add key>Delete key,Reset odometer,Odometer adjustment,Unlock key,
LINCOLN	LINCOLN\MKS\Smart key	Erase smart key,Add smart key,Read smart key count,
	LINCOLN\MKT\Smart key	Erase smart key,Add smart key,Read smart key count,
	LINCOLN\MKX\Smart key\2011-2015	Erase smart key,Add smart key,Read smart key count,
	LINCOLN\MKX\Smart key\2016-	Add smart key,All smart key lost,
	LINCOLN\MKS\Immobilizer	Program key,All key lost,Key count,
	LINCOLN\MKX\Immobilizer\Petrol\2007- 2010	Program key,All key lost,Key count,
	LINCOLN\MKX\Immobilizer\Petrol\2010- 2012	Program key,All key lost,Key count,
	LINCOLN\MKX\Immobilizer\Hybrid	Program key,All key lost,Key count,
HUMMER	HUMMER\H2\Immobilizer	Lost all key,Read key count,



	HUMMER\H2\Remote\Type 1	Program remote,Delete remote,
	HUMMER\H3\Immobilizer	Lost all key,Read key count,
	HUMMER\H2\Remote\Type 2\2008-2009	Program remote,Delete remote,
	HUMMER\H2\Remote programming method\2003-2007	Remote programming method,
	HUMMER\H2\Remote programming method\2008-2009	Remote programming method,
	HUMMER\H3\Remote	Program remote,
KIA	KIA\Select from vehicle\China\Optima(MSC)\2004-2014\I mmobilizer	Program key,ECM neutral mode,Read key count,
	KIA\Select from vehicle\China\Sportage(KMC)\2007-201 2\Immobilizer\Petrol 2.0\Type 2	Program key,ECM neutral mode,Read key count,
	KIA\Select from vehicle\China\Sportage(KMC)\2007-201 2\Immobilizer\Petrol 2.7 \Type 1	Program key,ECM neutral mode,Read key count,
	KIA\Select from vehicle\General area\Picanto(SA)\2006-2011\Immobilizer \Petrol	Program key,ECM neutral mode,Read key count,

KIA\Select from vehicle\General area\Cerato(LD)\2003-2006\Immobilizer	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General area\Carens(FJ)\2003-2005\Immobilizer	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General area\Carens(FJ)\2006-2007\Immobilizer\ Petrol	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General area\Carens(FJ)\2006-2007\Immobilizer\ Diesel\Type 2	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General area\Sportage(KM)\Diesel\Immobilizer\ iesel	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General area\Sportage(KM)\2006-2010\Immobiliz er\ Diesel\Type 2	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General area\Sportage(KM)\2006-2010\Immobiliz er\ Petrol\G 2.0\Type 1	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General area\Sportage(KM)\2006-2010\Immobiliz er\ Petrol\G 2.7\Type 1	Program key,ECM neutral mode,Read key count,

KIA\Select from vehicle\General area\Optima/Magentis(MG)\2006-2010\I mmobilizer\Type 1	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General area\Sorento(BL)\2002-2005\Immobilizer \Type 1	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General area\Sorento(BL)\2006-2009\Immobilizer \Type 1	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General area\Carnival/Sedona(GQ)\1998-2001\I mmobilizer	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\China\K3(YDC)\2012-\Immobiliz er	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\China\K3(YD)\2014-\Immobilizer	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General area\Carens/Rondo(RP)\2014-2016\Imm obilizer	Program key,ECM neutral mode,Read key count,

<p>KIA\Select from vehicle\General area\Sorento(UM)\2015-2016\Immobilizer</p>	<p>Program key,ECM neutral mode,Read key count,</p>
<p>KIA\Select from vehicle\General area\Clarus/Forte(TD)\2009-2013\Immobilizer</p>	<p>Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,</p>
<p>KIA\Select from vehicle\China\Sportage(KMC)\2007-2012\Immobilizer\Petrol 2.0\Type 1</p>	<p>Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,</p>
<p>KIA\Select from vehicle\China\Sportage R(SLC)\2010-2014\Immobilizer</p>	<p>Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,</p>
<p>KIA\Select from vehicle\China\K5(TFC)\2011-2012\Immobilizer</p>	<p>Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,</p>

<p>KIA&gt;Select from vehicle\China\K5(TFC)\2013-2016\Immo bilizer</p>	<p>Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,</p>
<p>KIA&gt;Select from vehicle\China\K2(QBC)\2011-\Immobiliz er\Type 1</p>	<p>Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,</p>
<p>KIA&gt;Select from vehicle\USA\Forte/Forte koup(TD)\2009-2013\Immobilizer</p>	<p>Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,</p>
<p>KIA&gt;Select from vehicle\General area\Carens(UN)\2007-2013\Immobilizer \Petrol</p>	<p>Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,</p>
<p>KIA&gt;Select from vehicle\General area\Carnival/Sedona(VQ)\2006-2014\I mmobilizer\Diesel\D 2.2 TCI-R</p>	<p>Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,</p>

<p>KIA\Select from vehicle\General area\Mohave/Borrego(HM)\2009-2016\I mmobilizer\Type 2</p>	<p>Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,</p>
<p>KIA\Select from vehicle\General area\Sorento(XM)\2009-2012\Immobilize r</p>	<p>Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,</p>
<p>KIA\Select from vehicle\General area\Sorento(XM)\2013-2015\Immobilize r</p>	<p>Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,</p>
<p>KIA\Select from vehicle\China\K5 HEV\2013-\Immobilizer</p>	<p>Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,</p>
<p>KIA\Select from vehicle\General area\Cadenza(VG)\2010-2012\Immobiliz er</p>	<p>Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,</p>

<p>KIA\Select from vehicle\General area\Cadenza(VG)\2013-2016\Immobilizer</p>	<p>Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,</p>
<p>KIA\Select from vehicle\USA\AMANTI(GH)\2007-2008\Immobilizer</p>	<p>Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,</p>
<p>KIA\Select from vehicle\General area\Clarus/Forte(TD)\2009-2013\Smart key</p>	<p>Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,PDM neutral mode,</p>
<p>KIA\Select from vehicle\General area\Soul(AM)\2011-2014\Smart key</p>	<p>Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,PDM neutral mode,</p>
<p>KIA\Select from vehicle\USA\Forte/Forte koup(TD)\2009-2013\Smart key</p>	<p>Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,PDM neutral mode,</p>
<p>KIA\Select from vehicle\General area\Sorento(XM)\2009-2012\Smart key</p>	<p>Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,PDM neutral mode,</p>

KIA\Select from vehicle\General area\Mohave/Borrego(HM)\2009-2016\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,PDM neutral mode,
KIA\Select from vehicle\General area\Cadenza(VG)\2010-2012\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,PDM neutral mode,
KIA\Select from vehicle\China\K5(TFC)\2011-2012\Smart key	Program smart key,ECM neutral mode,ESCL neutral mode,PDM neutral mode,SMK neutral mode,
KIA\Select from vehicle\China\K5 HEV\2013-\Smart key	Program smart key,ECM neutral mode,ESCL neutral mode,PDM neutral mode,SMK neutral mode,
KIA\Select from vehicle\China\Sportage(KMC)\2013-2015\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,PDM neutral mode,ESCL neutral mode,
KIA\Select from vehicle\China\K2(QBC)\2011-\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,PDM neutral mode,ESCL neutral mode,
KIA\Select from vehicle\General area\Sorento(XM)\2013-2015\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,PDM neutral mode,ESCL neutral mode,



KIA>Select from vehicle\China\K4(PFC)\2015-\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
KIA>Select from vehicle\China\K5(TFC)\2013-2016\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
KIA>Select from vehicle\China\K3(YDC)\2012-\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
KIA>Select from vehicle\China\K3(YD)\2014-\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
KIA>Select from vehicle\China\KX3(KC)\2015-\Smart key\Type 1	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
KIA>Select from vehicle\General area\Carens/Rondo(RP)\2014-2016\Sm art key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
KIA>Select from vehicle\General area\Sorento(UM)\2015-2016\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,

KIA\Select from vehicle\General area\Cadenza(VG)\2013-2016\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
KIA\Select from vehicle\China\KX3(KC)\2015-\Smart key\Type 2	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
KIA\Select from vehicle\China\Sportage(KMC)\2007-2012\Immobilizer\Diesel	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General area\Picanto(SA)\2006-2011\Immobilizer \Diesel	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General area\Rio(JB)\2005-2011\Immobilizer	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General area\Carens(FJ)\2006-2007\Immobilizer\ Diesel\Type 1	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General area\Carens(UN)\2007-2013\Immobilizer \Diesel\D 2.0 TDI-D	Program key,ECM neutral mode,Read key count,

KIA\Select from vehicle\General area\Sportage(KM)\2006-2010\Immobilizer\Diesel\Type 1	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General area\Optima/Magentis(MG)\2006-2010\Immobilizer\Type 2	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General area\Mohave/Borrego(HM)\2009-2016\Immobilizer\Type 1	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\China\Sportage(KMC)\2013-2015\Immobilizer\Type 1	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\China\Sportage(KMC)\2013-2015\Remote\Type 1	Program remote,
KIA\Select from vehicle\China\Sportage R(SLC)\2015-\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\China\Sportage R(SLC)\2015-\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,

KIA\Select from vehicle\China\Sportage R(SLC)\2010-2014\Smart key	Program smart key,ECM neutral mode,ESCL neutral mode,PDM neutral mode,SMK neutral mode,
KIA\Select from vehicle\China\K2(QBC)\2011-\Remote	Program remote,
KIA\Select from vehicle\China\K3(YD)\2014-\Remote	Program remote,
KIA\Select from vehicle\China\K3(YDC)\2012-\Remote\T ype 1	Program remote,
KIA\Select from vehicle\China\K5(TFC)\2013-2016\Remote	Program remote,
KIA\Select from vehicle\China\K5(TFC)\2011-2012\Remote	Program remote,
KIA\Select from vehicle\General area\Clarus/Forte(TD)\2009-2013\Remote	Program remote,
KIA\Select from vehicle\General area\Carens(UN)\2007-2013\Remote	Program remote,

KIA\Select from vehicle\General area\Soul(AM)\2011-2014\Remote	Program remote,
KIA\Select from vehicle\China\Optima(MSC)\2004-2014\Remote\Type 1	Program remote,
KIA\Select from type\Immobilizer\Type 3(K)	Program key,ECM neutral mode,Read key count,
KIA\Select from type\Immobilizer\Type 4(K)	Program key,ECM neutral mode,Read key count,
KIA\Select from type\Immobilizer\Type 5(K)	Program key,ECM neutral mode,Read key count,
KIA\Select from type\Immobilizer\Type 6(K)	Program key,ECM neutral mode,Read key count,
KIA\Select from type\Immobilizer\Type 1(CAN)	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from type\Immobilizer\Type 2(CAN)	Program key,ECM neutral mode,Read key count,
KIA\Select from type\Smart key\China\Type 1(with slot K)	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,PDM neutral mode,

KIA\Select from type\Smart key\China\Type 2(with slot K)	Program smart key,ECM neutral mode,ESCL neutral mode,PDM neutral mode,SMK neutral mode,
KIA\Select from type\Smart key\China\Type 4(without slot K)	Program smart key,ECM neutral mode,SMK neutral mode,PDM neutral mode,ESCL neutral mode,
KIA\Select from type\Smart key\China\Type 3(with slot K)	Program smart key,ECM neutral mode,SMK neutral mode,MSL neutral mode,
KIA\Select from type\Smart key\China\Type 5(without slot CAN)	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
KIA\Select from type\Smart key\China\Type 6(without slot CAN)	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
KIA\Select from type\Remote system\16 PIN\Type 1(K)	Program remote,
KIA\Select from type\Remote system\16 PIN\Type 2(CAN)	Program remote,
KIA\Select from type\Remote system\16 PIN>Type 3	Program remote,

KIA>Select from type\Remote system\16 PIN\Type 4	Program remote,
KIA>Select from type\Remote system\16 PIN\Type 5(K)	Program remote,
KIA>Select from vehicle\China\K2(QBC)\2011-\Immobiliz er\Type 2	Program key,ECM neutral mode,Read key count,
KIA>Select from vehicle\China\KX5(QLC)\2016-\Immobili zer	Program key,ECM neutral mode,Read key count,
KIA>Select from vehicle\China\KX7(QMC)\2017-\Immobili zer	Program key,ECM neutral mode,Read key count,
KIA>Select from vehicle\China\KX5(QLC)\2016-\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
KIA>Select from type\Remote system\10 PIN\Type 1	Program remote,
KIA>Select from type\Remote system\20 PIN\Type 1	Program remote,

KIA>Select from vehicle\China\Optima(MSC)\2004-2014\ Remote\Type 2	Program remote,
KIA>Select from vehicle\China\Sportage(KMC)\2007-201 2\Immobilizer\Petrol 2.7 \Type 2	Program key,ECM neutral mode,Read key count,
KIA>Select from vehicle\China\Sportage(KMC)\2013-201 5\Remote\Type 2	Program remote,
KIA>Select from vehicle\China\Sportage(KMC)\2013-201 5\Immobilizer\Type 2	Program key,ECM neutral mode,Read key count,
KIA>Select from vehicle\China\Sportage(KMC)\2013-201 5\Immobilizer\Type 3	Program key,ECM neutral mode,Read key count,
KIA>Select from vehicle\China\Sportage(KMC)\2007-201 2\Remote\Type 1	Program remote,
KIA>Select from vehicle\China\Sportage(KMC)\2007-201 2\Remote\Type 2	Program remote,



KIA\Select from vehicle\General area\Sportage(KM)\Diesel\Immobilizer\Pe trol\G 2.7	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General area\Sportage(KM)\Diesel\Immobilizer\Pe trol\G 2.0	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General area\Sportage(KM)\Diesel\Remote	Program remote,
KIA\Select from vehicle\General area\Sportage(KM)\2006-2010\Immobiliz er\Diesel\Type 3	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\General area\Sportage(KM)\2006-2010\Immobiliz er\Petrol\G 2.0\Type 2	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\General area\Sportage(KM)\2006-2010\Immobiliz er\Petrol\G 2.7\Type 2	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General area\Sportage(KM)\2006-2010\Remote	Program remote,

KIA\Select from vehicle\General area\Soul(AM)\2011-2014\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\China\K4(PFC)\2015-Immobilizer	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\China\K4(PFC)\2015-Remote	Program remote,
KIA\Select from vehicle\China\K3(YDC)\2012-Remote\T ype 2	Program remote,
KIA\Select from vehicle\USA\Forte/Forte koup(TD)\2009-2013\Remote	Program remote,
KIA\Select from vehicle\China\KX3(KC)\2015-Immobilizer	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\China\KX3(KC)\2015-Remote	Program remote,
KIA\Select from vehicle\China\KX5(QLC)\2016-Remote	Program remote,

KIA\Select from vehicle\China\KX7(QMC)\2017-\Remote	Program remote,
KIA\Select from vehicle\China\KX7(QMC)\2017-\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,PDM neutral mode,
KIA\Select from vehicle\General area\Picanto(SA)\2006-2011\Remote	Program remote,
KIA\Select from vehicle\General area\Picanto(SA)\2003-2005\Immobilizer	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General area\Picanto(SA)\2003-2005\Remote	Program remote,
KIA\Select from vehicle\General area\Rio(JB)\2005-2011\Remote	Program remote,
KIA\Select from vehicle\General area\Cerato(LD)\2003-2006\Remote	Program remote,
KIA\Select from vehicle\General area\Cerato(LD)\2007-2009\Immobilizer	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General area\Cerato(LD)\2007-2009\Remote	Program remote,
KIA\Select from vehicle\General area\Carens/Rondo(RP)\2014-2016\Re mote	Program remote,

KIA\Select from vehicle\General area\Carens(FJ)\2003-2005\Remote	Program remote,
KIA\Select from vehicle\General area\Carens(FJ)\2006-2007\Remote	Program remote,
KIA\Select from vehicle\General area\Carens(UN)\2007-2013\Immobilizer \Disele\D 1.6 TCI-U2	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\General area\Optima/Magentis(MG)\2006-2010\ mmobilizer\Type 3	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\General area\Optima/Magentis(MG)\2006-2010\ Remote	Program remote,
KIA\Select from vehicle\General area\Optima/Magentis(MG)\2006-2010\ mart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,PDM neutral mode,
KIA\Select from vehicle\General area\Carnival/Sedona(VQ)\2006-2014\ mmobilizer\Disele\D 2.9	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,

KIA\Select from vehicle\General area\Carnival\Sedona(VQ)\2006-2014\ mmobilizer\Diesel\D 2.9 WGT	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General area\Carnival\Sedona(VQ)\2006-2014\ mmobilizer\Petrol\Type 1	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General area\Carnival\Sedona(VQ)\2006-2014\ mmobilizer\Petrol\Type 2	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\General area\Carnival\Sedona(VQ)\2006-2014\ Remote	Program remote,
KIA\Select from vehicle\General area\Sorento(BL)\2002-2005\ Remote	Program remote,
KIA\Select from vehicle\General area\Sorento(BL)\2006-2009\ Immobilizer \Type 2	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General area\Sorento(BL)\2006-2009\ Remote	Program remote,
KIA\Select from vehicle\General area\Sorento(XM)\2009-2012\ Remote	Program remote,

KIA\Select from vehicle\General area\Sorento(XM)\2013-2015\Remote	Program remote,
KIA\Select from vehicle\General area\Sorento(UM)\2015-2016\Remote	Program remote,
KIA\Select from vehicle\General area\Mohave/Borrego(HM)\2009-2016\Remote	Program remote,
KIA\Select from vehicle\General area\Cadenza(VG)\2010-2012\Remote	Program remote,
KIA\Select from vehicle\General area\Cadenza(VG)\2013-2016\Remote	Program remote,
KIA\Select from vehicle\China\K5(JFC)\2015-2018\Immobilizer	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\China\K5(JFC)\2015-2018\Remote	Program remote,
KIA\Select from vehicle\China\K5(JFC)\2015-2018\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
KIA\Select from vehicle\China\K5 HEV(JFC HEV)\2016-2018\Immobilizer	Program key,ECM neutral mode,Read key count,

KIA\Select from vehicle\China\K5 HEV(JFC HEV)\2016-2018\Remote	Program remote,
KIA\Select from vehicle\China\K5 HEV(JFC HEV)\2016-2018\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
KIA\Select from vehicle\China\Sportage R(SLC)\2015-\Remote	Program remote,
KIA\Select from vehicle\China\Sportage R(SLC)\2010-2014\Remote	Program remote,
KIA\Select from vehicle\China\Forte(TDC)\2009-\Immobil izer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\China\Forte(TDC)\2009-\Remote	Program remote,
KIA\Select from vehicle\China\Forte(TDC)\2009-\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,PDM neutral mode,
KIA\Select from vehicle\China\Rio(LCC)\2004-2008\Rem ote	Program remote,

KIA>Select from vehicle\China\Rio(JBC)\2007-2014\Rem ote	Program remote,
KIA>Select from vehicle\China\Cerato(LDC)\2005-2017\R emote	Program remote,
KIA>Select from vehicle\China\Soul(AMC)\2012-2015\Im mobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA>Select from vehicle\China\Soul(AMC)\2012-2015\Re mote	Program remote,
KIA>Select from vehicle\China\Soul(AMC)\2012-2015\Sm art key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,PDM neutral mode,
KIA>Select from vehicle\China\Soul(AMC)\2010\Immobili zer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA>Select from vehicle\China\Soul(AMC)\2010\Remote	Program remote,



KIA\Select from vehicle\General area\Cadenza(YG)\2017\Immobilizer	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General area\Cadenza(YG)\2017\Remote	Program remote,
KIA\Select from vehicle\General area\Cadenza(YG)\2017\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
KIA\Select from vehicle\General area\Carnival/Sedona(GQ)\2002-2006\I mmobilizer\Type 1	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General area\Carnival/Sedona(GQ)\2002-2006\R emote	Program remote,
KIA\Select from vehicle\General area\Carnival/Sedona(YP)\2015-2016\Im mobilizer	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General area\Carnival/Sedona(YP)\2015-2016\R emote	Program remote,
KIA\Select from vehicle\General area\Carnival/Sedona(YP)\2015-2016\S mart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,

<p>KIA\Select from vehicle\General area\Cee'd(ED)\2006-2013\Immobilizer\ Type 1</p>	<p>Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,</p>
<p>KIA\Select from vehicle\General area\Cee'd(ED)\2006-2013\Immobilizer\ Type 2</p>	<p>Program key,ECM neutral mode,Read key count,</p>
<p>KIA\Select from vehicle\General area\Cee'd(ED)\2006-2013\Remote</p>	<p>Program remote,</p>
<p>KIA\Select from vehicle\General area\Cee'd(JD)\2013-2016\Immobilizer</p>	<p>Program key,ECM neutral mode,Read key count,</p>
<p>KIA\Select from vehicle\General area\Cee'd(JD)\2013-2016\Remote</p>	<p>Program remote,</p>
<p>KIA\Select from vehicle\General area\Cee'd(JD)\2013-2016\Smart key</p>	<p>Program smart key,ECM neutral mode,SMK neutral mode,PDM neutral mode,ESCL neutral mode,</p>
<p>KIA\Select from vehicle\General area\Clarus/Forte(YD)\2013-2017\Immo bilizer</p>	<p>Program key,ECM neutral mode,Read key count,</p>
<p>KIA\Select from vehicle\General area\Clarus/Forte(YD)\2013-2017\Remot e</p>	<p>Program remote,</p>

<p>KIA\Select from vehicle\General area\Clarus/Forte(YD)\2013-2017\Smart key</p>	<p>Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,</p>
<p>KIA\Select from vehicle\General area\K2500/K2700/K3000/K3000S(PU)\ 2013-2015\Immobilizer\D 2.9 IDI-J\Ttype 1</p>	<p>Program key,ECM neutral mode,Read key count,</p>
<p>KIA\Select from vehicle\General area\K2500/K2700/K3000/K3000S(PU)\ 2013-2015\Immobilizer\D 2.9 IDI-J\Ttype 2</p>	<p>Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,</p>
<p>KIA\Select from vehicle\General area\K2500/K2700/K3000/K3000S(PU)\ 2013-2015\Immobilizer\D 2.5 TCI-A2</p>	<p>Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,</p>
<p>KIA\Select from vehicle\General area\K2500/K2700/K3000/K3000S(PU)\ 2013-2015\Remote</p>	<p>Program remote,</p>
<p>KIA\Select from vehicle\General area\K2500/K2700/K3000/K3000S(PU)\ 2004-2012\Remote</p>	<p>Program remote,</p>

<p>KIA\Select from vehicle\General area\Mohave/Borrego(HM)\2017\Immobilizer\Type 1</p>	<p>Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,</p>
<p>KIA\Select from vehicle\General area\Mohave/Borrego(HM)\2017\Immobilizer\Type 2</p>	<p>Program key,ECM neutral mode,Read key count,</p>
<p>KIA\Select from vehicle\General area\Mohave/Borrego(HM)\2017\Remote</p>	<p>Program remote,</p>
<p>KIA\Select from vehicle\General area\Mohave/Borrego(HM)\2017\Smart key</p>	<p>Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,</p>
<p>KIA\Select from vehicle\General area\Opirus(GH)\2009-2010\Immobilizer\Type 1</p>	<p>Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,</p>
<p>KIA\Select from vehicle\General area\Opirus(GH)\2009-2010\Immobilizer\Type 2</p>	<p>Program key,ECM neutral mode,Read key count,</p>
<p>KIA\Select from vehicle\General area\Opirus(GH)\2009-2010\Remote</p>	<p>Program remote,</p>

<p>KIA\Select from vehicle\General area\Opirus(GH)\2009-2010\Smart key</p>	<p>Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,PDM neutral mode,</p>
<p>KIA\Select from vehicle\General area\Opirus(GH)\2007-2008\Immobilizer\ Type 1</p>	<p>Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,</p>
<p>KIA\Select from vehicle\General area\Opirus(GH)\2007-2008\Immobilizer\ Type 2</p>	<p>Program key,ECM neutral mode,Read key count,</p>
<p>KIA\Select from vehicle\General area\Opirus(GH)\2007-2008\Remote</p>	<p>Program remote,</p>
<p>KIA\Select from vehicle\General area\Optima HEV(JF HEV)\2016\Smart key</p>	<p>Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,</p>
<p>KIA\Select from vehicle\General area\Optima HEV(TF HEV)\2015\Smart key</p>	<p>Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,</p>
<p>KIA\Select from vehicle\General area\Optima HEV(TF HEV)\2013-2014\Immobilizer</p>	<p>Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,</p>

KIA\Select from vehicle\General area\Optima HEV(TF HEV)\2013-2014\Remote	Program remote,
KIA\Select from vehicle\General area\Optima HEV(TF HEV)\2013-2014\Smart key	Program smart key,ECM neutral mode,ESCL neutral mode,PDM neutral mode,SMK neutral mode,
KIA\Select from vehicle\General area\Optima(JF)\2016\Immobilizer	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General area\Optima(JF)\2016\Remote	Program remote,
KIA\Select from vehicle\General area\Optima(JF)\2016\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
KIA\Select from vehicle\General area\Optima(TF)\2014-2015\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\General area\Optima(TF)\2014-2015\Remote	Program remote,
KIA\Select from vehicle\General area\Optima(TF)\2014-2015\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,

KIA\Select from vehicle\General area\Optima(TF)\2011-2013\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\General area\Optima(TF)\2011-2013\Remote	Program remote,
KIA\Select from vehicle\General area\Optima(TF)\2011-2013\Smart key	Program smart key,ECM neutral mode,ESCL neutral mode,PDM neutral mode,SMK neutral mode,
KIA\Select from vehicle\General area\Optima/Magentis(MS)\2001-2002\Re mote	Program remote,
KIA\Select from vehicle\General area\Optima/Magentis(MS)\2003-2006\Re mote	Program remote,
KIA\Select from vehicle\General area\Picanto(TA)\2012-2017\Immobilizer	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General area\Picanto(TA)\2012-2017\Remote	Program remote,
KIA\Select from vehicle\General area\Picanto(TA)\2012-2017\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,PDM neutral mode,ESCL neutral mode,

KIA\Select from vehicle\General area\Pregio(FP)\2006\Immobilizer\Type 1	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General area\Quoris(KH)\2013-2017\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
KIA\Select from vehicle\General area\Rio(QBR)\2012-2017\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\General area\Rio(QBR)\2012-2017\Remote	Program remote,
KIA\Select from vehicle\General area\Rio(QBR)\2012-2017\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,PDM neutral mode,ESCL neutral mode,
KIA\Select from vehicle\General area\Rio(UB)\2012-2016\Immobilizer	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General area\Rio(UB)\2012-2016\Remote	Program remote,
KIA\Select from vehicle\General area\Rio(UB)\2012-2016\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,PDM neutral mode,ESCL neutral mode,



KIA\Select from vehicle\General area\Shuma/Spectra(SD)\2002\Immobilizer	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General area\Shuma/Spectra(SD)\2003-2004\Immobilizer	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General area\Shuma/Spectra(SD)\2003-2004\Remote	Program remote,
KIA\Select from vehicle\General area\Sorento(UMA)-Mexico\2016\Immobilizer	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General area\Sorento(UMA)-Mexico\2016\Remote	Program remote,
KIA\Select from vehicle\General area\Sorento(UMA)-Mexico\2016\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
KIA\Select from vehicle\General area\Soul EV(PS EV)\2015-2016\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,

KIA\Select from vehicle\General area\Soul(AM)\2009-2010\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\General area\Soul(AM)\2009-2010\Remote	Program remote,
KIA\Select from vehicle\General area\Soul(PS)\2013-2016\Immobilizer	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General area\Soul(PS)\2013-2016\Remote	Program remote,
KIA\Select from vehicle\General area\Soul(PS)\2013-2016\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
KIA\Select from vehicle\General area\Sportage(QL)\2016-2017\Immobiliz er	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General area\Sportage(QL)\2016-2017\Remote	Program remote,
KIA\Select from vehicle\General area\Sportage(QL)\2016-2017\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,

KIA\Select from vehicle\General area\Sportage(QLE)\2016-2017\Immobilizer	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General area\Sportage(QLE)\2016-2017\Remote	Program remote,
KIA\Select from vehicle\General area\Sportage(QLE)\2016-2017\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
KIA\Select from vehicle\General area\Sportage(SL)\2014-2016\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\General area\Sportage(SL)\2014-2016\Remote	Program remote,
KIA\Select from vehicle\General area\Sportage(SL)\2014-2016\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
KIA\Select from vehicle\General area\Sportage(SL)\2011-2013\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,

KIA\Select from vehicle\General area\Sportage(SL)\2011-2013\Remote	Program remote,
KIA\Select from vehicle\General area\Sportage(SL)\2011-2013\Smart key	Program smart key,ECM neutral mode,ESCL neutral mode,PDM neutral mode,SMK neutral mode,
KIA\Select from vehicle\General area\Sportage(SLE)\2014-2016\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\General area\Sportage(SLE)\2014-2016\Remote	Program remote,
KIA\Select from vehicle\General area\Sportage(SLE)\2014-2016\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
KIA\Select from vehicle\General area\Sportage(SLE)\2011-2013\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\General area\Sportage(SLE)\2011-2013\Remote	Program remote,

KIA\Select from vehicle\General area\Sportage(SLE)\2011-2013\Smart key	Program smart key,ECM neutral mode,ESCL neutral mode,PDM neutral mode,SMK neutral mode,
KIA\Select from vehicle\General area\Venga(YN)\2013-2015\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\General area\Venga(YN)\2013-2015\Remote	Program remote,
KIA\Select from vehicle\General area\Venga(YN)\2013-2015\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,PDM neutral mode,ESCL neutral mode,
KIA\Select from vehicle\General area\Venga(YN)\2010-2012\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\General area\Venga(YN)\2010-2012\Remote	Program remote,
KIA\Select from vehicle\General area\Venga(YN)\2010-2012\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,PDM neutral mode,

<p>KIA&gt;Select from vehicle\USA\AMANTI(GH)\2009\Immobilizer</p>	<p>Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,</p>
<p>KIA&gt;Select from vehicle\USA\AMANTI(GH)\2009\Smart key</p>	<p>Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,PDM neutral mode,</p>
<p>KIA&gt;Select from vehicle\USA\Borrego(HM)\2009-2011\Immobilizer</p>	<p>Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,</p>
<p>KIA&gt;Select from vehicle\USA\Borrego(HM)\2009-2011\Remote</p>	<p>Program remote,</p>
<p>KIA&gt;Select from vehicle\USA\Borrego(HM)\2009-2011\Smart key</p>	<p>Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,PDM neutral mode,</p>
<p>KIA&gt;Select from vehicle\USA\Cadenza(VG)\2014-2016\Immobilizer</p>	<p>Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,</p>

KIA>Select from vehicle\USA\Cadenza(VG)\2014-2016\Re mote	Program remote,
KIA>Select from vehicle\USA\Cadenza(VG)\2014-2016\Sm art key	Smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
KIA>Select from vehicle\USA\Forte(YD)\2014-2016\Immo bilizer	Program key,ECM neutral mode,Read key count,
KIA>Select from vehicle\USA\Forte(YD)\2014-2016\Remo te	Program remote,
KIA>Select from vehicle\USA\Forte(YD)\2014-2016\Smart key	Smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
KIA>Select from vehicle\USA\K900(KH)\2015-2017\Smart key	Smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
KIA>Select from vehicle\USA\Optima hybrid(TFHEV)\2014-2016\Smart key	Smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,

KIA\Select from vehicle\USA\Optima hybrid(TFHEV)\2013\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\USA\Optima hybrid(TFHEV)\2013\Remote	Program remote,
KIA\Select from vehicle\USA\Optima hybrid(TFHEV)\2013\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,PDM neutral mode,
KIA\Select from vehicle\USA\Optima hybrid(TFHEV)\2011-2012\Remote	Program remote,
KIA\Select from vehicle\USA\Optima(JF)\2016\Immobilizer	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\USA\Optima(JF)\2016\Remote	Program remote,
KIA\Select from vehicle\USA\Optima(JF)\2016\Smart key	Smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
KIA\Select from vehicle\USA\Optima(JFA)\2016\Immobilizer	Program key,ECM neutral mode,Read key count,



KIA\Select from vehicle\USA\Optima(JFA)\2016\Remote	Program remote,
KIA\Select from vehicle\USA\Optima(JFA)\2016\Smart key	Smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
KIA\Select from vehicle\USA\Optima(MG)\2010\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\USA\Optima(MG)\2010\Smart key\With ESCL	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,PDM neutral mode,
KIA\Select from vehicle\USA\Optima(MG)\2010\Smart key\Without ESCL	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,PDM neutral mode,
KIA\Select from vehicle\USA\Optima(MG)\2010\Remote	Program remote,
KIA\Select from vehicle\USA\Optima(MG)\2009\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,

KIA>Select from vehicle\USA\Optima(MG)\2009\Remote	Program remote,
KIA>Select from vehicle\USA\Optima(MG)\2007-2008\Immobilizer\Type 1	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA>Select from vehicle\USA\Optima(MG)\2007-2008\Immobilizer\Type 2	Program key,ECM neutral mode,Read key count,
KIA>Select from vehicle\USA\Optima(MG)\2007-2008\Remote	Program remote,
KIA>Select from vehicle\USA\Optima(MG)\2006\Immobilizer	Program key,ECM neutral mode,Read key count,
KIA>Select from vehicle\USA\Optima(MG)\2006\Remote	Program remote,
KIA>Select from vehicle\USA\OPTIMA(MS)\2003-2006\Remote	Program remote,

<p>KIA&gt;Select from vehicle\USA\OPTIMA(MS)\2001-2002\Remote</p>	<p>Program remote,</p>
<p>KIA&gt;Select from vehicle\USA\Optima(TF/QF)\2014-2015\Immobilizer</p>	<p>Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,</p>
<p>KIA&gt;Select from vehicle\USA\Optima(TF/QF)\2014-2015\Remote</p>	<p>Program remote,</p>
<p>KIA&gt;Select from vehicle\USA\Optima(TF/QF)\2014-2015\Smart key</p>	<p>Smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,</p>
<p>KIA&gt;Select from vehicle\USA\Optima(TF/QF)\2011-2013\Immobilizer</p>	<p>Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,</p>
<p>KIA&gt;Select from vehicle\USA\Optima(TF/QF)\2011-2013\Remote</p>	<p>Program remote,</p>

<p>KIA\Select from vehicle\USA\Optima(TF/QF)\2011-2013\ Smart key</p>	<p>Program smart key,ECM neutral mode,ESCL neutral mode,PDM neutral mode,SMK neutral mode,</p>
<p>KIA\Select from vehicle\USA\RIO(BC)\2003-2005\Remot e</p>	<p>Program remote,</p>
<p>KIA\Select from vehicle\USA\RIO(JB)\2006-2012\Remot e</p>	<p>Program remote,</p>
<p>KIA\Select from vehicle\USA\Rio(UB)\2012-2017\Immobil izer</p>	<p>Program key,ECM neutral mode,Read key count,</p>
<p>KIA\Select from vehicle\USA\Rio(UB)\2012-2017\Remote</p>	<p>Program remote,</p>
<p>KIA\Select from vehicle\USA\Rio(UB)\2012-2017\Smart key</p>	<p>Program smart key,ECM neutral mode,SMK neutral mode,PDM neutral mode,ESCL neutral mode,</p>
<p>KIA\Select from vehicle\USA\Rondo(UN)\2007-2010\Imm obilizer</p>	<p>Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,</p>

<p>KIA&gt;Select from vehicle\USA\Rondo(UN)\2007-2010\Re mote</p>	<p>Program remote,</p>
<p>KIA&gt;Select from vehicle\USA\Sedona(VQ)\2007-2014\Im mobilizer</p>	<p>Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,</p>
<p>KIA&gt;Select from vehicle\USA\Sedona(VQ)\2006\Immobili zer</p>	<p>Program key,ECM neutral mode,Read key count,</p>
<p>KIA&gt;Select from vehicle\USA\Sedona(YP)\2015-2016\Im mobilizer</p>	<p>Program key,ECM neutral mode,Read key count,</p>
<p>KIA&gt;Select from vehicle\USA\Sedona(YP)\2015-2016\Re mote</p>	<p>Program remote,</p>
<p>KIA&gt;Select from vehicle\USA\Sedona(YP)\2015-2016\Sm art key</p>	<p>Smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,</p>

<p>KIA&gt;Select from vehicle\USA\Sorento(BL)\2007-2009\Im mobilizer</p>	<p>Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,</p>
<p>KIA&gt;Select from vehicle\USA\Sorento(BL)\2007-2009\Re mote</p>	<p>Program remote,</p>
<p>KIA&gt;Select from vehicle\USA\Sorento(BL)\2003-2006\Re mote</p>	<p>Program remote,</p>
<p>KIA&gt;Select from vehicle\USA\Sorento(UMA)\2016-2017\I mmobilizer</p>	<p>Program key,ECM neutral mode,Read key count,</p>
<p>KIA&gt;Select from vehicle\USA\Sorento(UMA)\2016-2017\ Remote</p>	<p>Program remote,</p>
<p>KIA&gt;Select from vehicle\USA\Sorento(UMA)\2016-2017\ mart key</p>	<p>Smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,</p>

<p>KIA&gt;Select from vehicle\USA\Sorento(XM)\2014-2015\Im mobilizer</p>	<p>Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,</p>
<p>KIA&gt;Select from vehicle\USA\Sorento(XM)\2014-2015\Re mote</p>	<p>Program remote,</p>
<p>KIA&gt;Select from vehicle\USA\Sorento(XM)\2014-2015\S mart key</p>	<p>Program smart key,ECM neutral mode,SMK neutral mode,PDM neutral mode,ESCL neutral mode,</p>
<p>KIA&gt;Select from vehicle\USA\Sorento(XM)\2011-2013\Im mobilizer</p>	<p>Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,</p>
<p>KIA&gt;Select from vehicle\USA\Sorento(XM)\2011-2013\Re mote</p>	<p>Program remote,</p>
<p>KIA&gt;Select from vehicle\USA\Sorento(XM)\2011-2013\S mart key</p>	<p>Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,PDM neutral mode,</p>

KIA\Select from vehicle\USA\Soul EV(PS EV)\2015-2016\Smart key	Smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
KIA\Select from vehicle\USA\Soul(AM)\2011-2013\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\USA\Soul(AM)\2011-2013\Remote	Program remote,
KIA\Select from vehicle\USA\Soul(AM)\2011-2013\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,PDM neutral mode,
KIA\Select from vehicle\USA\Soul(AM)\2010\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\USA\Soul(AM)\2010\Remote	Program remote,
KIA\Select from vehicle\USA\Soul(PS)\2014-2016\Immobilizer	Program key,ECM neutral mode,Read key count,



<p>KIA&gt;Select from vehicle\USA\Soul(PS)\2014-2016\Remote</p>	<p>Program remote,</p>
<p>KIA&gt;Select from vehicle\USA\Soul(PS)\2014-2016\Smart key</p>	<p>Smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,</p>
<p>KIA&gt;Select from vehicle\USA\Spectra(LD)\2007-2009\Immobilizer</p>	<p>Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,</p>
<p>KIA&gt;Select from vehicle\USA\Spectra(LD)\2007-2009\Remote</p>	<p>Program remote,</p>
<p>KIA&gt;Select from vehicle\USA\Spectra(LD)\2004-2006\Remote</p>	<p>Program remote,</p>
<p>KIA&gt;Select from vehicle\USA\Sportage(KM)\2007-2010\Immobilizer</p>	<p>Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,</p>

KIA>Select from vehicle\USA\Sportage(KM)\2007-2010\R emote	Program remote,
KIA>Select from vehicle\USA\Sportage(KM)\2005-2006\R emote	Program remote,
KIA>Select from vehicle\USA\Sportage(QL)\2017\Immobil izer	Program key,ECM neutral mode,Read key count,
KIA>Select from vehicle\USA\Sportage(QL)\2017\Remote	Program remote,
KIA>Select from vehicle\USA\Sportage(SL)\2014-2016\Im mobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA>Select from vehicle\USA\Sportage(SL)\2014-2016\R emote	Program remote,
KIA>Select from vehicle\USA\Sportage(SL)\2014-2016\S mart key	Smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,

KIA\Select from vehicle\USA\Sportage(SL)\2011-2013\Im mobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\USA\Sportage(SL)\2011-2013\R emote	Program remote,
KIA\Select from vehicle\USA\Sportage(SL)\2011-2013\S mart key	Program smart key,ECM neutral mode,ESCL neutral mode,PDM neutral mode,SMK neutral mode,
KIA\Select from type\Immobilizer\Type 7(K)	Immobilizer,ECM neutral mode,Read key count,
KIA\Select from type\Immobilizer\Type 8(CAN)	Immobilizer,neutral mode,
KIA\Select from type\Immobilizer\Type 9(CAN)	Immobilizer,neutral mode,
KIA\Select from type\Smart key\General area\Type 1(with slot K)	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,PDM neutral mode,
KIA\Select from type\Smart key\General area\Type 2(with slot K)	Program smart key,ECM neutral mode,ESCL neutral mode,PDM neutral mode,SMK neutral mode,

KIA\Select from type\Smart key\General area\Type 3(without slot CAN)	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
KIA\Select from type\Smart key\General area\Type 4(without slot K)	Program smart key,ECM neutral mode,SMK neutral mode,PDM neutral mode,ESCL neutral mode,
KIA\Select from type\Smart key\USA\Type 1(with slot K)	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,PDM neutral mode,
KIA\Select from type\Smart key\USA\Type 2(with slot K)	Program smart key,ECM neutral mode,ESCL neutral mode,PDM neutral mode,SMK neutral mode,
KIA\Select from type\Smart key\USA\Type 3(without slot CAN)	Smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
KIA\Select from type\Smart key\USA\Type 4(without slot K)	Program smart key,ECM neutral mode,SMK neutral mode,PDM neutral mode,ESCL neutral mode,
KIA\Select from type\Remote system\16 PIN\Type 6(K)	Program remote,

	KIA\Select from vehicle\USA\Sportage(QL)\2017\Smart key	Smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
	KIA\Read PIN code	46 smart card,8A smart card,47 smart card,46 chip,PIN code calculator(-2007),
LEXUS	LEXUS\Select from vehicle\IS300\Smart key	Smart key registration,Delete smart key,Reset immobox,
	LEXUS\Select from vehicle\GS300\2006-2007\Smart key\Type 1	Smart key registration,Delete smart key,Reset immobox,
	LEXUS\All smart key lost\All key lost	Backup EEPROM,Make key emulator,Bind key emulator,Add smart key,Delete smart key,
	LEXUS\Select from vehicle\CT200H\2010\Smart key	Add smart key,Delete smart key,Reset PEPS,Reset PEPS & program key,Synch ID authentication box with steering lock,Start remote control engine,
	LEXUS\Select from vehicle\ES300\2002-2003\Mechanical key	Add master key,Add valet key,Delete key,Clear fault code,

LEXUS\Select from vehicle\ES300\2002-2003\Remote programming method	Remote programming method,
LEXUS\Select from vehicle\ES300H\2012-2015\Smart key	Add smart key,Delete smart key,Reset PEPS,Reset PEPS & program key,Synch ID authentication box with steering lock,Start remote control engine,
LEXUS\Select from vehicle\ES330\2003-2006\Mechanical key	Add key,Delete key,All key lost,Reset immo ECU,Program engine ECU,
LEXUS\Select from vehicle\GS300\1998-2001\Remote	Program remote,Delete remote,
LEXUS\Select from vehicle\GS300\2002-2005\Mechanical key\IMMO	Add master key,Add valet key,Delete key,Clear fault code,
LEXUS\Select from vehicle\GS300\2002-2005\Mechanical key\Remote	Program remote,Delete remote,

<p>LEXUS\Select from vehicle\GS300\2006-2007\Smart key\Type 2</p>	<p>Add smart key,Delete smart key,Reset PEPS,Reset PEPS &amp; program key,Synch ID authentication box with steering lock,Start remote control engine,</p>
<p>LEXUS\Select from vehicle\GS350\2006-2008\Smart key\Type 1</p>	<p>Add smart key,Delete smart key,Reset PEPS,Reset PEPS &amp; program key,Synch ID authentication box with steering lock,Start remote control engine,</p>
<p>LEXUS\Select from vehicle\GS350\2006-2008\Smart key\Type 2</p>	<p>Smart key registration,Delete smart key,Reset immobox,</p>
<p>LEXUS\Select from vehicle\GS350\2009-\Smart key</p>	<p>Add smart key,Delete smart key,Reset PEPS,Reset PEPS &amp; program key,Synch ID authentication box with steering lock,Start remote control engine,</p>
<p>LEXUS\Select from vehicle\GS430\2001-2005\Mechanical key\IMMO</p>	<p>Add master key,Add valet key,Delete key,Clear fault code,</p>

<p>LEXUS\Select from vehicle\GS430\2001-2005\Mechanical key\Remote</p>	<p>Program remote,Delete remote,</p>
<p>LEXUS\Select from vehicle\GS430\2005-2006\Smart key</p>	<p>Smart key registration,Delete smart key,Reset immobox,</p>
<p>LEXUS\Select from vehicle\GS430\2006-2010\Smart key</p>	<p>Add smart key,Delete smart key,Reset PEPS,Reset PEPS &amp; program key,Synch ID authentication box with steering lock,Start remote control engine,</p>
<p>LEXUS\Select from vehicle\GS450H\2007-2011\Smart key</p>	<p>Add smart key,Delete smart key,Reset PEPS,Reset PEPS &amp; program key,Synch ID authentication box with steering lock,Start remote control engine,</p>
<p>LEXUS\Select from vehicle\GS450H\2008-2011\Smart key</p>	<p>Add smart key,Delete smart key,Reset PEPS,Reset PEPS &amp; program key,Synch ID authentication box with steering lock,Start remote control engine,</p>



<p>LEXUS\Select from vehicle\GS460\2008-2011\Smart key</p>	<p>Add smart key,Delete smart key,Reset PEPS,Reset PEPS &amp; program key,Synch ID authentication box with steering lock,Start remote control engine,</p>
<p>LEXUS\Select from vehicle\GX460\2003-2009\Mechanical key</p>	<p>Add key,Delete key,All key lost,Reset immo ECU,Program engine ECU,</p>
<p>LEXUS\Select from vehicle\GX460\2010-2013\Smart key</p>	<p>Add smart key,Delete smart key,Reset PEPS,Reset PEPS &amp; program key,Synch ID authentication box with steering lock,Start remote control engine,</p>
<p>LEXUS\Select from vehicle\GX470\2003-2009\Mechanical key</p>	<p>Add key,Delete key,All key lost,Reset immo ECU,Program engine ECU,</p>
<p>LEXUS\Select from vehicle\GX470\2003-2009\Remote</p>	<p>Program remote,Delete remote,</p>
<p>LEXUS\Select from vehicle\GX470\2003-2009\Remote programming method</p>	<p>Remote programming method,</p>

<p>LEXUS\Select from vehicle\HS250H\2008-2012\Smart key</p>	<p>Add smart key,Delete smart key,Reset PEPS,Reset PEPS &amp; program key,Synch ID authentication box with steering lock,Start remote control engine,</p>
<p>LEXUS\Select from vehicle\IS200\Mechanical key\Remote programming method</p>	<p>Remote programming method,</p>
<p>LEXUS\Select from vehicle\IS250\2006-2009\Smart key</p>	<p>Smart key registration,Delete smart key,Reset immobox,</p>
<p>LEXUS\Select from vehicle\IS250\2010-2011\Smart key</p>	<p>Add smart key,Delete smart key,Reset PEPS,Reset PEPS &amp; program key,Synch ID authentication box with steering lock,Start remote control engine,</p>
<p>LEXUS\Select from vehicle\IS250\2012-2013\Smart key</p>	<p>Add smart key,Delete smart key,Reset PEPS,Reset PEPS &amp; program key,Synch ID authentication box with steering lock,Start remote control engine,</p>

<p>LEXUS\Select from vehicle\IS250\2014-\Smart key</p>	<p>Add smart key,Delete smart key,Reset PEPS,Reset PEPS &amp; program key,Synch ID authentication box with steering lock,Start remote control engine,</p>
<p>LEXUS\Select from vehicle\IS250C\2009-2015\Smart key</p>	<p>Add smart key,Delete smart key,Reset PEPS,Reset PEPS &amp; program key,Synch ID authentication box with steering lock,Start remote control engine,</p>
<p>LEXUS\Select from vehicle\IS300\Mechanical key \2000-2005\IMMO</p>	<p>Add master key,Add valet key,Delete key,Clear fault code,</p>
<p>LEXUS\Select from vehicle\IS300\Mechanical key \2000-2005\Remote</p>	<p>Program remote,Delete remote,</p>
<p>LEXUS\Select from vehicle\IS350\2006-2013\Smart key</p>	<p>Smart key registration,Delete smart key,Reset immobox,</p>

<p>LEXUS\Select from vehicle\LS250\2014-2015\Smart key</p>	<p>Add smart key,Delete smart key,Reset PEPS,Reset PEPS &amp; program key,Synch ID authentication box with steering lock,Start remote control engine,</p>
<p>LEXUS\Select from vehicle\LS400\1998-2000\Mechanical key\Remote</p>	<p>Program remote,Delete remote,</p>
<p>LEXUS\Select from vehicle\LS430\2001-2003\Mechanical key\IMMO</p>	<p>Add master key,Add valet key,Delete key,Clear fault code,</p>
<p>LEXUS\Select from vehicle\LS430\2001-2003\Mechanical key\Remote</p>	<p>Program remote,Delete remote,</p>
<p>LEXUS\Select from vehicle\LS430\2001-2003\Mechanical key\Remote programming method</p>	<p>Remote programming method,</p>
<p>LEXUS\Select from vehicle\LS430\2004-2006\Mechanical key\IMMO</p>	<p>Add key,Delete key,All key lost,Reset immo ECU,Program engine ECU,</p>

LEXUS\Select from vehicle\LS430\2004-2006\Mechanical key\Remote	Program remote,Delete remote,
LEXUS\Select from vehicle\LS430\2004-2006\Mechanical key\Remote programming method	Remote programming method,
LEXUS\Select from vehicle\LS430\2004-2006\Smart key	Smart key registration,Delete smart key,Reset immobox,
LEXUS\Select from vehicle\LS460\2007-2012\Smart key	Add smart key,Delete smart key,Reset PEPS,Reset PEPS & program key,Synch ID authentication box with steering lock,Start remote control engine,
LEXUS\Select from vehicle\LS460\2013-\Smart key	Add smart key,Delete smart key,Reset PEPS,Reset PEPS & program key,Synch ID authentication box with steering lock,Start remote control engine,
LEXUS\Select from vehicle\LS460H\2007-2008\Mechanical key\Remote programming method	Remote programming method,

<p>LEXUS\Select from vehicle\LS460H\2007-2008\Smart key</p>	<p>Add smart key,Delete smart key,Reset PEPS,Reset PEPS &amp; program key,Synch ID authentication box with steering lock,Start remote control engine,</p>
<p>LEXUS\Select from vehicle\LS460H\2008-Mechanical key\Remote programming method</p>	<p>Remote programming method,</p>
<p>LEXUS\Select from vehicle\LX470\2001-2002\Mechanical key</p>	<p>Add master key,Add valet key,Delete key,Clear fault code,</p>
<p>LEXUS\Select from vehicle\LX470\2003-2007\Mechanical key\IMMO</p>	<p>Add key,Delete key,All key lost,Reset immo ECU,Program engine ECU,</p>
<p>LEXUS\Select from vehicle\LX470\2003-2007\Mechanical key\Remote</p>	<p>Program remote,Delete remote,</p>
<p>LEXUS\Select from vehicle\LX470\2003-2007\Mechanical key\Remote programming method</p>	<p>Remote programming method,</p>

<p>LEXUS\Select from vehicle\LX570\2008-2010\Smart key</p>	<p>Add smart key,Delete smart key,Reset PEPS,Reset PEPS &amp; program key,Synch ID authentication box with steering lock,Start remote control engine,</p>
<p>LEXUS\Select from vehicle\RX300\1999-2003\Mechanical key\Remote</p>	<p>Program remote,Delete remote,</p>
<p>LEXUS\Select from vehicle\RX300\2003-2005\Mechanical key\IMMO</p>	<p>Add key,Delete key,All key lost,Reset immo ECU,Program engine ECU,</p>
<p>LEXUS\Select from vehicle\RX300\2003-2005\Mechanical key\Remote</p>	<p>Program remote,Delete remote,</p>
<p>LEXUS\Select from vehicle\RX300\2003-2005\Mechanical key\Remote programming method</p>	<p>Remote programming method,</p>
<p>LEXUS\Select from vehicle\RX330\2004-2006\Mechanical key\IMMO</p>	<p>Add key,Delete key,All key lost,Reset immo ECU,Program engine ECU,</p>

LEXUS>Select from vehicle\RX330\2004-2006\Mechanical key\Remote	Program remote,Delete remote,
LEXUS>Select from vehicle\RX330\2004-2006\Mechanical key\Remote programming method	Remote programming method,
LEXUS>Select from vehicle\RX350\2007-2009\Mechanical key\IMMO	Add key,Delete key,All key lost,Reset immo ECU,Program engine ECU,
LEXUS>Select from vehicle\RX350\2007-2009\Mechanical key\Remote	Program remote,Delete remote,
LEXUS>Select from vehicle\RX350\2007-2009\Mechanical key\Remote programming method	Remote programming method,
LEXUS>Select from vehicle\RX350\2010-2013\Smart key	Add smart key,Delete smart key,Reset PEPS,Reset PEPS & program key,Synch ID authentication box with steering lock,Start remote control engine,



<p>LEXUS\Select from vehicle\RX400H\2005-2009\Mechanical key\IMMO</p>	<p>Add key,Delete key,All key lost,Reset immo ECU,Program engine ECU,</p>
<p>LEXUS\Select from vehicle\RX400H\2005-2009\Mechanical key\Remote</p>	<p>Program remote,Delete remote,</p>
<p>LEXUS\Select from vehicle\RX400H\2005-2009\Mechanical key\Remote programming method</p>	<p>Remote programming method,</p>
<p>LEXUS\Select from vehicle\RX450H\2010-2011\Smart key</p>	<p>Add smart key,Delete smart key,Reset PEPS,Reset PEPS &amp; program key,Synch ID authentication box with steering lock,Start remote control engine,</p>
<p>LEXUS\Select from vehicle\RX450H\2012\Smart key</p>	<p>Add smart key,Delete smart key,Reset PEPS,Reset PEPS &amp; program key,Synch ID authentication box with steering lock,Start remote control engine,</p>
<p>LEXUS\Select from vehicle\SC430\2002-2010\Mechanical key\IMMO</p>	<p>Add key,Delete key,All key lost,Reset immo ECU,Program engine ECU,</p>

LEXUS\Select from vehicle\SC430\2002-2010\Mechanical key\Remote	Program remote,Delete remote,
LEXUS\Select from vehicle\SC430\2002-2010\Mechanical key\Remote programming method	Remote programming method,
LEXUS\Select from type\IMMO\Type 1	Add master key,Add valet key,Delete key,Clear fault code,
LEXUS\Select from type\IMMO\Type 2	Add key,Delete key,All key lost,Reset immo ECU,Program engine ECU,
LEXUS\Select from type\Remote	Program remote,Delete remote,
LEXUS\Select from type\Smart key \Type 1	Add smart key,Delete smart key,Reset PEPS,Reset PEPS & program key,Synch ID authentication box with steering lock,Start remote control engine,
LEXUS\Select from type\Smart key \Type 2	Smart key registration,Delete smart key,Reset immobox,
LEXUS\Select from vehicle\ES240\Smart key	Add smart key,Delete smart key,

	LEXUS\Select from vehicle\CT200H\2012-\Smart key	Add smart key,Delete smart key,
	LEXUS\Select from vehicle\ES250\2012-\Smart key	Add smart key,Delete smart key,
	LEXUS\Select from vehicle\ES350\Smart key	Add smart key,Delete smart key,
	LEXUS\Select from vehicle\RX270\Smart key	Add smart key,Delete smart key,
	LEXUS\Select from vehicle\ES200\Smart key	Add smart key,Delete smart key,
OPEL	OPEL\IMMO\Select from type\Type 2	Clear fault code,Program key,Delete key,ECU immobilization,Program engine ECU,Reset immo ECU,Reset engine ECU,Open anti-theft light,Read PIN code,
	OPEL\IMMO\Select from vehicle\Agila	Clear fault code,Program key,Delete key,ECU immobilization,Program engine ECU,Reset immo ECU,Reset engine ECU,Open anti-theft light,Read PIN code,

	<p>OPEL\IMMO&gt;Select from vehicle\Astra\Astra-G</p>	<p>Clear fault code,Program key,Delete key,ECU immobilization,Program engine ECU,Reset immo ECU,Reset engine ECU,Open anti-theft light,Read PIN code,</p>
	<p>OPEL\IMMO&gt;Select from vehicle\Calibra</p>	<p>Clear fault code,Program key,Delete key,ECU immobilization,Program engine ECU,Reset immo ECU,Reset engine ECU,Open anti-theft light,Read PIN code,</p>
	<p>OPEL\IMMO&gt;Select from vehicle\Combo</p>	<p>Clear fault code,Program key,Delete key,ECU immobilization,Program engine ECU,Reset immo ECU,Reset engine ECU,Open anti-theft light,Read PIN code,</p>

	<p>OPEL\IMMO&gt;Select from vehicle\Corsa\Corsa-B</p>	<p>Clear fault code,Program key,Delete key,ECU immobilization,Program engine ECU,Reset immo ECU,Reset engine ECU,Open anti-theft light,Read PIN code,</p>
	<p>OPEL\IMMO&gt;Select from vehicle\Corsa\Corsa-C</p>	<p>Clear fault code,Program key,Delete key,ECU immobilization,Program engine ECU,Reset immo ECU,Reset engine ECU,Open anti-theft light,Read PIN code,</p>
	<p>OPEL\IMMO&gt;Select from vehicle\Meriva\Meriva</p>	<p>Clear fault code,Program key,Delete key,ECU immobilization,Program engine ECU,Reset immo ECU,Reset engine ECU,Open anti-theft light,Read PIN code,</p>

<p>OPEL\IMMO&gt;Select from vehicle\Movano</p>	<p>Clear fault code,Program key,Delete key,ECU immobilization,Program engine ECU,Reset immo ECU,Reset engine ECU,Open anti-theft light,Read PIN code,</p>
<p>OPEL\IMMO&gt;Select from vehicle\Omega-B\Immobilizer\Type 1(KWP)</p>	<p>Clear fault code,Program key,Delete key,ECU immobilization,Program engine ECU,Reset immo ECU,Reset engine ECU,Open anti-theft light,Read PIN code,</p>
<p>OPEL\IMMO&gt;Select from vehicle\Sintra</p>	<p>Clear fault code,Program key,Delete key,ECU immobilization,Program engine ECU,Reset immo ECU,Reset engine ECU,Open anti-theft light,Read PIN code,</p>

OPEL\IMMO>Select from vehicle\Tigra-B	Clear fault code,Program key,Delete key,ECU immobilization,Program engine ECU,Reset immo ECU,Reset engine ECU,Open anti-theft light,Read PIN code,
OPEL\IMMO>Select from vehicle\Vectra-B	Clear fault code,Program key,Delete key,ECU immobilization,Program engine ECU,Reset immo ECU,Reset engine ECU,Open anti-theft light,Read PIN code,
OPEL\IMMO>Select from vehicle\Zafira\Zafira-B	Clear fault code,Program key,Delete key,ECU immobilization,Program engine ECU,Reset immo ECU,Reset engine ECU,Open anti-theft light,Read PIN code,
OPEL\IMMO>Select from type\Type 3	Program key,Delete key,
OPEL\Remote system\Astra-H	Delete remote,Program remote,
OPEL\Remote system\Zafira-B	Delete remote,Program remote,
OPEL\Remote system\Vectra-C/Signum	Delete remote,Program remote,

OPEL\Read PIN code	Read pin code type2(via BCM),Read pin code type6,Read pin code type7,Read pin code type3,Switch ignition on,Read pin code type1,Read pin code type4,Read pin code type5,
OPEL\IMMO>Select from type\Type 1\Smart key	Read PIN code,All smart key lost,Add smart key,Read key count,Clear fault code,
OPEL\IMMO>Select from vehicle\Insignia\2009-2016\Smart key	Read PIN code,All smart key lost,Add smart key,Read key count,Clear fault code,
OPEL\IMMO>Select from type\Type 1\Immobilizer	Read PIN code,All key lost,Add key,Read key count,Clear fault code,
OPEL\IMMO>Select from vehicle\Insignia\2009-2016\Immobilizer	Read PIN code,All key lost,Add key,Read key count,Clear fault code,
OPEL\IMMO>Select from vehicle\Astra\Astra-H\Immobilizer	Program key,Delete key,Read PIN code,
OPEL\IMMO>Select from type\Type 4	Read key count,Program key,



OPEL\IMMO>Select from vehicle\Agila B\2009	Read key count,Program key,
OPEL\IMMO>Select from type\Type 5	Read key count,Program key,
OPEL\IMMO>Select from vehicle\Agila B\2009-	Read key count,Program key,
OPEL\Remote system\Corsa-D	Delete remote,Program remote,
OPEL\IMMO>Select from vehicle\Astra\Astra-H\Smart key\Program key	Immobilizer,Delete key,Key count,
OPEL\IMMO>Select from vehicle\Astra\Astra-H\Smart key\All key lost	All key lost,
OPEL\IMMO>Select from vehicle\Astra\Astra\2007\Smart key	Learn smart key,Delete all smart keys,
OPEL\Remote system\Astra\07	Program remote,Delete remote,
OPEL\Remote system\Antara	Program remote,Delete remote,
OPEL\IMMO>Select from vehicle\Antara	All key lost,
OPEL\IMMO>Select from vehicle\Omega-B\Immobilizer\Type 2(CAN)	Read PIN code,All key lost,Add key,Read key count,Clear fault code,
OPEL\IMMO>Select from vehicle\Omega-B\Smart key	Add smart key,All smart key lost,Read smart key count,

OPEL\IMMO>Select from type\Type 6	All key lost,
OPEL\IMMO>Select from vehicle\Astra\Astra-J\2010-2016\Smart key	Read PIN code,All smart key lost,Add smart key,Read key count,Clear fault code,
OPEL\IMMO>Select from vehicle\Astra\Astra-J\2010-2016\Immobilizer	Read PIN code,All key lost,Add key,Read key count,Clear fault code,
OPEL\IMMO>Select from vehicle\Zafira\Zafira-C\2012-2016\Smart key	Read PIN code,All smart key lost,Add smart key,Read key count,Clear fault code,
OPEL\IMMO>Select from vehicle\Zafira\Zafira-C\2012-2016\Immobilizer	Read PIN code,All key lost,Add key,Read key count,Clear fault code,
OPEL\IMMO>Select from vehicle\Meriva\Meriva-B\Immobilizer	Add key,Delete key,Read PIN code,
OPEL\IMMO>Select from vehicle\Corsa\Corsa-D\Immobilizer	Add key,Delete key,Read PIN code,
OPEL\IMMO>Select from vehicle\Mokka\2012-2018\Smart key	Read PIN code,All smart key lost,Add smart key,Read key count,Clear fault code,

	OPEL\IMMO>Select from vehicle\Mokka\2012-2018\Immobilizer	Read PIN code,All key lost,Add key,Read key count,Clear fault code,
	OPEL\Remote system\Meriva	Program remote,Delete remote,
	OPEL\IMMO>Select from vehicle\Signum\2003-2007	Program key,Delete key,Read PIN code,
	OPEL\IMMO>Select from vehicle\Vivaro(4A)\2014 -	Read PIN code,Program key,Recover backup data,
VOLKSWA GEN	VOLKSWAGEN\Touareg\2003-2007\Im mobilizer	Read PIN code,Learn key,
	VW\Phaeton\2008-Immobilizer	Read PIN code,Learn key,Read pin code,
	VW\IMMO2 & IMMO3 \Read PIN code	Dashboard,Immo box,Engine,Dashboard(CANBUS), Touareg 3.0 Diesel,
	VW\IMMO2 & IMMO3 \Immobilizer	Immob box,Dashboard,Dashboard(CAN),I mmobilizer(CAN),10 Jetta,
	VW\Remote \2015 POLO\Program remote	Program remote,
	VW\Remote \Program remote	Add remote,Delete remote,

VOLKSWAGEN\Touareg\2008-2011\Im mobilizer	Read PIN code,Learn key,Read pin code,
VOLKSWAGEN\Phaeton\2003-2007\Im mobilizer	Read PIN code,Learn key,
VW\Remote \ Central door lock(1281)	Add remote,Delete remote,
VW\Remote \Central module(1281)	Add remote,Delete remote,
VW\IMMO 3.5\Read PIN code	Dashboard,Immobiliser,Engine,
VW\IMMO 3.5\Immobilizer	Immobiliser,Dashboard,
VW\IMMO 3.5\Remote	Add remote,Delete remote,
VW\IMMO4\NEC 24C32\Immobilizer	Backup EEPROM,Recover EEPROM,Read immo data,Make dealer key,Directly add key,Delete key,Learn key,Unlock key,Clear airbag fault code,
VW\IMMO4\NEC 95320\Immobilizer	Backup EEPROM,Recover EEPROM,Read immo data,Make dealer key,Directly add key,Delete key,Learn key,Unlock key,Clear airbag fault code,

<p>VW\IMMO4\2013 NEC 24C64\Immobilizer</p>	<p>Backup EEPROM,Recover EEPROM,Read immo data,Make dealer key,Directly add key,Delete key,Learn key,Unlock key,Clear airbag fault code,</p>
<p>VW\IMMO5\Immobilizer/ Smart key</p>	<p>Backup immo data,Make dealer key,Learn key,Clear airbag fault code,</p>
<p>VW\IMMO4\NEC 24C64\Immobilizer</p>	<p>Backup EEPROM,Recover EEPROM,Read immo data,Make dealer key,Directly add key,Delete key,Learn key,Unlock key,Clear airbag fault code,</p>
<p>VW\IMMO4\2013 NEC+24C64 color screen\Immobilizer</p>	<p>Backup EEPROM,Recover EEPROM,Read immo data,Make dealer key,Delete key,Directly add key,Learn key,Unlock key,Clear airbag fault code,</p>

VWIMMO4\9S12XHZ512\Immobilizer	Backup EEPROM,Recover EEPROM,Read immo data,Make dealer key,Directly add key>Delete key,Learn key,Unlock key,Clear airbag fault code,
VWIMMO4\CDC+24C32\Immobilizer	Read immo data,Make dealer key,Directly add key>Delete key,Learn key,Backup EEPROM,Recover EEPROM,Unlock key,Clear airbag fault code,
VWIMMO4\Identify IMMO\Identify IMMO4	Identify immo4 type,
VWIMMO4\2012 NEC+24C64 color screen\Immobilizer	Backup EEPROM,Recover EEPROM,Read immo data,Make dealer key,Directly add key>Delete key,Learn key,Unlock key,Clear airbag fault code,
VWIMMO4\NEC35XX\Immobilizer	Backup EEPROM,Recover EEPROM,Read immo data,Make dealer key,Directly add key>Delete key,Learn key,Unlock key,

<p>VWIMMO4\NEC95320(Bora Jetta)\Immobilizer</p>	<p>Backup EPROM,Reset EPROM,Backup immo data,Restore immo data,Make dealer key,Make OEM key,Key learn(OBD),Directly add key,Reset odometer,Odometer adjustment&gt;Delete key,Unlock key,</p>
<p>VOLKSWAGEN\IMMO4\Magotan/CC\Im mobilizer</p>	<p>Make dealer key,Learn key,</p>
<p>VOLKSWAGEN\IMMO4\NE24C64(2014 -)\Immobilizer</p>	<p>Make dealer key,Learn key(OBD),Backup EPROM,Recover EPROM&gt;Delete key,Directly add key,Reset dashboard,Odometer adjustment,Unlock key,Backup immo data,</p>
<p>VX\IMMO4\MQB-35XX(Mainland/VDO)\I mmobilizer</p>	<p>Backup EEPROM,Recover EEPROM,Backup immo data,Recover immo data,Make dealer key,Program key(OBD),Add key&gt;Delete key,Recover dashboard,</p>

PORSCHE	PORSCHE\Cayenne\2010\Immobilizer	Program key,
	PORSCHE\Cayenne\2010\Read PIN code	Read engine pin code,
	PORSCHE\Cayenne\Cayenne 2010\Smart key	Program smart key,Make dealer key,
	PORSCHE\Macan\Macan\Smart key	Program smart key,Make dealer key,
	PORSCHE\Macan\Macan S\Smart key	Program smart key,Make dealer key,
	PORSCHE\Macan\Macan Turbo\Smart key	Program smart key,Make dealer key,
	PORSCHE\Cayenne\Cayenne GTS 2010\Smart key	Program smart key,Make dealer key,
	PORSCHE\New 911\Carrera S\Smart key	Program smart key,Make dealer key,
	PORSCHE\New 911\Carrera Targa 4\Smart key	Program smart key,Make dealer key,
	PORSCHE\New 911\Turbo\Smart key	Program smart key,Make dealer key,
	PORSCHE\New 718\Cayman\Smart key	Program smart key,Make dealer key,



	PORSCHE\New 718\Boxster\Smart key	Program smart key,Make dealer key,
	PORSCHE\New 718\Boxster S\Smart key	Program smart key,Make dealer key,
	PORSCHE\Panamera\Panamera\Smart key	Program smart key,Make dealer key,
	PORSCHE\Panamera\Panamera 4\Smart key	Program smart key,Make dealer key,
	PORSCHE\Panamera\Panamera S\Smart key	Program smart key,Make dealer key,
	PORSCHE\Cayman\2005-2011\Immobilizer	Immobilizer,
	PORSCHE\Boxter\2005-2011\Immobilizer	Immobilizer,
	PORSCHE\997\2005-2010\Immobilizer	Immobilizer,
	PORSCHE\911\2005-2010\Immobilizer	Immobilizer,
SKODA	SKODA\IMMO2 & IMMO3\Read PIN code	Dashboard,Immo box,Engine,Dashboard(CANBUS), Touareg 3.0 Diesel,
	SKODA\IMMO2 & IMMO3\Immobilizer	Immob box,Dashboard,Dashboard(CAN),I mmobilizer(CAN),10 Jetta,

SKODA\Remote\Polo (2015)\Remote	Program remote,
SKODA\Remote\Remote	Add remote,Delete remote,
SKODA\Remote\Central door lock (1281)	Add remote,Delete remote,
SKODA\Remote\Central module (1281)	Add remote,Delete remote,
SKODA\IMMO 3.5\Read PIN code	Dashboard,Immobiliser,Engine,
SKODA\IMMO 3.5\Immobilizer	Immobiliser,Dashboard,
SKODA\IMMO 3.5\Remote	Add remote,Delete remote,
SKODA\IMMO 4\NEC 24C32\Immobilizer	Backup EEPROM,Recover EEPROM,Read immo data,Make dealer key,Directly add key,Delete key,Learn key,Unlock key,Clear airbag fault code,
SKODA\IMMO 4\NEC 95320\Immobilizer	Backup EEPROM,Recover EEPROM,Read immo data,Make dealer key,Directly add key,Delete key,Learn key,Unlock key,Clear airbag fault code,

<p>SKODA\IMMO 4\NEC 24C64 (2013)\Immobilizer</p>	<p>Backup EEPROM,Recover EEPROM,Read immo data,Make dealer key,Directly add key,Delete key,Learn key,Unlock key,Clear airbag fault code,</p>
<p>SKODA\IMMO 5\Smart key</p>	<p>Backup immo data,Make dealer key,Learn key,Clear airbag fault code,</p>
<p>SKODA\IMMO 4\NEC 24C64\Immobilizer</p>	<p>Backup EEPROM,Recover EEPROM,Read immo data,Make dealer key,Directly add key,Delete key,Learn key,Unlock key,Clear airbag fault code,</p>
<p>SKODA\IMMO 4\NEC+24C64 (2013)\Immobilizer</p>	<p>Backup EEPROM,Recover EEPROM,Read immo data,Make dealer key,Delete key,Directly add key,Learn key,Unlock key,Clear airbag fault code,</p>

<p>SKODA\IMMO 4\9S12XHZ512\Immobilizer</p>	<p>Backup EEPROM,Recover EEPROM,Read immo data,Make dealer key,Directly add key,Delete key,Learn key,Unlock key,Clear airbag fault code,</p>
<p>SKODA\IMMO 4\CDC+24C32\Immobilizer</p>	<p>Read immo data,Make dealer key,Directly add key,Delete key,Learn key,Backup EEPROM,Recover EEPROM,Unlock key,Clear airbag fault code,</p>
<p>SKODA\IMMO 4\Identify IMMO type\IMMO 4</p>	<p>Identify immo4 type,</p>
<p>SKODA\IMMO 4\NEC+24C64 (2012)\Immobilizer</p>	<p>Backup EEPROM,Recover EEPROM,Read immo data,Make dealer key,Directly add key,Delete key,Learn key,Unlock key,Clear airbag fault code,</p>
<p>SKODA\IMMO 4\NEC35XX\Immobilizer</p>	<p>Backup EEPROM,Recover EEPROM,Read immo data,Make dealer key,Directly add key,Delete key,Learn key,Unlock key,</p>

<p>SKODA\IMMO 4\NEC95320 (Bora Jetta)\Immobilizer</p>	<p>Backup EPROM,Reset EPROM,Backup immo data,Restore immo data,Make dealer key,Make OEM key,Key learn(OBD),Directly add key,Reset odometer,Odometer adjustment,Delete key,Unlock key,</p>
<p>SKODA\IMMO 4\Magotan/CC\Immobilizer</p>	<p>Make dealer key,Learn key,</p>
<p>SKODA\IMMO 4\NEC24C64 (2014-)\Immobilizer</p>	<p>Make dealer key,Learn key(OBD),Backup EPROM,Recover EPROM,Delete key,Directly add key,Reset dashboard,Odometer adjustment,Unlock key,Backup immo data,</p>
<p>SKODA\IMMO 4\MQB-35XX (Mainland/VDO)\Immobilizer</p>	<p>Backup EEPROM,Recover EEPROM,Backup immo data,Recover immo data,Make dealer key,Program key(OBD),Add key,Delete key,Recover dashboard,</p>

	BMW\Select from type\CAS2/CAS3	<p>Program key,Synch ELV,Synch DEM,Update CAS3,Backup &amp; recover,Clear fault code,Clear SHADOW,Force to recover CAS,Make key with EPROM data,Disable and enable,Reset CAS mileage(disable),CAS3 emulator(disable),</p>
BMW	BMW\Select from type\CAS4/CAS4+	<p>Make ignition key,Disable key,Enable key,</p>
	BMW\Select from type\FEM/BDC	<p>Preprocess FEM/BDC system,Make dealer key&gt;Delete key,Identify vehicle frequency,Switch ignition on,Reset FEM/BDC mileage,Read key info,Enable key,Disable key,Read ECU info(disable),Read ISN code(disable),Delete transport mode(disable),</p>

FERRARI	FERRARI\458\Immobilizer	Backup immo data,Make dealer key,Read PIN code(disable),Program key,Program remote(disable),Program remote,
	FERRARI\F12\Immobilizer	Backup immo data,Make dealer key,Read PIN code(disable),Program key,Program remote(disable),Program remote,
	FERRARI\F149\Immobilizer	Backup immo data,Make dealer key,Read PIN code(disable),Program key,Program remote(disable),Program remote,
PERODUA	PERODUA \GDH Reset immobiliser	Immobiliser Reset,
	PERODUA \A Key Reset immobiliser	Immobiliser Reset,
	PERODUA \DH reset immobiliser	Immobiliser Reset,
	PERODUA\Bezza\Smart key	Add smart key,Delete smart key,All smart key lost,
	PERODUA \New Myvi\Smart key	Add smart key,Delete smart key,All smart key lost,

	PERODUA \New Axia\Smart key	Add smart key,Delete smart key,All smart key lost,
ROLLS-ROYCE	ROLLS-ROYCE\Select from type\Wraith	Make ignition key,Disable key,Enable key,
	ROLLS-ROYCE\Select from type\Ghost	Make ignition key,Disable key,Enable key,
	ROLLS-ROYCE\Select from vehicle\Phantom	Program key,Disable and enable,Make key with EPROM data,Backup & recover,Sync DME,Sync ELV,Clear fault code,Clear SHADOW,
OLDSMOBILE	OLDSMOBILE\Aurora\Immobilizer	All key lost,
	OLDSMOBILE\Silhouette\Immobilizer	All key lost,
PONTIAC	PONTIAC\Aztec\Immobilizer	All key lost,
	PONTIAC\Bonneville\Immobilizer	All key lost,
	PONTIAC\G3\Immobilizer	Lost all key,Read key count,
	PONTIAC\G5\Immobilizer	Lost all key,Read key count,
	PONTIAC\G6\Immobilizer	Lost all key,Read key count,
	PONTIAC\G8\Immobilizer	Lost all key,Read key count,
	PONTIAC\Grand Prix\Immobilizer	All key lost,
	PONTIAC\Montana\Immobilizer	All key lost,
	PONTIAC\Pursult\Immobilizer	Lost all key,Read key count,



	PONTIAC\Solstice\Immobilizer	Lost all key,Read key count,
	PONTIAC\Torrent\Immobilizer\2007-2009	Lost all key,Read key count,
DACIA	DACIA\Dokker\2012-	Add key,
	DACIA\Duster\2010-2011	Add key,
	DACIA\Logan\2004-2011	Add key,
	DACIA\Sandero\2007-2011	Add key,
	DACIA\Sandero stepway\2006-2011	Add key,